

## Operating and maintenance instructions

### BLÜCHER® EuroPipe - stainless steel drainage pipework system



#### Comprising:

---

Push-fit drainage pipes and fittings OD40 - OD250 mm in stainless steel AISI 316L or AISI 304 for installation in buildings and below ground (OD110 - OD250 mm) an onboard ships, in gravity and vacuum systems. Pipes and fittings have socket with pre-fitted sealing ring, standard in EPDM rubber, alternatively in NBR or FPM.

#### Accessories and spare parts:

---

Sealing rings: EPDM, NBR, FPM

Other accessories/parts: Pipe hangers, pipe joint clamps

Product details available in the products database at [www.blucher.com](http://www.blucher.com)

#### For the owner/user:

---

BLÜCHER® EuroPipe drainage pipework system in stainless steel AISI 316L, alternatively AISI 304 has been installed. The drainage pipework system has been approved in accordance with international standards as to flow capacity and self-cleansing.

#### Prior to starting use:

---

- Check that the installations toilets, hand wash basins, etc. have been connected correctly.
- Check that access pipes have been securely closed and fastened.
- Check that traps have been installed.
- Check that venting is correct.

#### Normal operation:

---

BLÜCHER® EuroPipe stainless steel drainage pipework system is essentially maintenance free. Under normal circumstances the silver-matt smooth surface will not corrode in common bathrooms etc. However, in certain industrial applications it may be necessary to carry out some cleaning and maintenance.

#### Technical data:

---

Product catalogues and products database available at [www.blucher.com](http://www.blucher.com)



KEEPING UP THE FLOW