
	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 3 24 25 26 27 28 30 31 32 33 3 34 5 36	G3A CERMIC VALVE 93 IBV HEAD 68 LARCE PITE WASHER 46 LARCE PITE WASHER 46 LOW NUT 32 O RING 48 NONE SHUT OFF HEAD 78 O RING 48 NONE SHUT OFF HEAD 78 O RING 48 ADJUSTING SCREW 56 1700 HALF CARTRIDGE 32 O RING 168 SPRING (LARGE) 35 PLASTIC DISTRIBUTOR 32 PLASTIC PISTON 32 PLASTIC PISTON 36 O RING 48 O RING	// /// ///
20 21 21 18 10 10 10 10 10 10 10 10 10 10		_8_7_6_5 00000000000000000000000000000000000	

Exploded view drawing & parts list

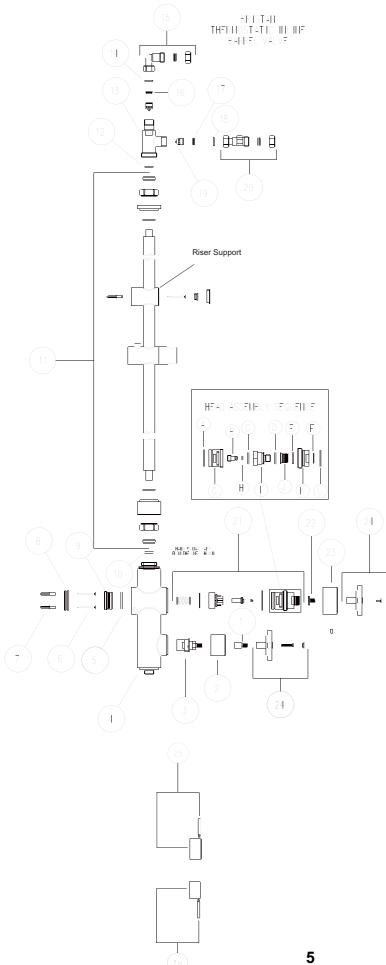

QT TLSHX C / PM TLSHX C VALVE PARTS LIST			
No.	DESCRIPTION	PART No.	
1	FLOW SPLINE ADAPTOR	240445	
2	FLOWSHROUD	780498ECP	
3	1/4 TURN VALVE	930030	
4	INLINE BODY	100200CP	
5	O-RING	480028	
6	WOODSCREWS	560609	
7	WALLPLUGS	760024	
8	WALL PLATE	220051	
9	BACKCAP	560514	
10	ORING	480113	
11	INLINE KIT	KIT IBV-CP-2	
12	ORING	480113	
13	MANIFOLD ASSY.	780468	
14	FILTER	780321	
15	ISOLATION ELBOW	780494FC	
16	FLOW LIM ITER 6Ltr/M	MR01-GA-6	
17	FLOW LIM ITER 10Ltr/M	MR01-GA-10	
18	FILTER	780321	
19	CHECK VALVE	970010	
20	ISOLATION STRAIGHT	780493FC	
21	HEAD ASSY.(SPARE)	SK1400-4	
22	TEMP.SPLINE ADAPTOR	240444	
23	TEMP SHROUD	780499CP-S	
24	QUADRANT HANDLE ASSY	780955CP	
25	PRISM TEMP. HANDLE	780419CP-S	
	PRISM TEMP.LEVER	780434CP	
26	PRISM FLOWHANDLE	780418ECP	
	PRISM FLOW LEVER	780433CP	
А	ORING	480028	
В	ADJUSTING SCREW	560552	
С	ORING	480212	
D	O RING	480118	
E	PTFE WASHER	460181	
F	CIRCLIP	360082	
G	HALF CARTRIDGE	320023	
Н	O RING	480010	
I	NON SHUT OFF HEAD	780436	
J	FLOWNUT	320026	
K	HEAD	680359	
L	ORING	480125	

THIS VIEW SHOWS THE QUADRANT HANDLE ARRANGEMENT. THE PRISM MODEL HANDLES ARE HELD IN PLACE WITH A GRUB SCREW LOCATED UNDERNEATH THE LEVERS ON THE HANDLES. (2.5MM HEXAGONAL KEY REQUIRED)



- (