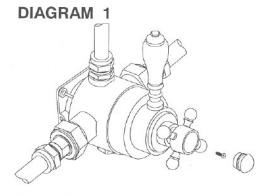
- REMOVAL OF CONTROL ASSEMBLY
- PRISE OUT INDICE AND REMOVE SPINDLE SCREW PULL OFFCONTROL KNOB.
- FOR CONCEALED UNITS REMOVE CONCEALING **PLATE**
- **PULL OFF SPACER AND REMOVE CIRCLIP (1) USING CIRCLIP PLIERS**
- PULL OFF THE LEVER ASSEMBLY/ FLOW CONTROL BODY.
- USING A 2.5MM ALLEN KEY UNSCREW THE GRUB SCREW AND REMOVE THE BODY SLEEVE.







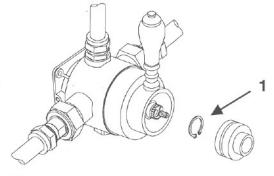


DIAGRAM 4

