

AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces.

All surface finishes will wear if not cleaned correctly, the only safe way to clean your mixer is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture.

In the interests of continuous product development we reserve the right to alter specification as necessary

TELEPHONE HELP LINE! 0870 4425553

Bristan Limited
Lagrange
Lichfield Road Industrial Estate
Tamworth
Staffordshire
B79 7XD
UK

Web Site: www.bristan.com
Telephone: 0870 4425556
Facsimile: 0870 4425554
Email: enquire@bristan.com
(FI TW ACC2) (Rev. D1)

(K)

Twist Tumbler / Soap Dish Accessories



Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of an electronic detector. If you use power tools do not forget:

- Wear eye protection
- Unplug equipment after use

Fitting Instructions & Contents List

Please keep these instructions for future reference and for the ordering of spare parts.

Congratulations on your purchase of this high quality Twist Bathroom Accessory. Before proceeding with the installation please carefully read the instructions in order to ensure proper care and assembly of this accessory.

INSTALLATION


1. Identify all components and check for completeness, particularly before arranging fitting.
2. Establish the position for the accessory bracket (4) and mark out the fixing holes using the wall bracket (2) as a template.
3. Drill holes to suit, and insert rawl plugs (1) if required.



Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of an electronic detector. If you use power tools do not forget:

- Wear eye protection
- Unplug equipment after use

4. Screw the wall bracket (2) to the wall.
5. Loosen off the grub screw (5) (**but do not remove**) and place the accessory over the wall bracket with the grub screw (5) at the bottom.
6. Tighten up the grub screw (5) until the accessory bracket (4) is secure against the wall.
7. Attach Tumbler Plate/ Soap Dish (7) to accessory bracket (4) with screws provided (8).
8. See over the page for aftercare instructions.

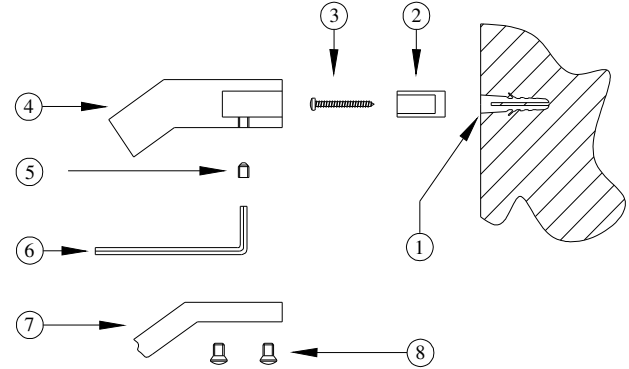

1. Rawl plug
2. Wall bracket
3. Screw
4. Accessory Bracket
5. Grub screw
6. Hexagonal key
7. Tumbler Plate/ Soap Dish
8. Screw

Please Note: -

In the unlikely event you find a part missing please contact our Customer Service Help line on 0870 4425553 or email enquire@bristan.com for immediate dispatch of part.