

AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces. All surface finishes will wear if not cleaned correctly, the only safe way to clean your mixer is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting - even non-scratch cleaners.

GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture.

NOTE: The 5-year guarantee on the valves is invalidated if damaged by any waterborne debris.

In the interests of continuous product development we reserve the right to alter specification as necessary.

PRODUCT NAME: PM EBAS C

TELEPHONE HELP LINE: 0870 4425553

Bristan Group Ltd
Birch Coppice Business Park
Dordon
Tamworth
Staffordshire
B78 1SG
UK
A Masco company

Web Site: www.bristan.com

Telephone: 0870 4425556

Facsimile: 0808 1611002

Email: enquire@bristan.com

(FI PM EBAS)

(Rev. D1)

(MZ)

BRISTAN

Prism Eco Click Basin Mixer

Fitting Instructions & Contents List

**Please keep these instructions for future reference
and for the request of spare parts.**


For latest prices and delivery to your door visit MyTub Ltd 0845 303 8383 www.mytub.co.uk



WATER PRESSURE

This mixer is suitable for use at all supply pressures. However for optimum use both the hot and cold supplies should be reasonably balanced. If the fitting is installed at low pressure (tank fed), then the minimum distance from the outlet of the nozzle to the underside of the cold tank should be 2.0 metres to ensure adequate performance.

This mixer should be installed in compliance with Water Regulations. Where the supplies are unbalanced, i.e. hot water from the cylinder tank / cold from the mains, approved check valves must be fitted in the supply pipes. For further details contact your Local Water Authority.

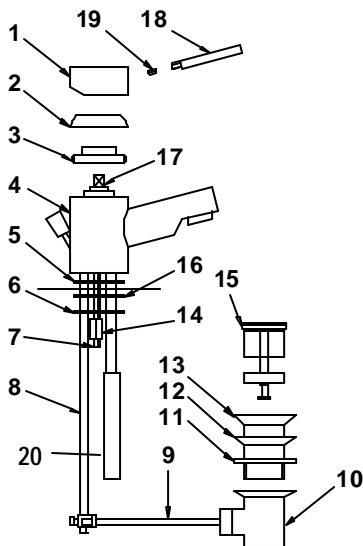

Please Note:

In the unlikely event you find a part missing please contact our customer service helpline on 0870 4425553 for immediate dispatch of part.


CONTENTS

1. Head	(x1)
2. Shroud	(x1)
3. Retaining Nut	(x1)
4. Mixer Body	(x1)
5. Full Rubber Washer	(x1)
6. Metal 'C' Washer	(x1)
7. Threaded Rods	(x2)
8. Operating Rod	(x1)
9. Waste Rod	(x1)
10. Bottom Waste	(x1)
11. Washer	(x1)
12. Washer	(x1)
13. Top Waste	(x1)
14. Nuts	(x2)
15. Plug	(x1)
16. Rubber 'C' washer	(x1)
17. Cartridge	(x1)
18. Lever	(x1)
19. Grub Screw	(x1)
20. Tail pipes	(x2)

INSTALLATION

1. Identify all components and check for completeness, particularly before arranging fitting.
2. Fit the mixer body (4) to the basin/bidet using the 'C' plate fixing kit (6 & 16). The full rubber washer (5) goes between the fitting and the basin, the 'C' shaped rubber (16) and metal washer (6) on the underside of the basin/bidet. Use the threaded rods (7) and nuts (14) to secure to basin.
3. Fit the tail pipes (20) to the fitting and connect the hot and cold supplies.
4. Fit the pop up waste, and connect it to the mixer using washer (12) and the top of the waste (13) above the basin, and washer (11) and bottom of waste (10) on the underside. It is recommended that silicon sealant be applied to both sealing faces of washers (11 and 12). The waste can be set by adjusting the waste rod (9) / operating rod (8) connecting bracket and adjusting screw in the base of the plug (15).
5. Fully open the mixer in the mid position, letting it run for a few minutes to check all joints and connections for leaks.
6. See over the page for aftercare instructions.

ECO CLICK

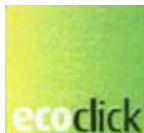

An innovative water saving feature that offers a subtle resistance as it reaches approximately half of its full flow capability. For increased flow this feature can be overridden. At full flow the eco click cartridge uses 32% less water than a standard cartridge and when in eco click mode the reduction increases to 72%.

If the fitting begins to drip:

1. Turn off the water supply.
2. Unscrew handle lever (18), loosen grub screw (19) with a hexagon key and pull off head (1).
3. Remove cartridge (17).
4. Clean or replace cartridge, clean and grease seal and refit. **Note:** There are locating pins on the bottom of the cartridge that fit in holes inside the tap, to ensure it is fitted the right way round.
5. Replace cartridge and head and turn on the water supply.