

AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces. All surface finishes will wear if not cleaned correctly, the only safe way to clean your mixer is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture

NOTE: The 5 year guarantee on the valves is invalidated if damaged by any waterborne debris.

In the interests of continuous product development we reserve the right to alter specification as necessary.

**PRODUCT CODE: RO BAS C, RO BID C
TELEPHONE HELPLINE: 0844 701 6273**

Bristan Group Ltd
Birch Coppice Business Park
Dordon
Tamworth
Staffordshire
B78 1SG
UK
A Masco Company

Web Site: www.bristan.com
Telephone: 0844 701 6274
Facsimile: 0844 701 6275
Email: enquire@bristan.com

(FI RO BAS, BID)

(R2)

(H)

BRISTAN

Rio Basin and Bidet Mixer

Fitting Instructions & Contents List

**Please keep these instructions for future reference
and request of replacement parts.**



For latest prices and delivery to your door visit MyTub Ltd 0845 303 8383 www.mytub.co.uk


WATER PRESSURE

This mixer is suitable for use at all supply pressures. However for optimum use both the hot and cold supplies should be reasonably balanced. If the fitting is installed at low pressure (tank fed), then the minimum distance from the outlet of the nozzle to the underside of the cold tank should be 2 metres to ensure adequate performance.

This mixer should be installed in compliance with Water Regulations. Where the supplies are unbalanced, i.e. hot water from the cylinder tank / cold from the mains, approved check valves must be fitted in the supply pipes. For further details contact your Local Water Authority.

CONTENTS

- | | |
|-----------------------|------|
| 1. Rubber O-ring | (x1) |
| 2. Rubber 'C' washer | (x1) |
| 3. Metal 'C' washer | (x1) |
| 4. Nut | (x2) |
| 5. Threaded rod | (x2) |
| 6. Tail pipe | (x2) |
| 7. Pop up rod | (x1) |
| 8. Connecting bracket | (x1) |
| 9. Waste rod | (x1) |
| 10. Flat washer | (x1) |
| 11. Shaped washer | (x1) |
| 12. Waste body | (x1) |

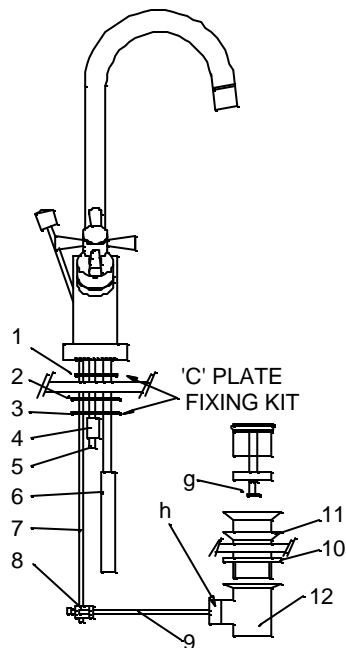

Please Note: In the unlikely event you find a part missing please contact our Customer Service Helpline on 0844 701 6273 or email enquire@bristan.com for immediate despatch of part.

INSTALLATION

1. Identify all components and check for completeness, particularly before arranging fitting.
2. Fit the mixer body to the basin/bidet using the 'C' plate fixing kit. The rubber o-ring (1) goes between the fitting and the basin/bidet, and the 'C' shaped rubber (2) and metal washers' (3) on the underside of the basin/bidet, to be secured by the nut (4) and threaded rod (5).
3. Fit the tail pipes (6) to the fitting by hand and connect the hot and cold supplies. Soft copper tails can be carefully bent and cut to length to meet supply pipes.
4. Fit the pop up waste, with the flat washer (10) below and the shaped washer (11) above the basin/bidet. It is recommended that a silicon sealant be applied to both sealing faces of washers 10 and 11. The plug height can be set by, adjusting the waste rod (9) and operating rod (7) connecting bracket (8), and the screw (g) in the base of the plug. The waste mechanism can be adjusted using the waste body cap (h).
5. Fully open both valves, letting them run for a few minutes to check all joints and connections for leaks.
6. See over the page for aftercare instructions.

MAINTENANCE

If the fitting begins to drip:

1. Turn off the water supply.
2. Unscrew cap (a), remove indice (b), loosen screw (c) and pull off head (d). Then unscrew shroud (e) and unscrew ceramic disc valve (f).
3. Carefully clean seating, rubber seal and ceramic disc.
4. Replace valve and head and turn on the water supply.
5. Contact our helpline if problem persists.

