


Straight Spout Spring Tap Sink Mixer

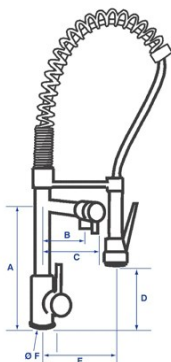

Galiceno Straight Spout Spring Tap Sink Mixer

GENERAL INFORMATION

Pattern No. key :CP = Chrome Plate

Size	Pattern No.	Pack 1 Qty	Code	Barcode
NA	Sink Mixer CP	1	4P1150	5013866074240

DIMENSIONS (mm)

Code	Description	A	B	C	D	E	F
4P1150	Galiceno Sink Mixer	215	195 crs	240	130	160 crs	50

CARE & MAINTENANCE

Care

To maintain the surface finish, simply wipe occasionally with a mild detergent on a soft damp cloth. Dry, using a soft cloth. Never use abrasive cleaners or chemical household cleaners and avoid contact with concentrated bleach.

Maintenance

No regular maintenance is required for this product.

In case of complete replacement Pegler recommend service valves should be fitted to the supply inlets.

For any further help or replacement parts please contact the Service Support Team on 0800 1560050.

REGULATIONS

Regulations

It is important to ensure that the water supplies to your taps and mixers are connected in accordance with the water regulations (WRAS) requirements and good plumbing practice.

If the water flow streams are separate all the way to the outlet of the fitting, then there is no requirement to fit check valves to the cold and hot pipes even if the supply pressures are unbalanced.

It is recommended that in all new and refurbishment installations a thermostatic mixing valve should be installed on the hot inlet supply. The thermostatic mixing valve is designed to prevent scalding when using the hot water supply.

GUARANTEE

Luxury Taps and Mixers

Pegler Yorkshire Customcare 5 Year Guarantee - Terms and Conditions

Product are subject to a 5 year guarantee that is between Pegler Yorkshire and the final purchaser of the product.

The guarantee is subject to proof of purchase being supplied.

This guarantee does not affect any statutory rights the consumer may have in law.

The guarantee covers manufacturing or material defects and does not cover parts subject to normal wear and tear.

Finishes other than chrome are covered for a period of 3 years only and the guarantee on the finish is subject to the cleaning instructions being followed.

The guarantee is not applicable where the product is fitted contrary to the conditions in the fitting instructions.

Abusive behaviour and accidental damage to the product are not covered by this guarantee.

The extent of this liability is limited to the cost of the replacement of the defective item and not to fitting or consequential damages.

BEFORE STARTING

Thoroughly flush pipework.

It is our recommendation and good plumbing practice that water supplies to the mixers should have equal pressure.

It is necessary to fit these products in accordance with WRAS water supply (water fittings) 1999 & water bylaws 2000 (Scotland).

PRE INSTALLATION CHECKS

1. Ensure that there is sufficient space to install the product without hampering its operation. This is a significant size so extra care should be taken to ensure its suitability.
2. Ensure that the outlet will protrude sufficiently into the sink and will clear any obstructions. Because of the dual outlet of this tap, extra care again should be taken, by considering the opening of wall mounted cupboards etc do not impact on the products use, due to its size.

OPERATING PRESSURES

0.5 bar min to 6.0 bar max (optimum 1.0 bar for simultaneous use of sink filler and spray.)

In domestic premises it is permissible to install the mixers on unbalanced pressures (separate sources) provided that single check valves are fitted immediately upstream of both hot and cold inlets. However, it is our recommendation and good plumbing practice that the hot and cold supply pressures to the mixer be equal (balanced) to ensure the temperature of the mixed water remains stable in the event of draw offs being experienced at other points.

REMOVING YOUR OLD TAPS

1. Make sure the water supply to your taps are switched off.
2. Turn on the taps to drain the pipework.
3. Unscrew the nuts which connect the taps to pipework and remove the taps.
Please Note: The Galiceno Luxury Monobloc Sink Tap with flexible spray handset, comes in two pieces. Do not assemble the two parts of tap together at this time.

FITTING YOUR NEW TAPS

1. Unscrew back nut from bottom half of tap.
2. Place fitting through hole in ware ensuring that the 'o' ring seal in base of fitting is placed around the hole, providing sufficient area for sealing.
3. Underneath the ware first place rubber seal then back nut onto threaded tail of tap.
4. Hold in place and firmly tighten the back nut.
5. Screw in both flexible tails, ensuring 'o' ring seals are in place.
6. Connect tap to water supply using the flexible hoses.
Please Note: connections here are 3/8" BSP.
7. Locate top half of tap onto now installed bottom half and screw in place. Connecting screw is located inside spring. Ensure all seals are in place.
8. Connect handset to end of hose. Ensure good seal is made.
9. Turn back on water supply and check for leaks.
10. Operate single lever handle at the base of tap and check for flow.
Please Note: particularly low flow can be improved slightly back removing aerator in favour of flow straightener. Contact Pegler for further information and part (available on sink fill only) quoting spare number 812319. See stages 12, 13 and 14 for fitting of flow straightener.
11. Once base of tap is turned on and temperature can be adjusted using single lever. Then turn on individual handles depending on flow requirements.
Please Note: sink fill is from horizontal spout with flow control lever positioned on end of spout. The additional spray option via handset can be un-hooked and used by squeezing trigger.
12. Unscrew chrome outlet and remove aerator and rubber seal, from sink fill spout.
13. Insert flow straightener back into outlet then seal. Screw back into spout of tap.
14. Check once more for leaks.