

Folding Bath Screen

Instruction Manual

OBV




Consumer Guarantee

Please make sure the purchaser/end user completes and returns the Guarantee card which is enclosed with this product. Failure to validate the Guarantee will mean only the 1 Year Statutory Guarantee will apply.

IMPORTANT PRE-INSTALLATION CHECKS

1. Check you have the correct hand bath screen. Please look at the labels on the side of the product packaging and use the illustrations below.

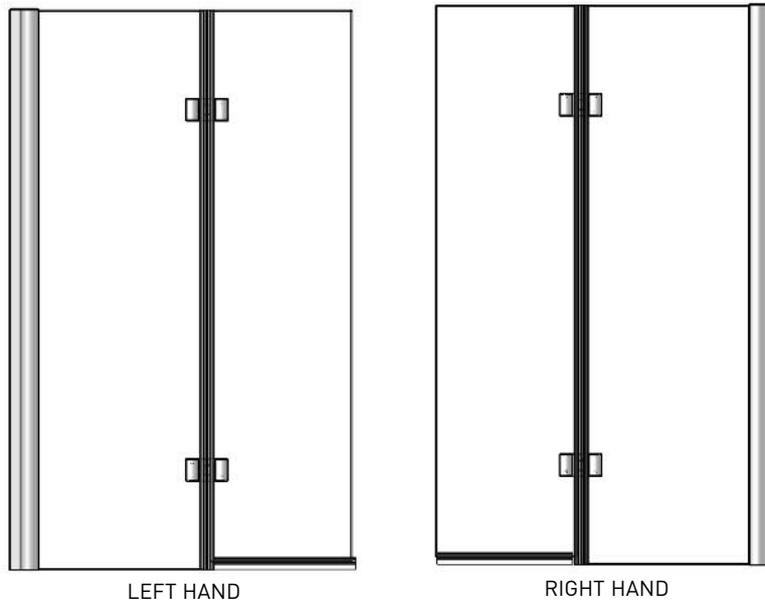

2. Check all the product components are in the box and the fixing kits are complete. Please check this with the component check list overleaf.
3. Un Pack your product and handle it with care.
4. Please check the product for defects or damage. Once the installation has commenced we cannot accept responsibility for any defects or damage to the products.
5. Please take the time to read these instructions prior to installing your product.
6. Before you commence any drilling check there are no hidden electrical cables and/or water pipes in the walls.
7. No attempt should be made to re-work the toughened safety glass.
8. The installation should be performed by two persons.
9. It is strongly recommended the walls the product is going to be installed on are vertical. However the wall profiles have 25mm of adjustment to help compensate for some deviation.
10. It is strongly recommended the product is fitted on tiled surface or similar waterproof surface.
11. It is strongly recommended the walls are tiled and grouted after the installation of the bath and before the installation of the product. This will provide maximum adjustment and help when sealing the product.
12. If the walls and/or the bath are not level you will not achieve maximum adjustment of the product.
13. Pictures used are for illustration purposes only, product designs may alter slightly as a result of continuing product development.
14. We do not stipulate where the European Standard Kite Mark should be positioned on the glass panels when being factory assembled.

Component Check List: Supplied

Description	Quantity
Bath Screen	1
Wall Profile	1
Wall Profile Trim	1
PVC Bottom Seal	1

Fixing Kit - Component Check list.


3 mm Drill Bit	1
40 mm Screws (RSCR14)	3
Wall Plugs	3
Pan Head Screws (RSCR19)	3
Branding Badge (if applicable)	1
Profile Cover Caps	2

Equipment Check List: Not Supplied

Description
Electric or battery drill.
6 mm masonry drill bit.
Bathroom sealant gun.
Bathroom sealant tube.
Pozi Screw driver.
Spirit levels.
Pencil.
Additional fixings if going into plaster board.

IMPORTANT PRE-INSTALLATION CHECKS


Step 1 - Checking the bath

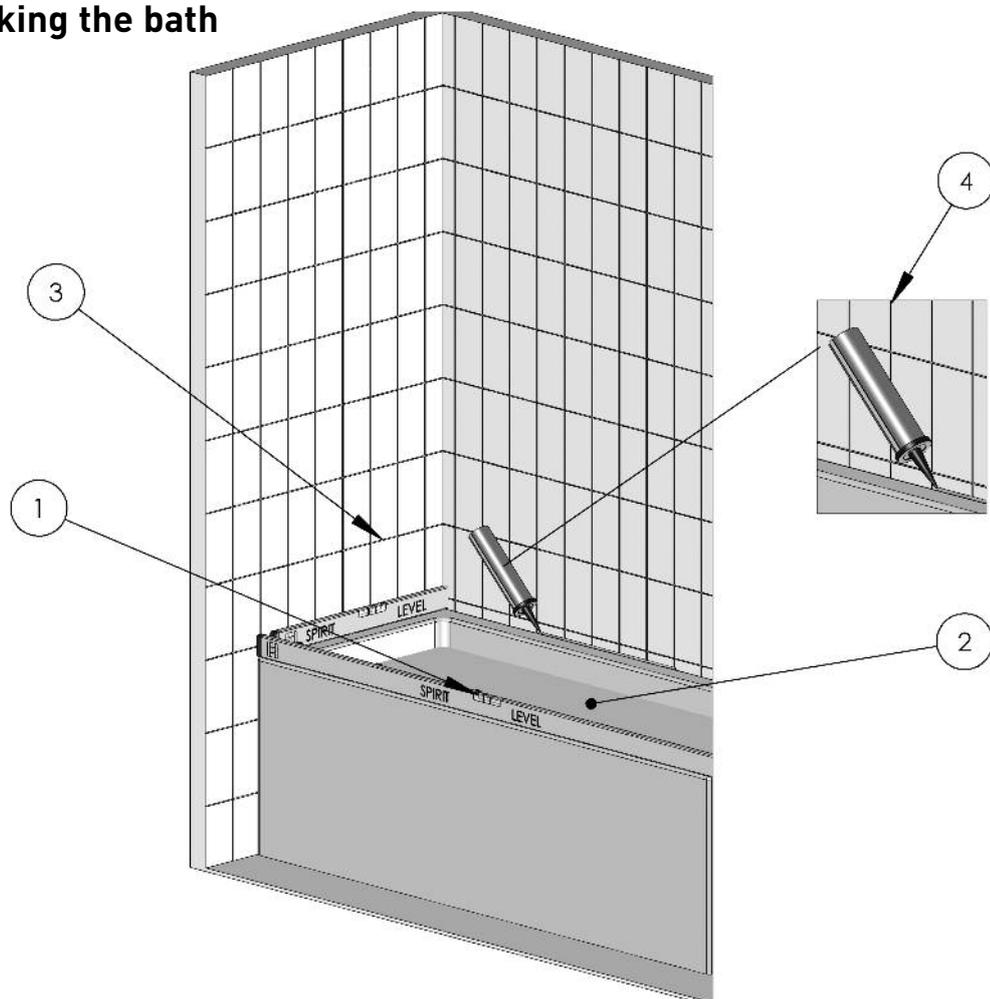

- 1 Check the bath is level, on all sides (The bubble should be in the centre of the two lines on the spirit level).
- 2 Stand in the bath and check there is no adverse movement.
- 3 The walls should be tiled and grouted up to the bath.
- 4 The tiles and the bath should be sealed with the bath full of water, using bathroom sealant.
 - **Spray the seal and joints with the shower head and check for leaks when the silicone has cured.**
 - **Check the plumbing for leaks.**
 - **Do not Plasterboard over the bath.**
 - **Do not grout the tiles when the enclosure has been fitted as the grout may discolour the aluminium profiles.**
 - **When all of the above criteria is complete please proceed to the next step in these instructions.**




Step 2 - Determining the position of the Wall Profile.

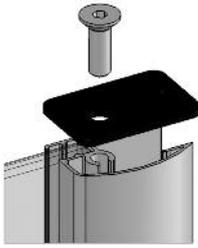


1. Remove the black transit caps from the bath screen.

Parallel inside edge of the bath

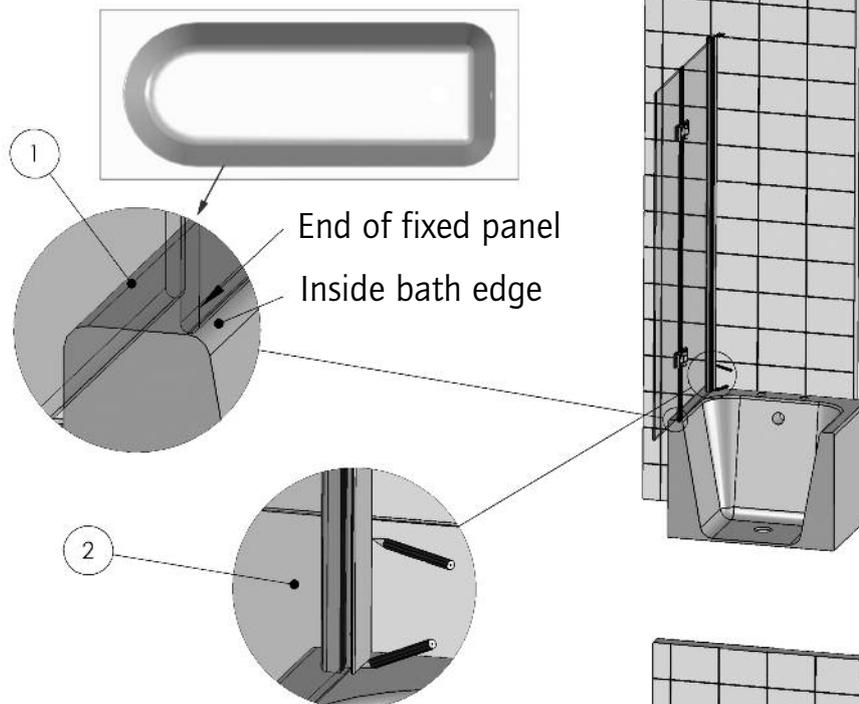

Curved inside edge of the bath

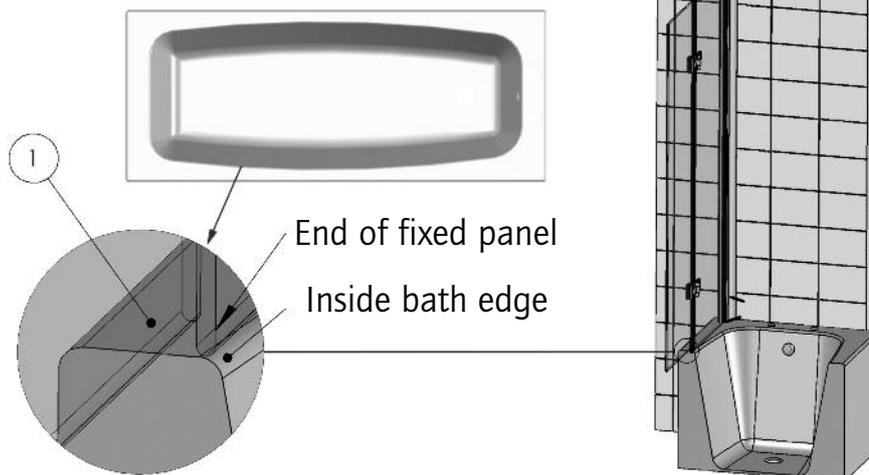


1. Dry fit the folding bath screen on top of the bath, place the leading edge of the fixed panel just over the inside edge of the bath as illustrated above.
2. Using a pencil mark lightly where the aluminium vertical profile touches the tiled wall and bath top (this will determine where you need to fix the wall profile in Step 3)

- You must ensure the glass runs parallel to the outside edge of the bath before marking the tiled wall with a pencil.
- You will need help to hold the screen in position while you mark the tiled wall and bath top.

IMPORTANT INFORMATION: Failure to fit the fixed panel to the inside edge of the bath top will result in the bath screen leaking and will not be covered under the terms of the guarantee.

Step 3 - Fixing the Wall Profile

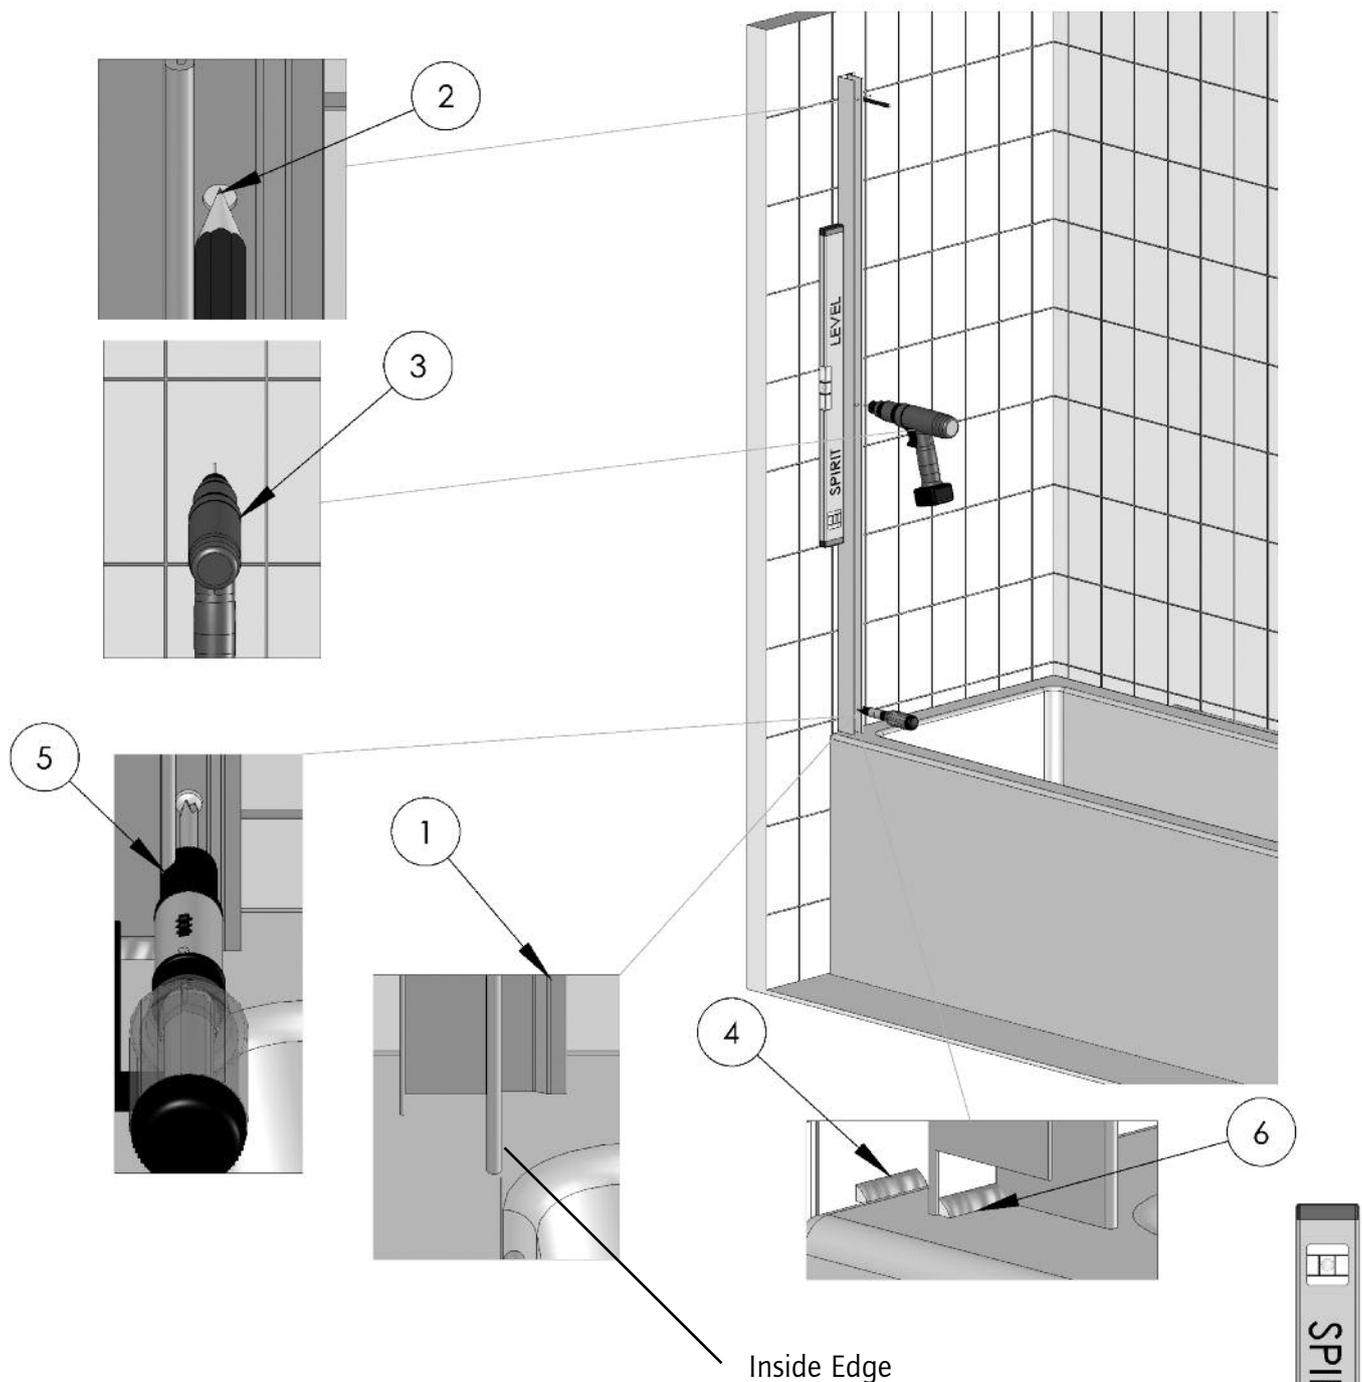


1. Position the inside edge of the wall profile on the pencil mark you made in Step 2, Line 2
2. Mark the locations for the drill holes using a pencil.
3. Drill 3 holes using a 6mm masonry bit (not supplied). Push the wall plugs (supplied) into the drilled holes.
4. Apply sealant where the bottom of the wall profile will meet the bath top and tiled wall (the width of the wall profile).
5. Screw-Fix the Wall Profile using the 40 mm screws (supplied).
6. Apply Sealant to the inside of the wall profile where it meets the bath.

- **The wall profiles must be vertically level. (The bubble should be in the centre of the two lines on the spirit level).**

IMPORTANT INFORMATION: Failure to follow the procedure in steps 4 & 6 can result in serious water damage and is not covered by the guarantee.




Step 4 - Locating and fixing the Folding Bath Screen

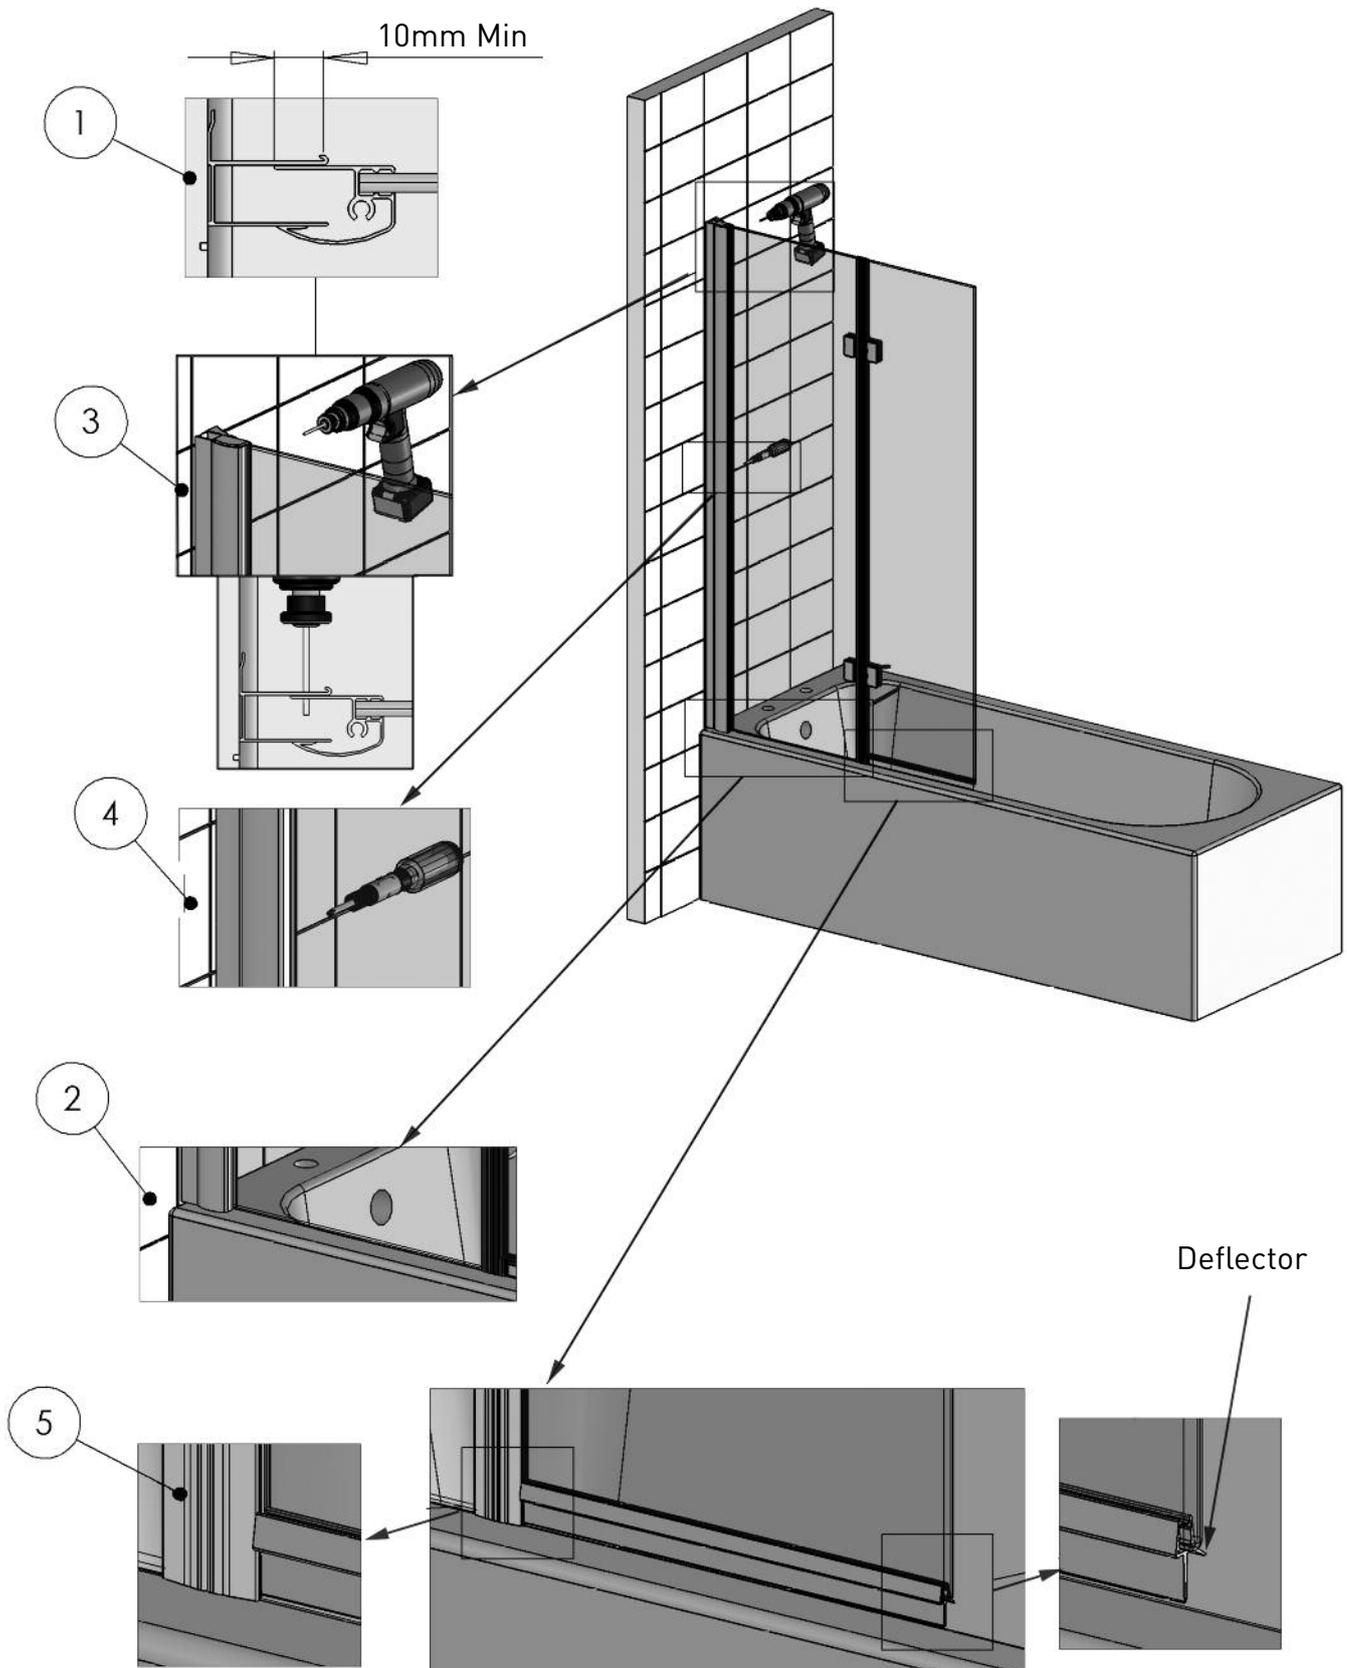

1. Offer the bath screen into location on the bath top and in the wall profile.
2. Check to see the glass is sitting fully down on top of the bath top and is parallel to the outside edge of the bath.
3. Drill through the pre-drilled holes of the wall profile using the 3mm drill bit.
4. Screw-Fix the screen to the wall profile using the supplied pan head screws.
5. Push the bottom seal onto the bottom of the folding glass panel (make sure the deflector strip is facing the inside of the bath), ensure the bottom seal is pushed up tight against the vertical magnet and then cut the excess off the bottom seal.

- **Please take care when cutting the seal**
- **You may need help to hold the screen in location while you drill and screw-fix the screen to the wall profile**


Step 5 - Fix the Cover Trim and Seal the Folding Bath Screen

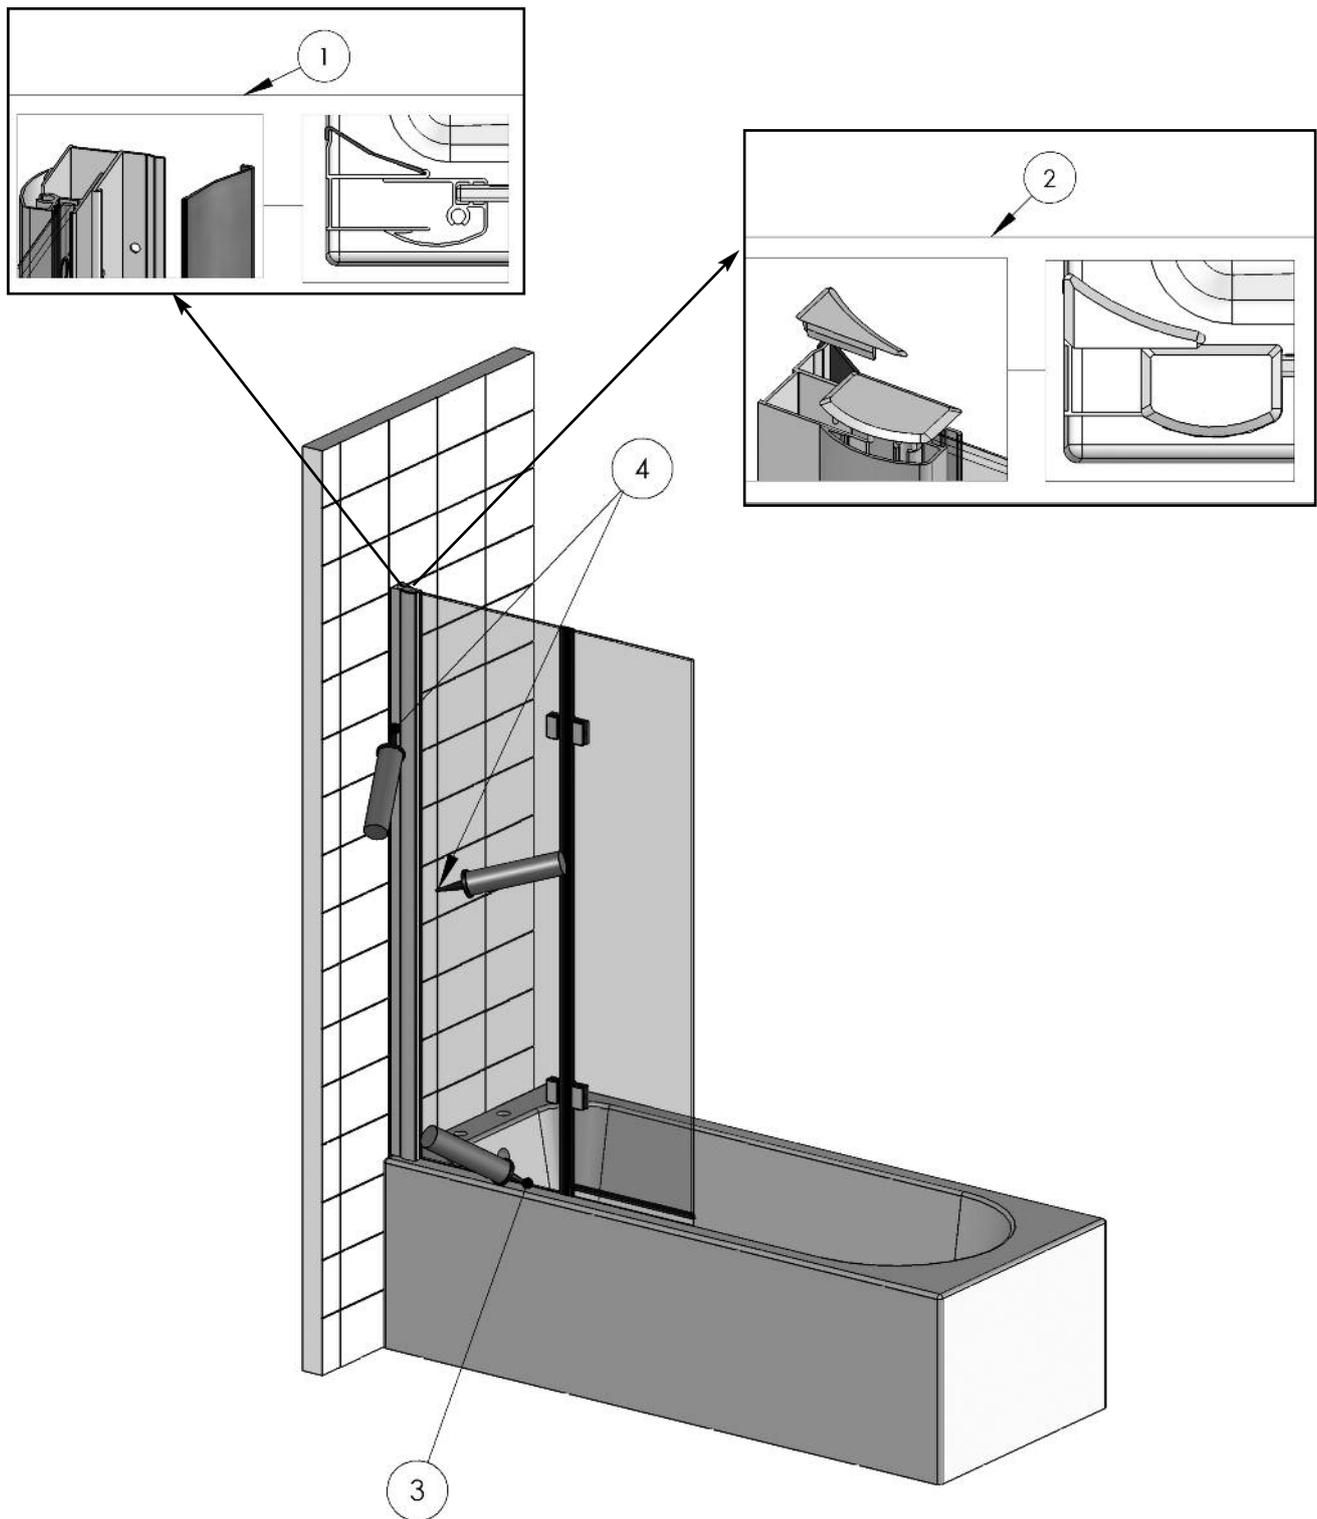

1. Clip on the wall profile cover trim. (It is designed to be a tight fit so take care).
2. Place the cover caps on top of the profiles. (R and L on the inside of the caps indicate the handing of the caps looking from the outside of the bath screen).
3. Seal horizontally along the aluminium profile and the glass fixed panel on the outside of the screen where they meet the bath top and tiles.
4. Seal vertically the full length of the wall profile trim where it meets the tiles on the inside of the screen. Also seal vertically the full length of the wall profile where it meets the tiles on the outside of the screen using bathroom sealant.
5. To complete the installation stick on the branding badge.

- **IMPORTANT: Failure to follow the procedure on Steps 3 & 4 can result in serious water damage and is not covered by the guarantee.**

Spare Parts: If you need to replace any damaged parts please see illustration below for parts list then call Customer Relations on 01325 328034.

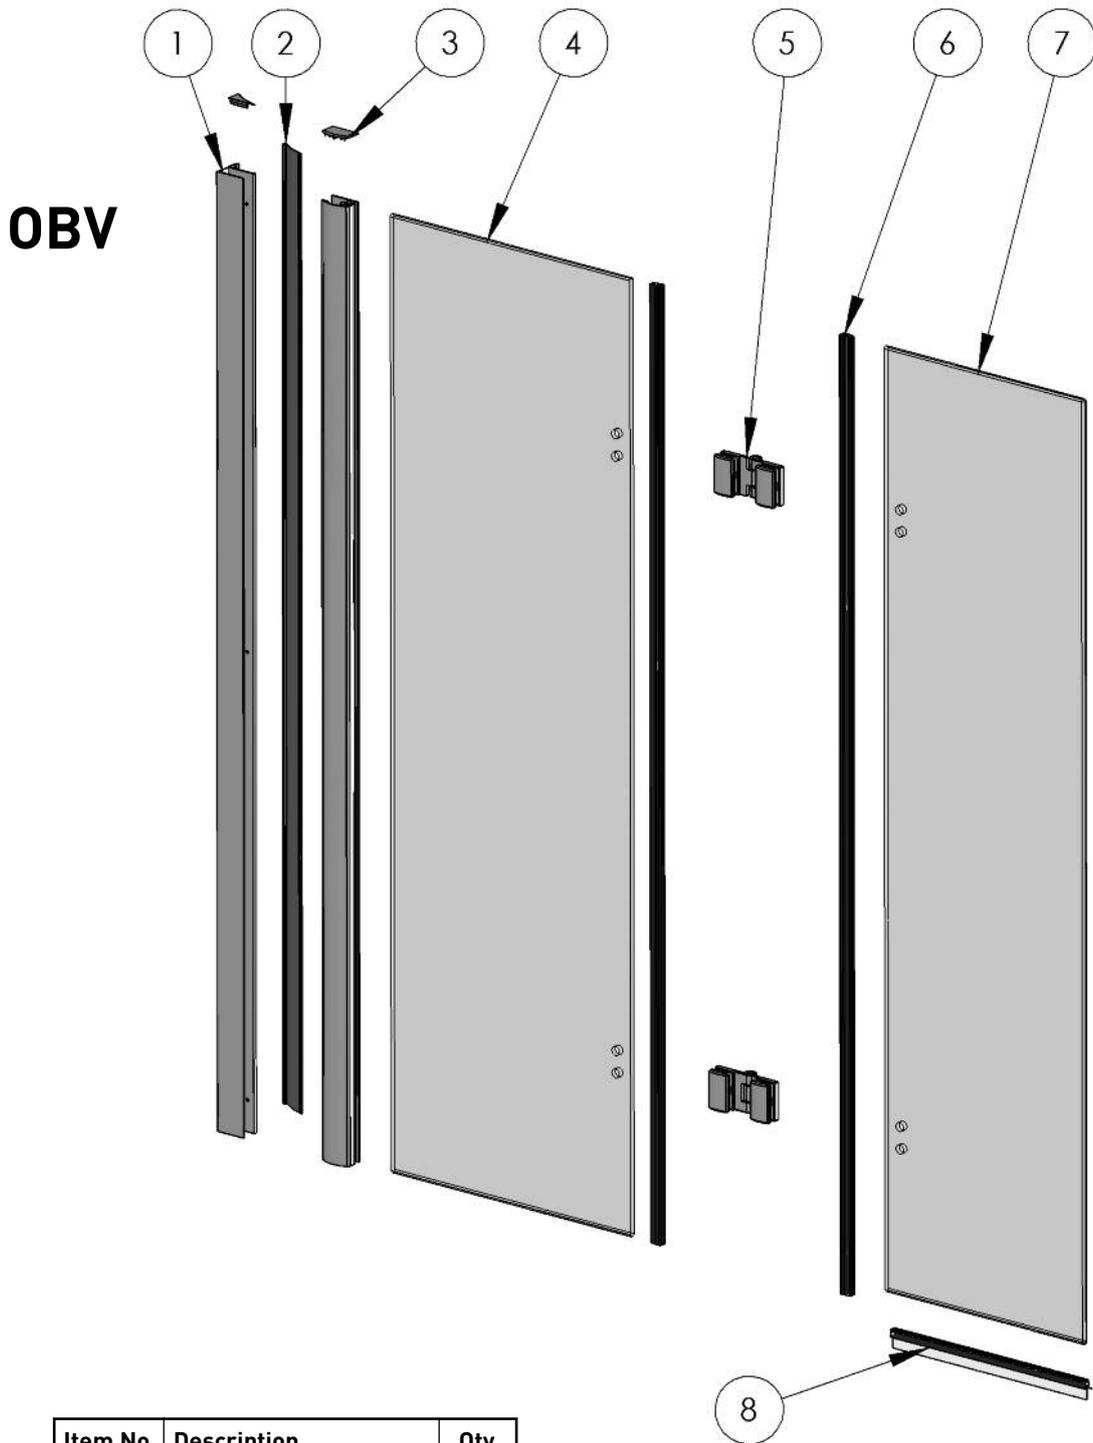

Item No.	Description	Qty
1	Wall Profile	1
2	Wall Profile Cover Trim	1
3	Profile Cover Caps	2
4	Fixed Panel	1
5	Hinges	2
6	Magnets	2
7	Folding Panel	1
8	Bottom Seal	1

TROUBLE SHOOTING GUIDE.

Problem

Solution

LEAKING

1. Check you have sealed the screen correctly as per instructions:
2. The bath and tiles should be sealed prior to fitting the screen (Step 1).
3. The width of the wall profile at the bottom where it meets the tiled wall and bath top (Step 3).
4. Inside the wall profile where it meets the bath top (Step 3).
5. Vertically on the inside the full length of the wall profile trim where it meets the tiled wall (Step 5).
6. Vertically on the outside the full length of the wall profile where it meets the tiled wall (Step 5).
7. Horizontally along the aluminium profile and the glass fixed panel on the outside where it meets the tiles and bath top (Step 5).
8. Ensure the leading edge of the glass fixed panel is situated just over the inside edge of the bath (Step 2).
9. Ensure the bottom seal on the folding panel is pushed up tight against the vertically magnet and the deflector strip is facing the inside of the bath (Step 4).

SCREEN

ALIGNMENT ON BATH

1. Check the wall profiles have been installed as per the instructions:
2. Make sure the wall profile has been fitted vertical (Step 3).
(The bubble should be in the centre of the two lines on the spirit level when checking the wall profile).
3. Check the bath installation (Step 1).
4. Check to see the glass is sitting fully down on the bath top and is parallel to the outside of edge of the bath (Step 4).

Some important information to help you Maintain your product.

The following information is all you need to keep your product looking new.

Clean your product using a mild detergent diluted in water and then polished off using a soft cloth.

If you live in a hard water area, periodically clean your product using a 50/50 solution of white vinegar and water. The solution should be left on the enclosure for approximately 5 minutes then rinsed off using warm water. This method of cleaning should remove lime scale residue.

Simple maintenance.

Our products are generally maintenance free, however it may be necessary to lubricate wheel assemblies and other moving parts from time to time.

It is strongly recommended that a quality silicone spray is used.

A list of Don'ts:

- 1 - Don't use acidic based products which are unsuitable for cleaning enamel surfaces.
- 2 - Don't use Abrasive cleaners or cleaners containing bleach or solvents, these products will adversely affect the finish of the aluminium profiles.
- 3 - Don't use scouring pads, powder or any sharp instruments when cleaning the enclosure.