


Geo-6

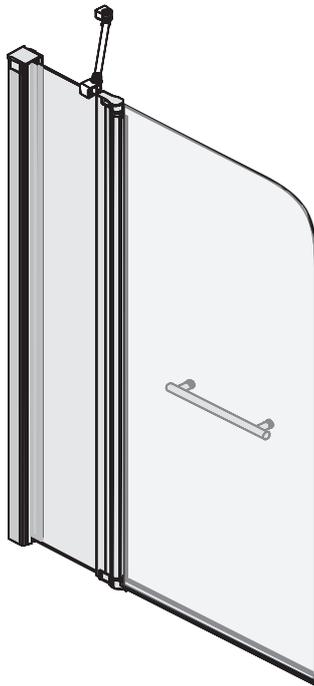


2 Panel Bath Screen

Twyford
bathrooms

IMPORTANT

Please read carefully the following instructions before installing your shower enclosure to ensure safe and proper use and avoid any injury to either the installer or user. Before installing please read also the important instructions. Failure to comply may invalidate your guarantee.

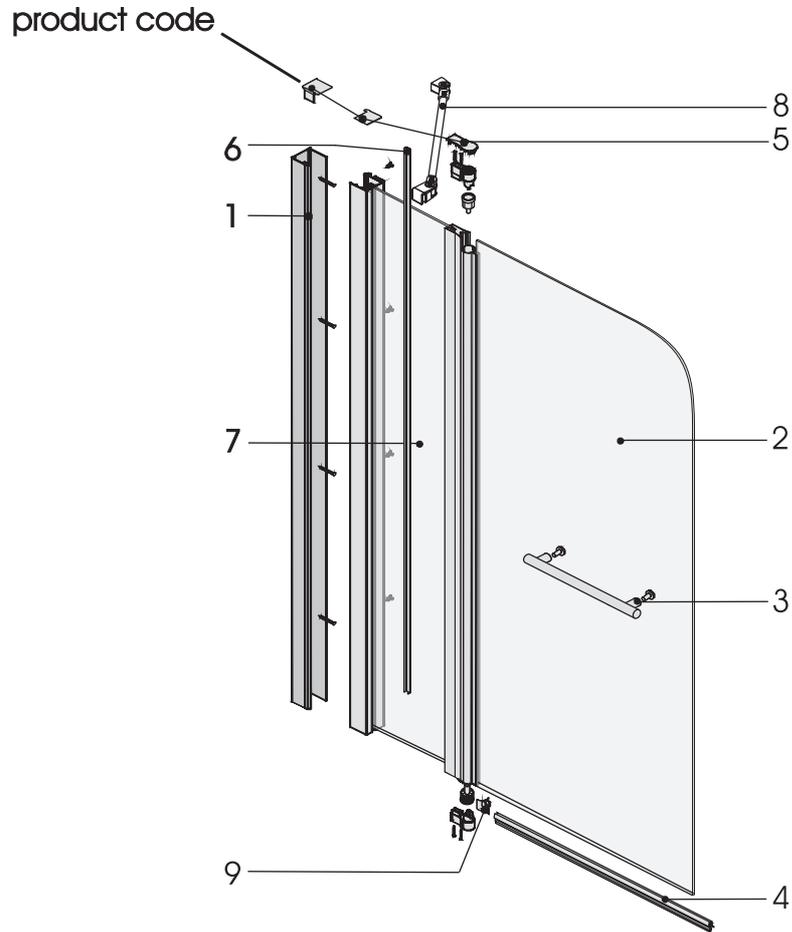


Corner Entry Door Components list		
No	Description	Qty
1	Wall profile	1
2	Glazed panel and hinge	1
3	Towel Rail	1
4	Bottom edge deflector	1
5	3 piece cover caps	1
6	Screw cover strip	1
7	Fixed glass panel	1
8	Angled support bar	1
9	Bottom corner gasket	1

Fixings Pack	
Description	Qty
Pan hd self tapping screw 10mm lng	4
Pan hd self tapping screw 30mm lng	4
Plastic wall plugs	4
Drill bit dia 3.2mm	1


prior to installation:

Before installing the shower screen, install the bath as per the manufacturers instructions making sure that it is level in all directions.

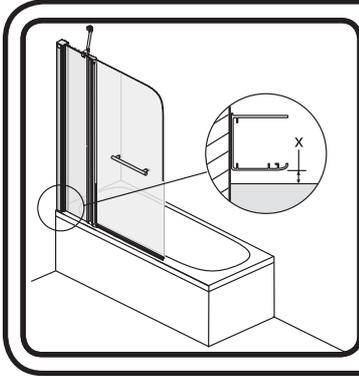



step 1.

Position the wall profile in from the edge of the bath to allow the screen to sit on the flattest part of the bath rim.

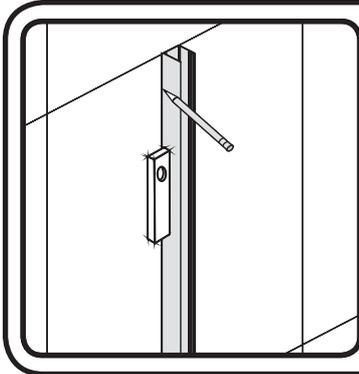


step 2.

Make sure wall profiles are upright using a spirit level.

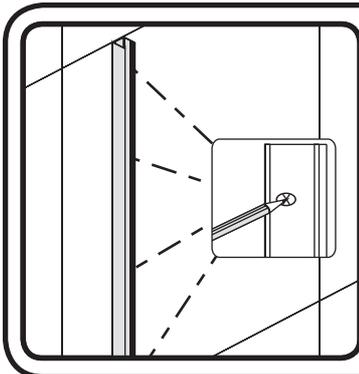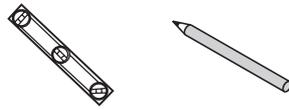


step 3.

Mark the position on the wall through the pre drilled holes with your pencil. Carefully move the wall profile away from the wall and put somewhere safely to avoid damage when you start drilling.

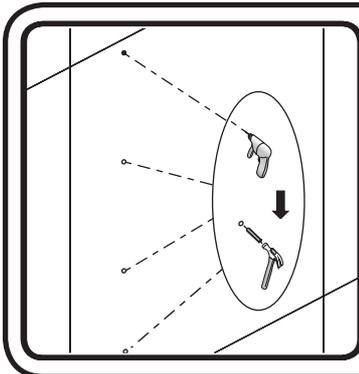


step 4.


Drill holes where marked using the 6mm masonry drill bit. (You may need a specialized drill bit if you are drilling into tiles, if unsure please get advice). You can now install the wall plugs that have been provided.

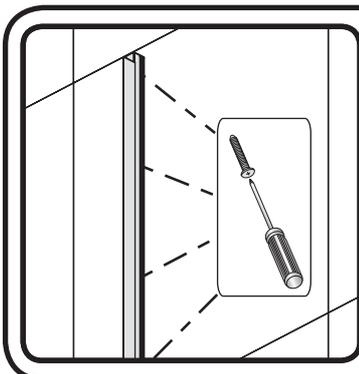

step 5.


Screw the wall profile to the wall, using the 30 mm long screws, making sure you keep the profile vertical.

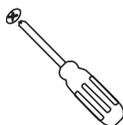

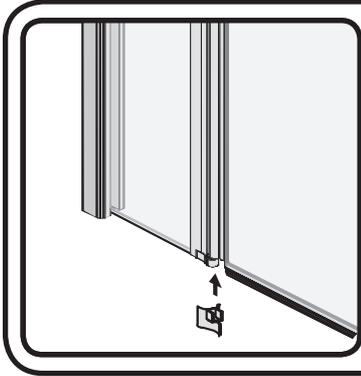


step 6.

Attach bottom corner gasket to the glass.

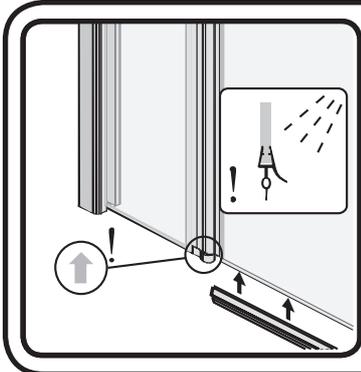


step 7.

Install the lower door edge seal ensuring the drip bar faces the inside of the bath.

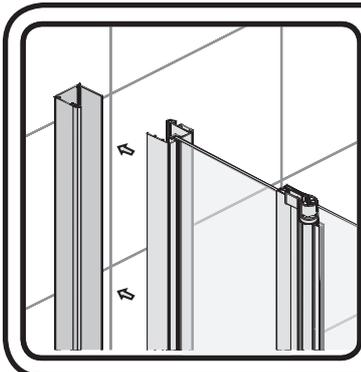


step 8.

Position the screen into the wall profile, shown. Ensure the lower door edge seal rests on the bath edge along the entire length of the screen.

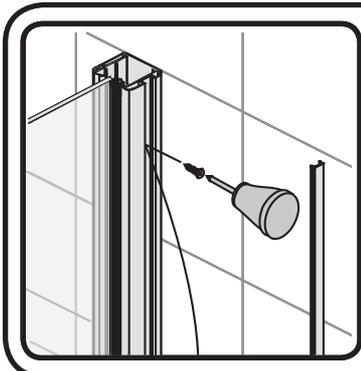


step 9.


On the inner face, drill through the pre-drilled holes in the shower profile into the wall profile using a 3.2mm diameter drill. Secure together using the 10mm screws provided. Once tight install the screw cover strip.

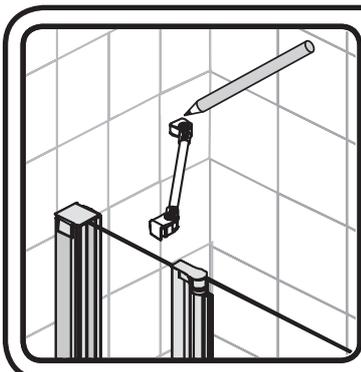

step 10.


To fit the stabilizer bar loosely slide the glass bar clamp over the glass to identify the position of the wall bracket. Ensure the bar is level and the glass is level using a spirit level and mark around the wall bracket onto the wall.

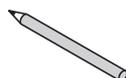

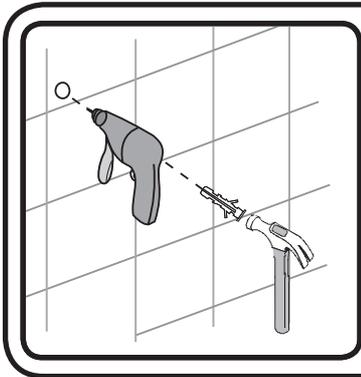



step 11.

You can now drill and plug the wall ready for fitting the wall bracket.

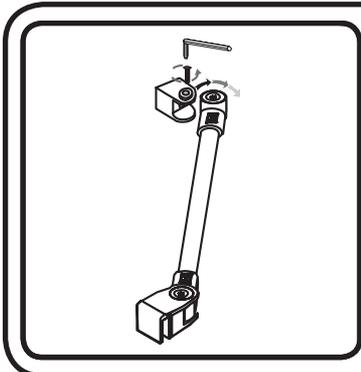


step 12.

Disconnect the wall plate from the support bar.

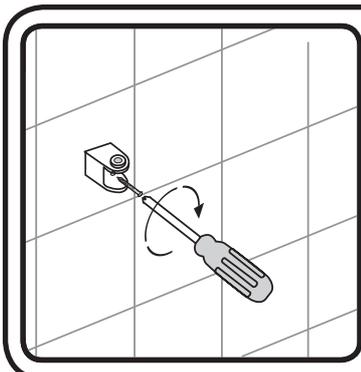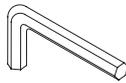



step 13.

Secure the wall plate using the screw provided.

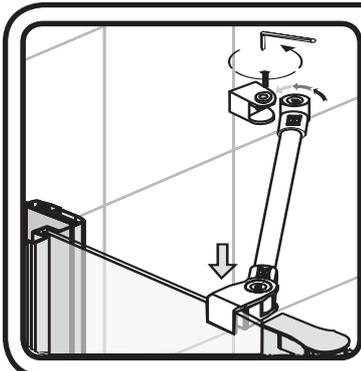


step 14.

Attach the metal clamp to the glass, ensuring the gasket are fully inserted so that the clamp is not in direct contact with the glass. Also ensure you do not overtighten the grub screw.
Making sure the screen is vertical, tighten all screws and grub screws to hold the screen in place. Secure the support bar on the wall plate.

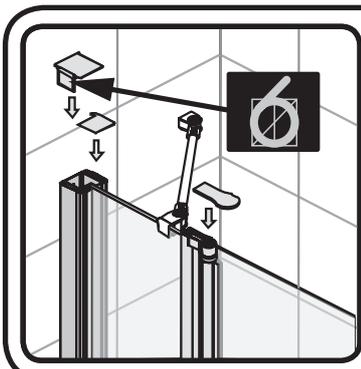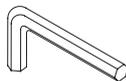


step 15.

Fit the profile cover caps as shown. Then apply the badge as indicated. Finally fit the hinge profile cover cap, as shown.

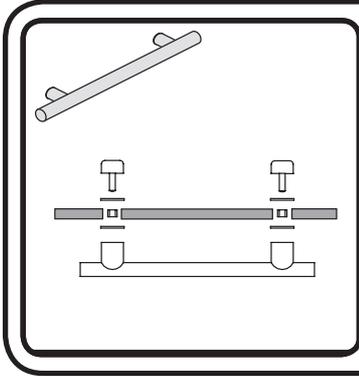

step 16.

Install towel rail as per diagram. Secure together on the inside.

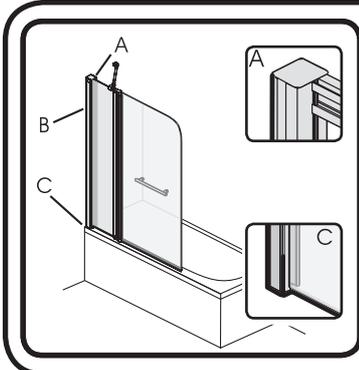

step 17.

Using good quality clear silicon sealant, seal the enclosure the following edges:

- A: Inside vertical wall-to frame joint.
- B: Outside vertical wall-to-frame joint.
- C: Outside horizontal bath-to-frame joint including the fixed panel.



Do not seal the inside horizontal bath-to-frame joint or first inner fixed panel joint.

CARE INSTRUCTIONS

Shower enclosures should be cleaned after every use. To prevent limescale from building up, use a squeegee, a soft cloth or chamois leather - but no cleaning agent - to wipe off any water droplets left after showering. Residue left by bodycare products (liquid soap, shampoo, shower gel) can also cause substances to accumulate. Use water to rinse away residues after use. All sliding door track fittings should also be cleaned this way - to ensure that they continue to run smoothly.

- **Don't allow limescale to build up – especially in hard water areas.**
- **If you do get a stubborn limescale build up, a mixture of 1: 1 vinegar and water will help you to clean it away – but make sure all vinegar is rinsed off completely.**
- **Never use strong detergents or cleaning agents.**
- **Cleaning materials should wherever possible be rated between PH4 and PH8.**
- **In no circumstances should you use any abrasive substances.**

Registered office: Lawton Road, Alsager, Stoke-on-Trent, ST7 2DF, UK
T: +44(0) 1270 879777 F: +44(0) 1270 870087
E: shower.team@twyfordbathrooms.com
www.twyfordbathrooms.com

Part of the Sanitec Group

FW G6 008 6-0 05/10