

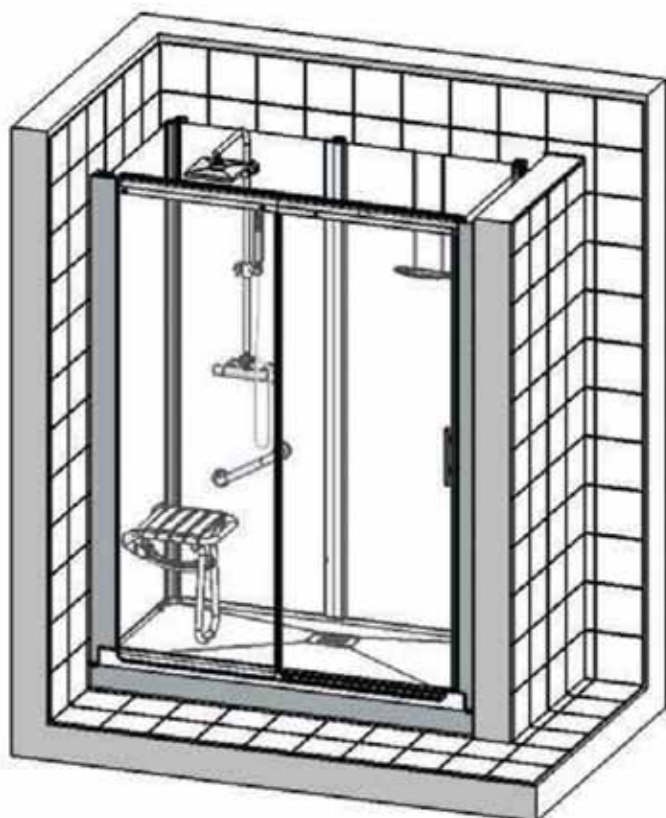


Installation Instructions


TECHNICAL HELPLINE NUMBERS ARE ON THE BACK OF THESE INSTRUCTIONS.


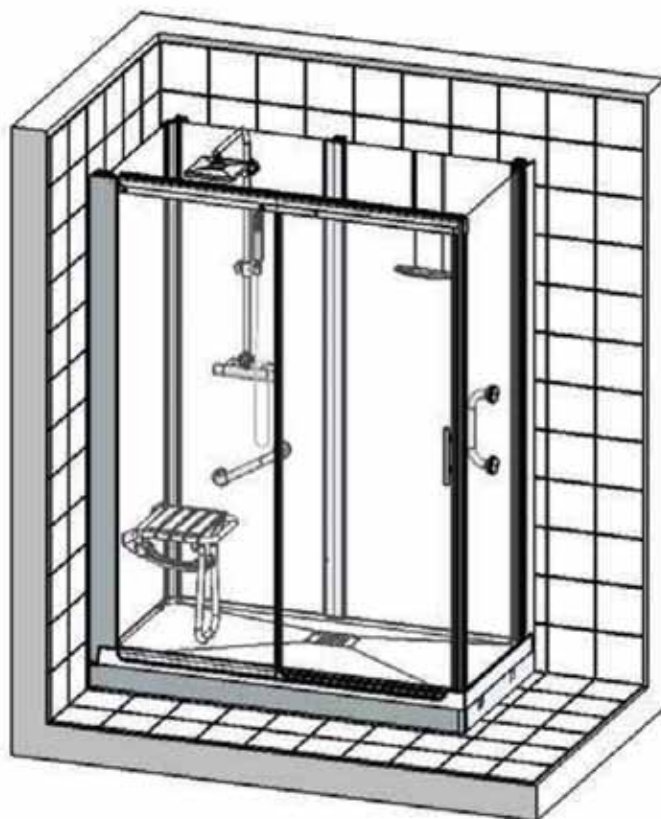


Corner Version

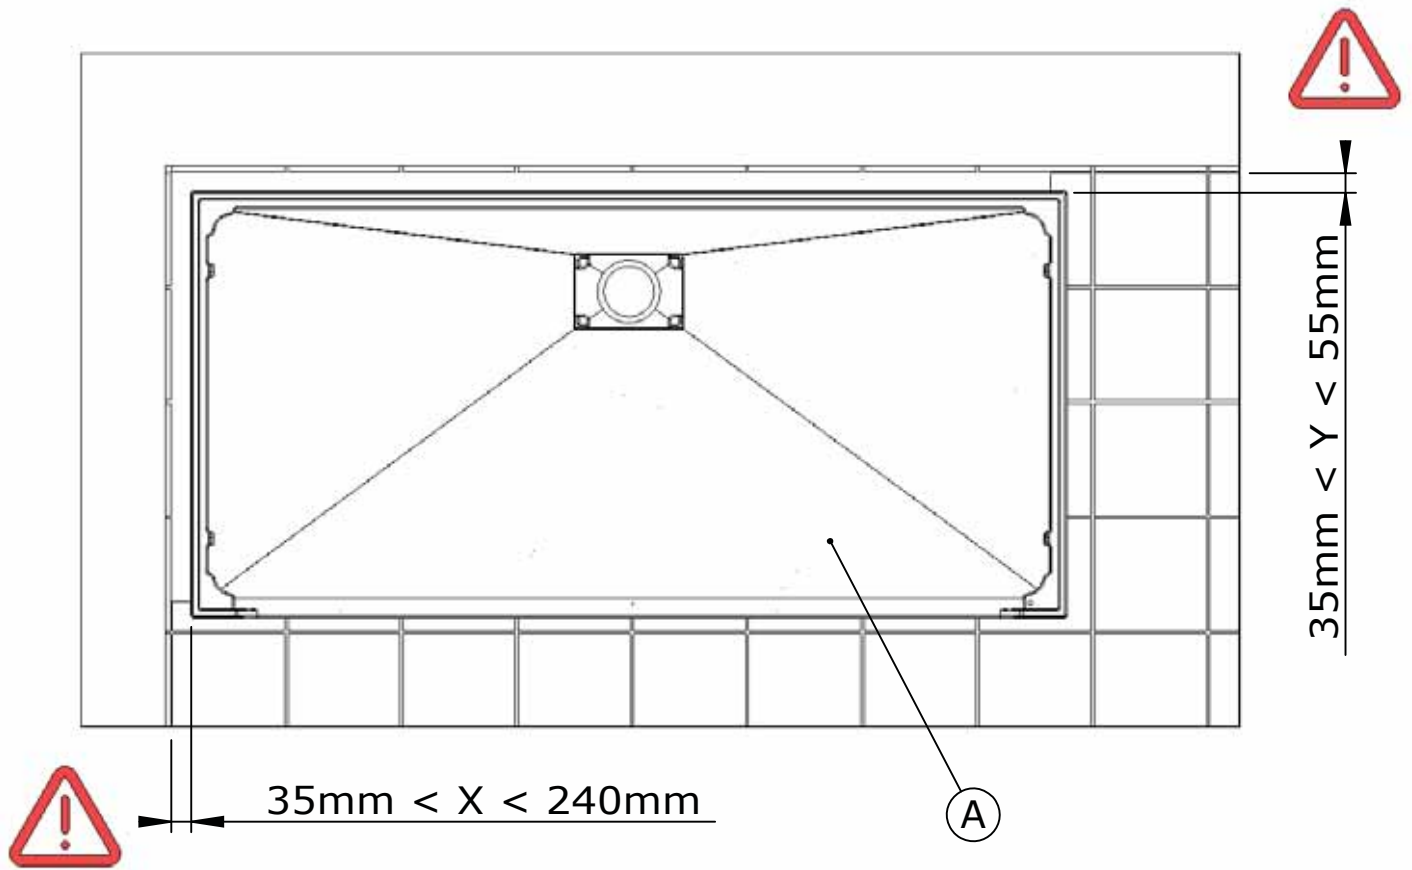


Recess Version

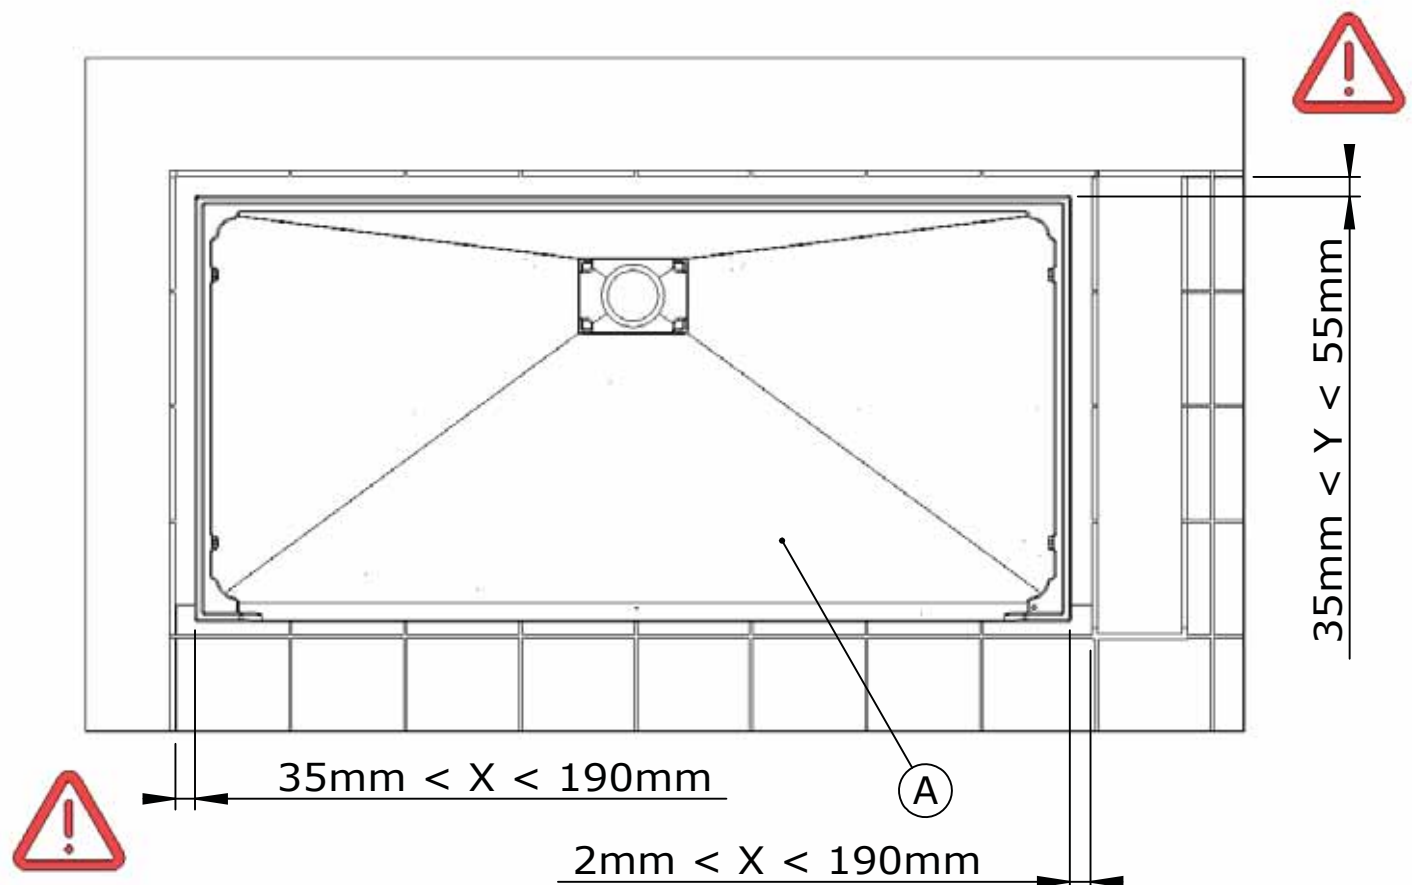

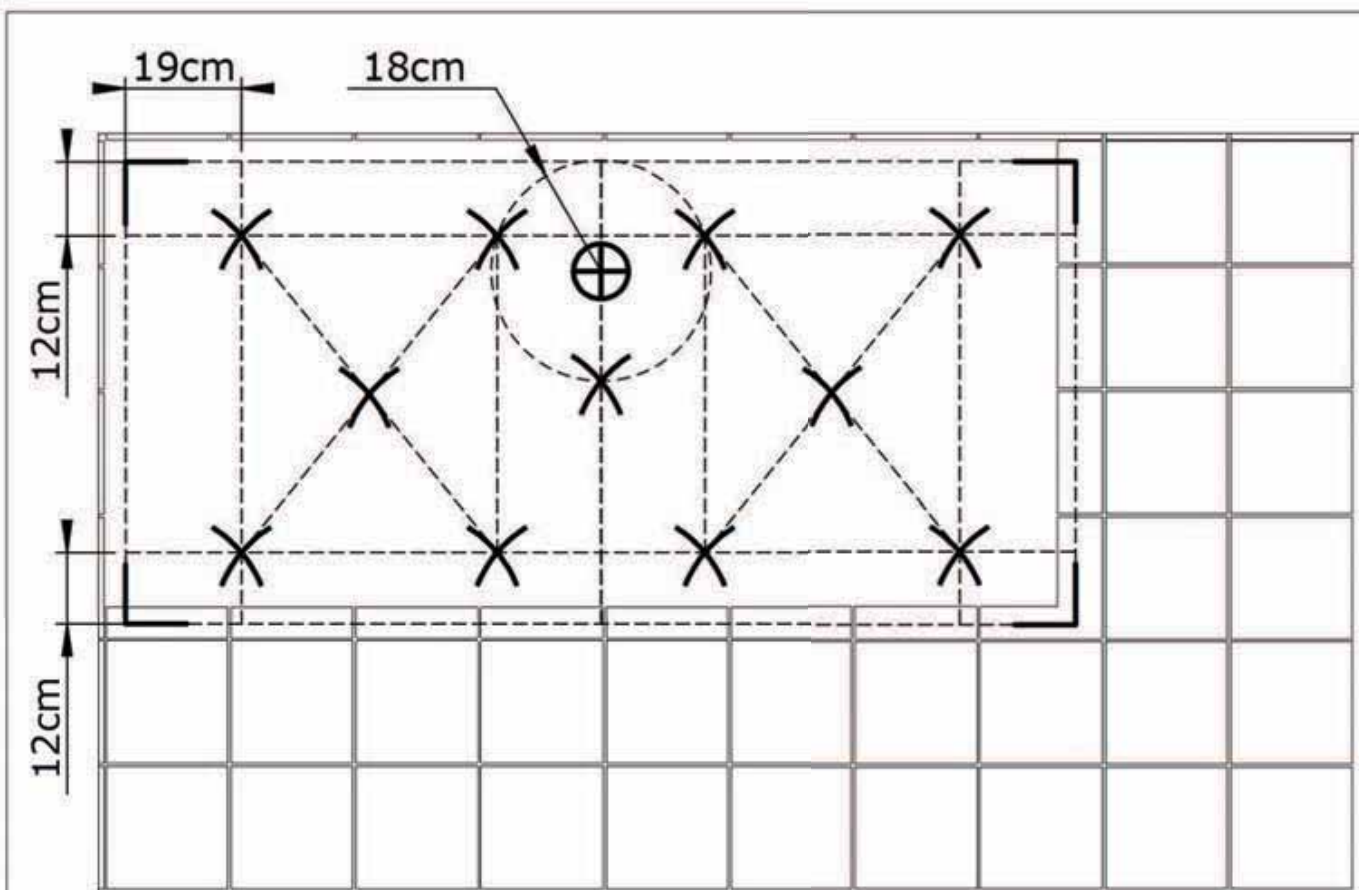
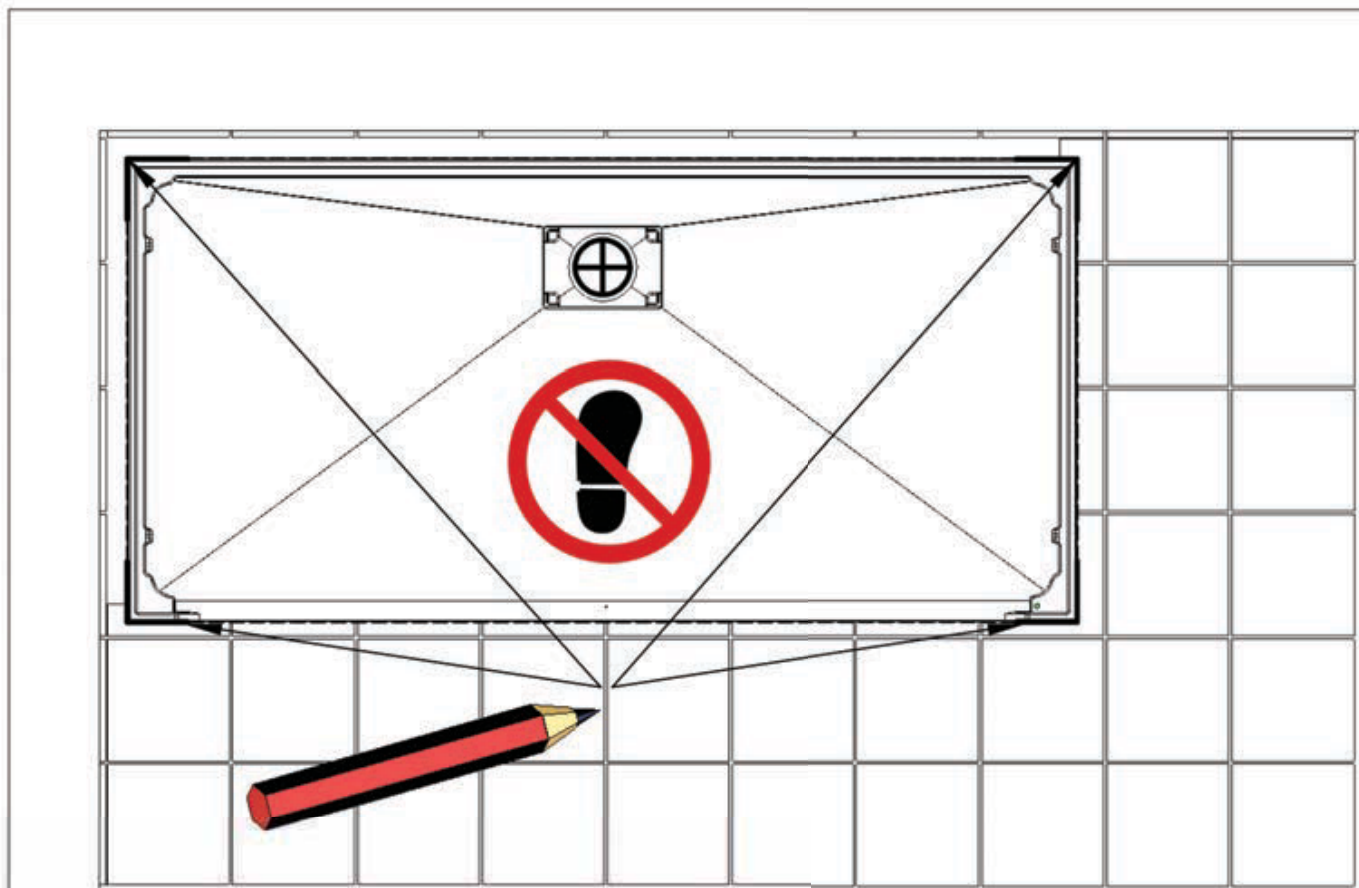


Laying the tray using the adjustable feet

Polyurethane adhesive

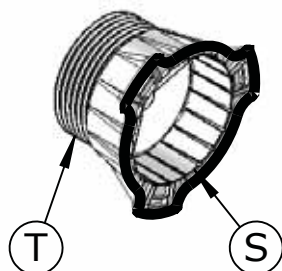


60mm à
110mm

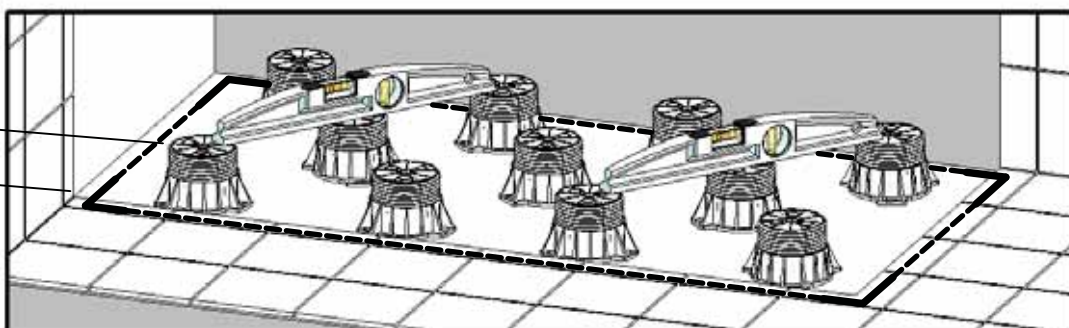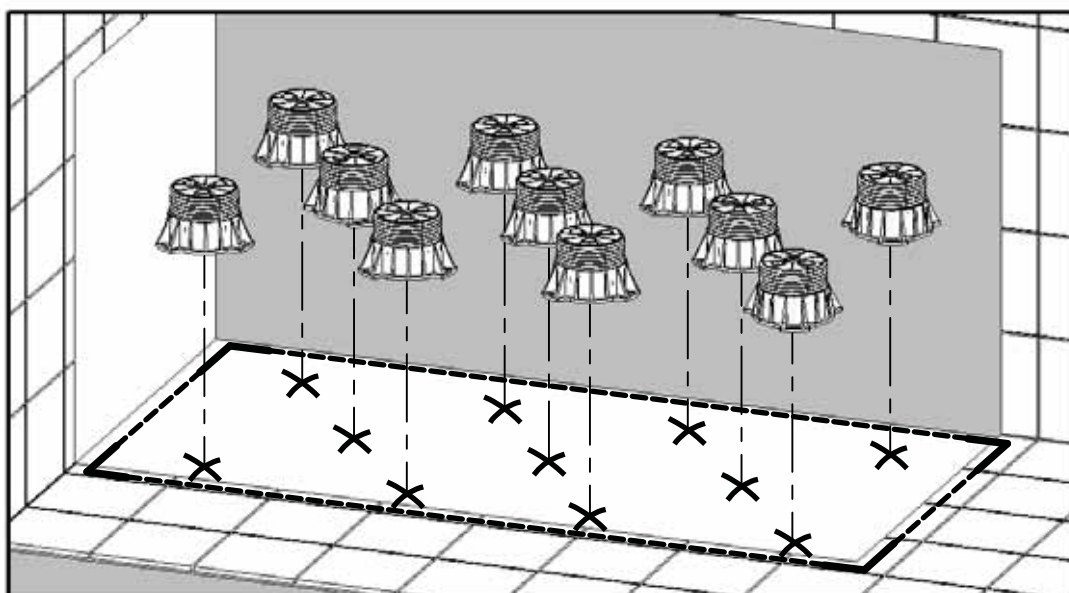



Laying the tray without feet

Polyurethane adhesive

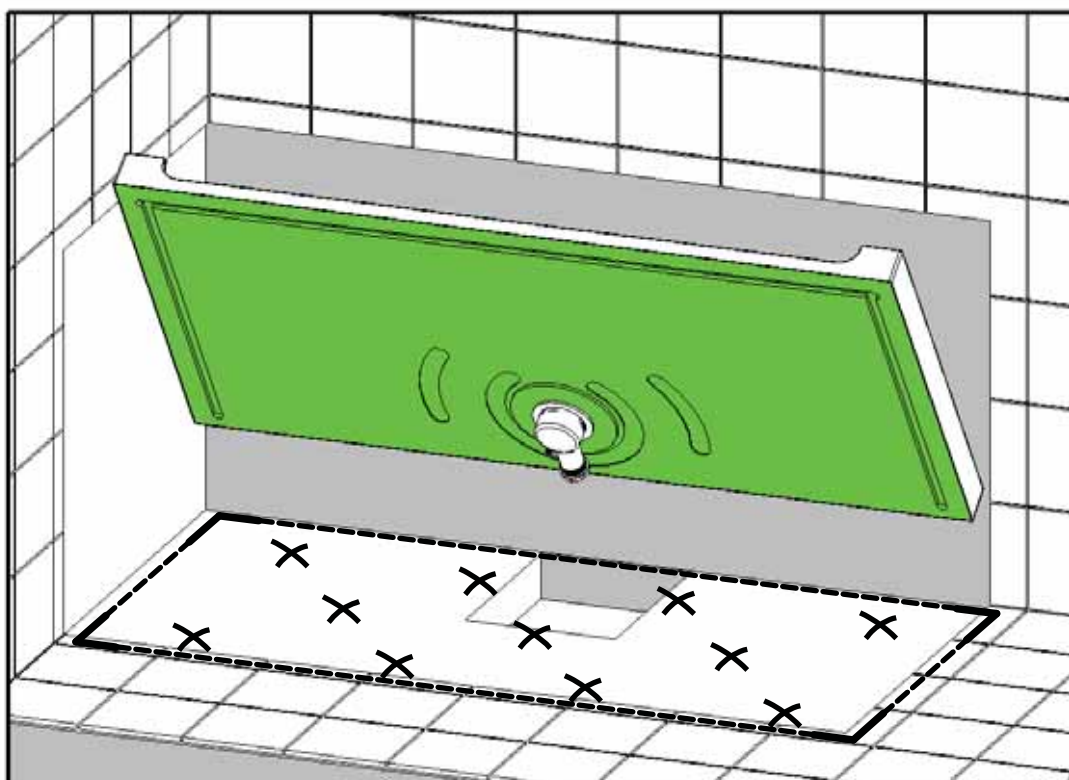

X5


U

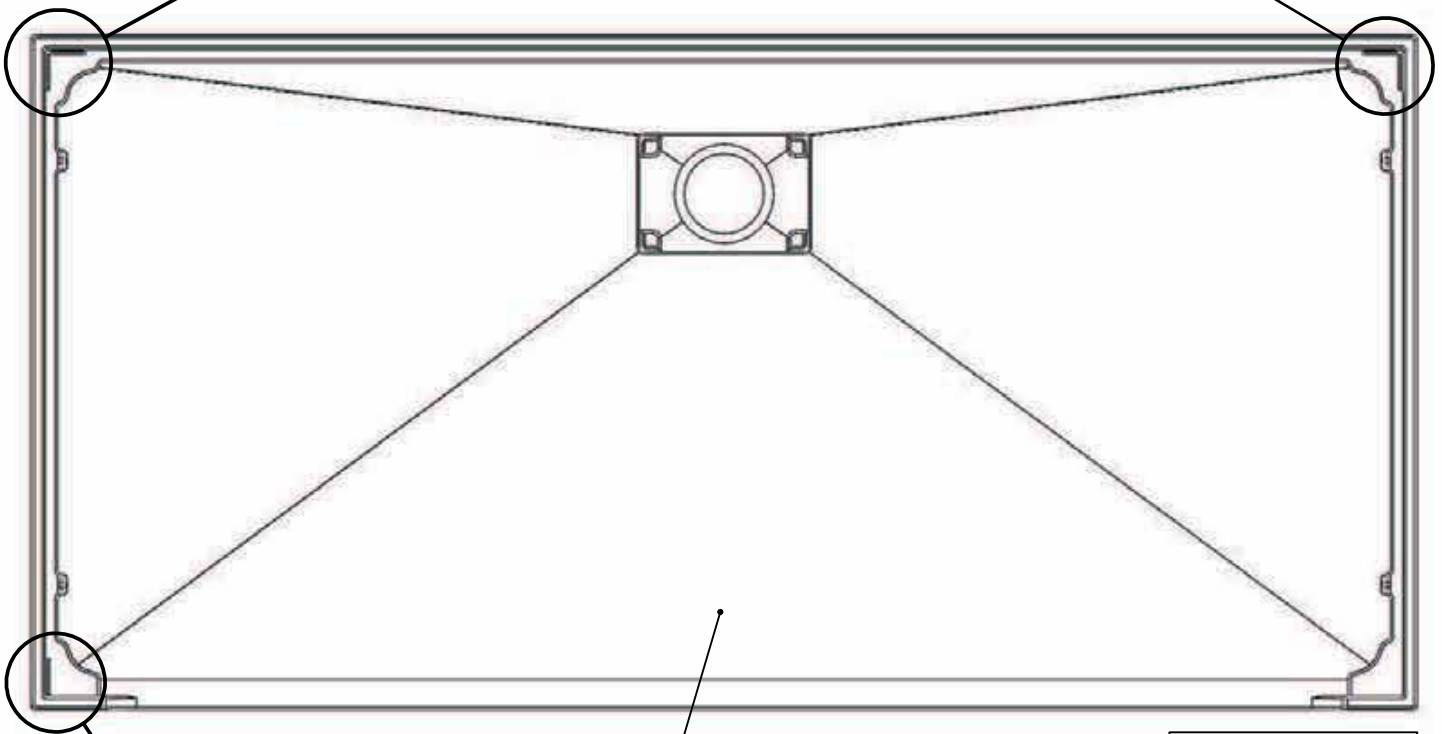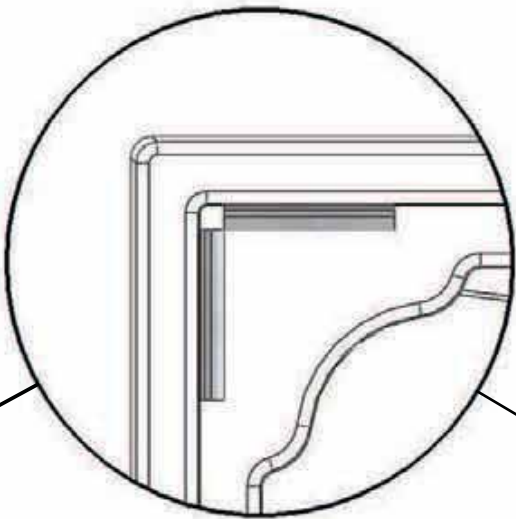


A

U

Side panel

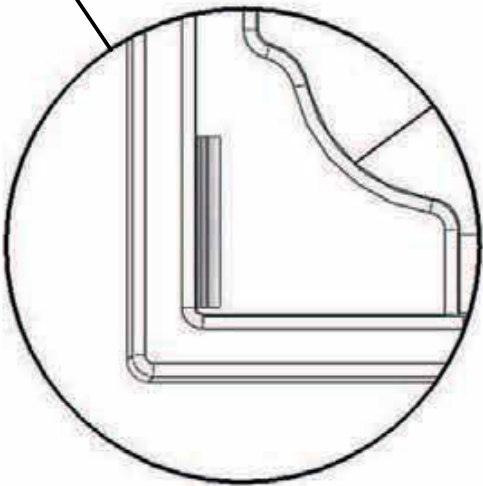


A

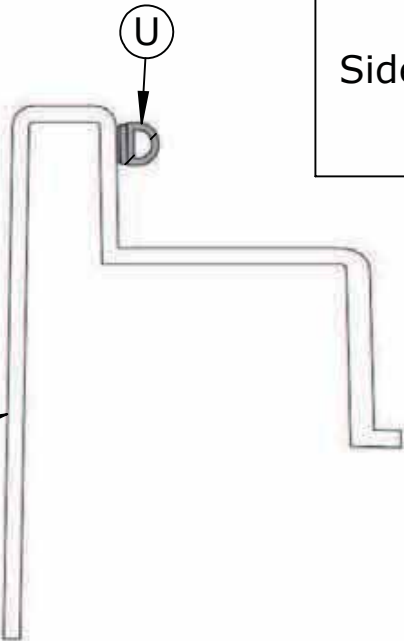




Check that all feet are in contact with the shower tray

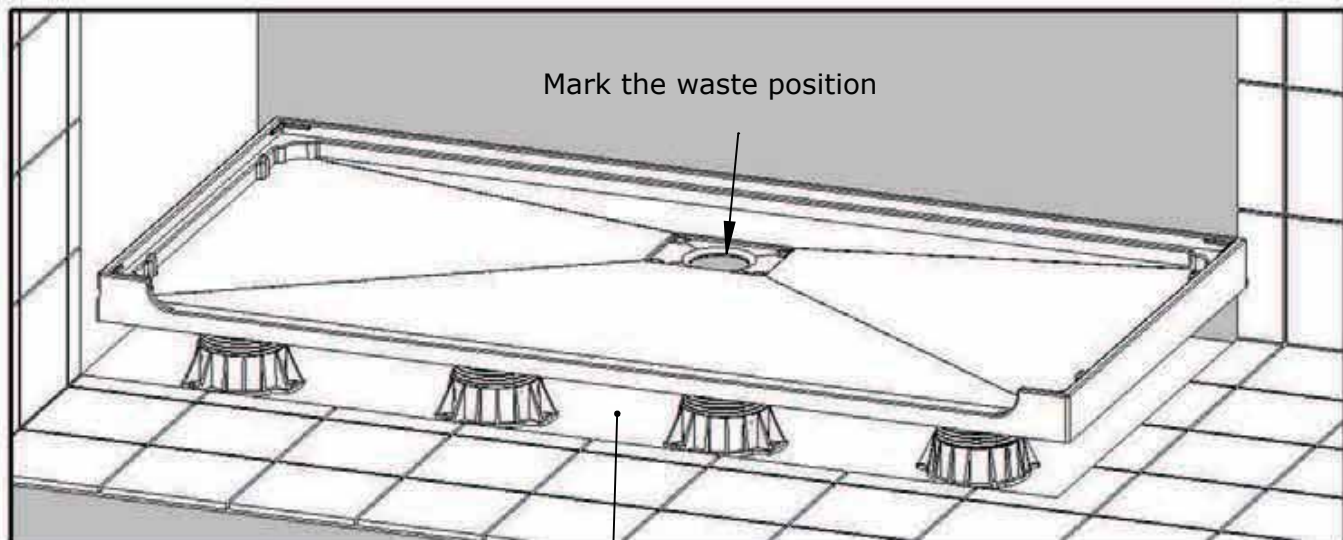


Ensure a solid, dry surface

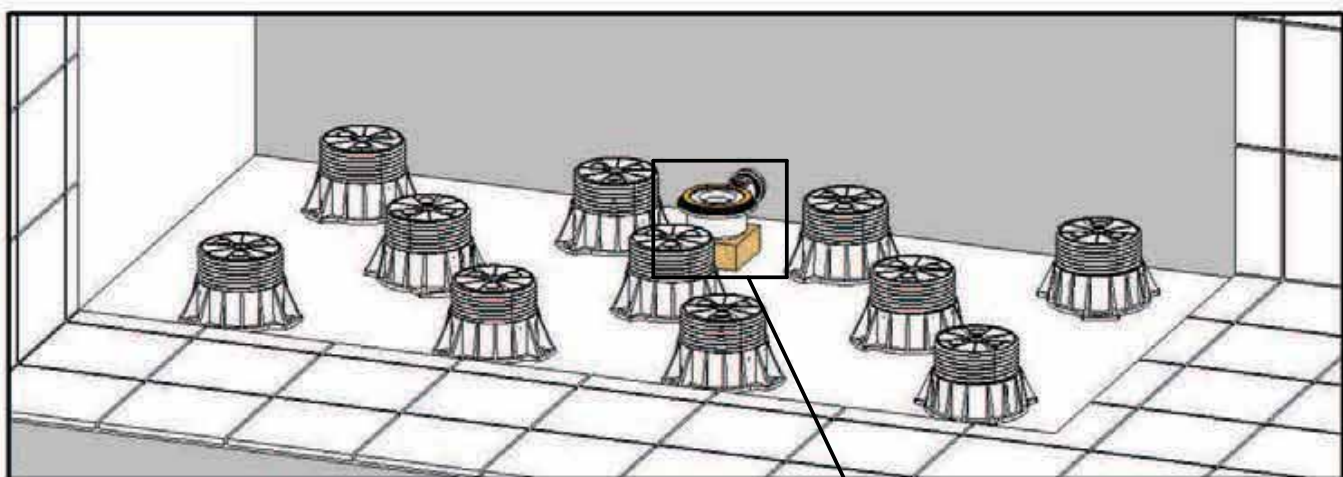


Connect the waste pipe


(W)

Provide support if necessary


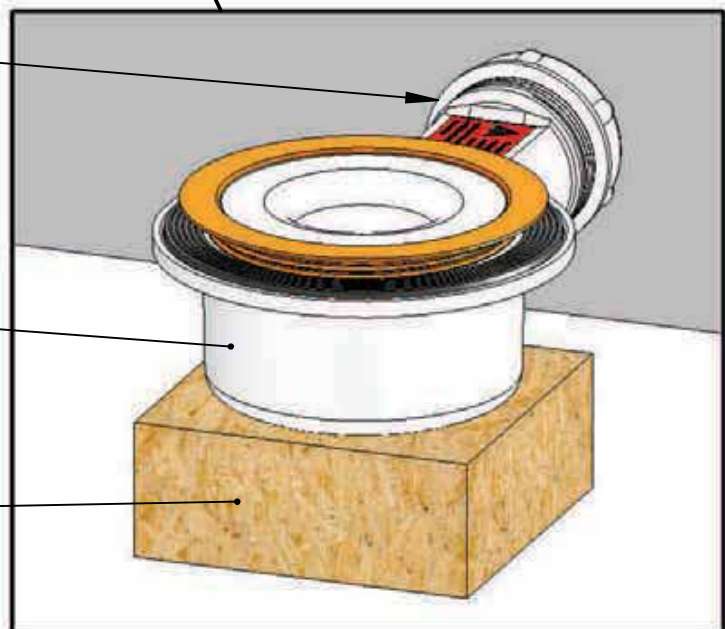


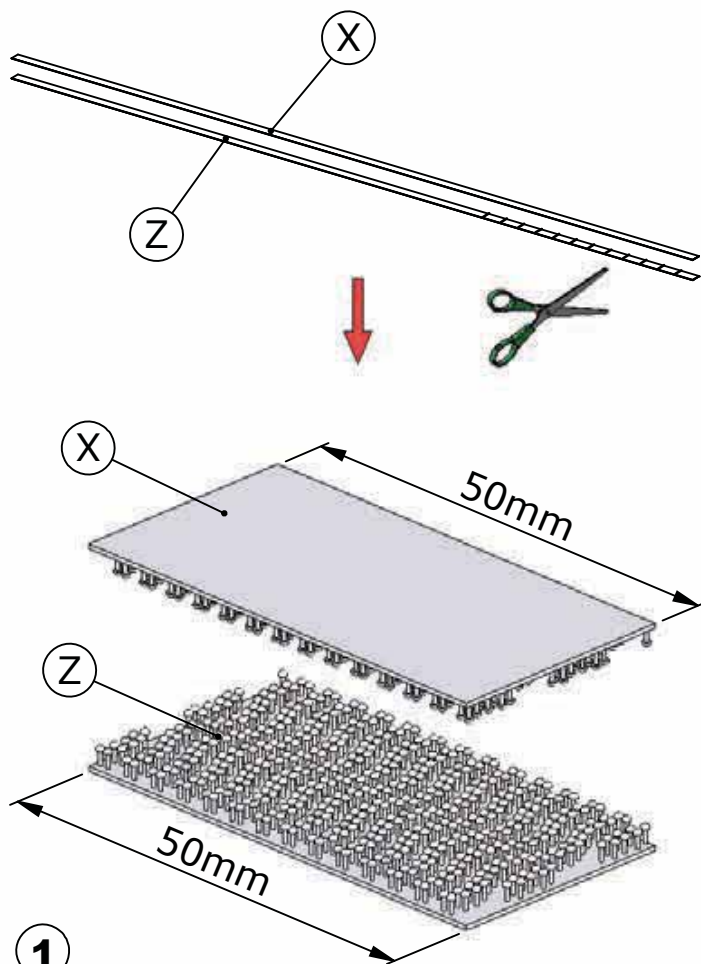

2

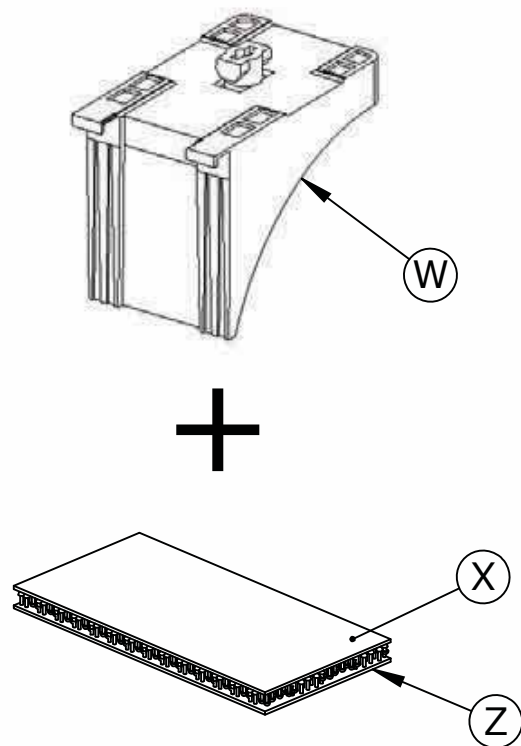




Recess (x4)
Corner (x7)

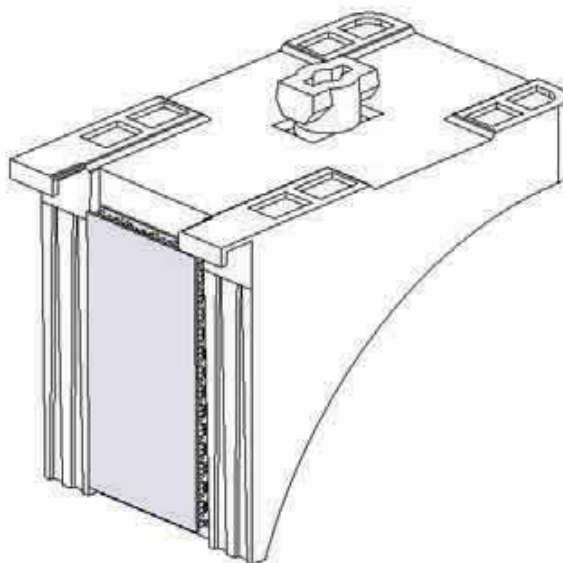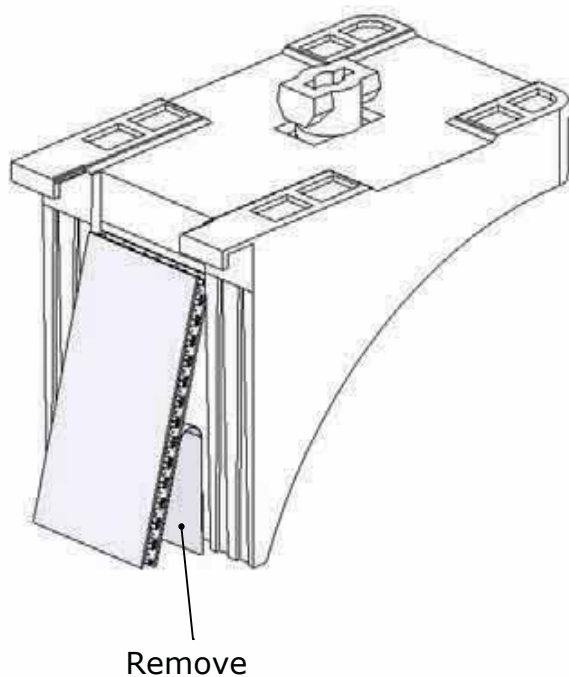

Remove




4

Recess version

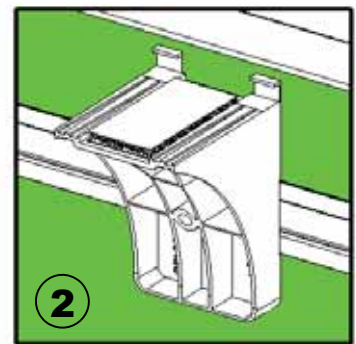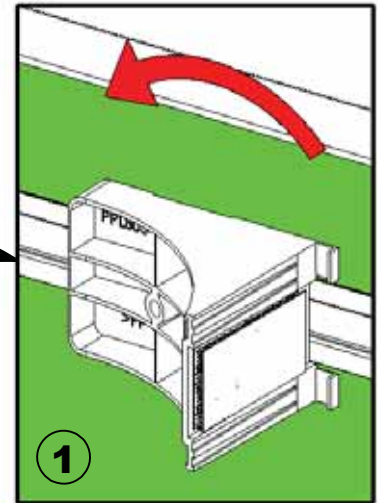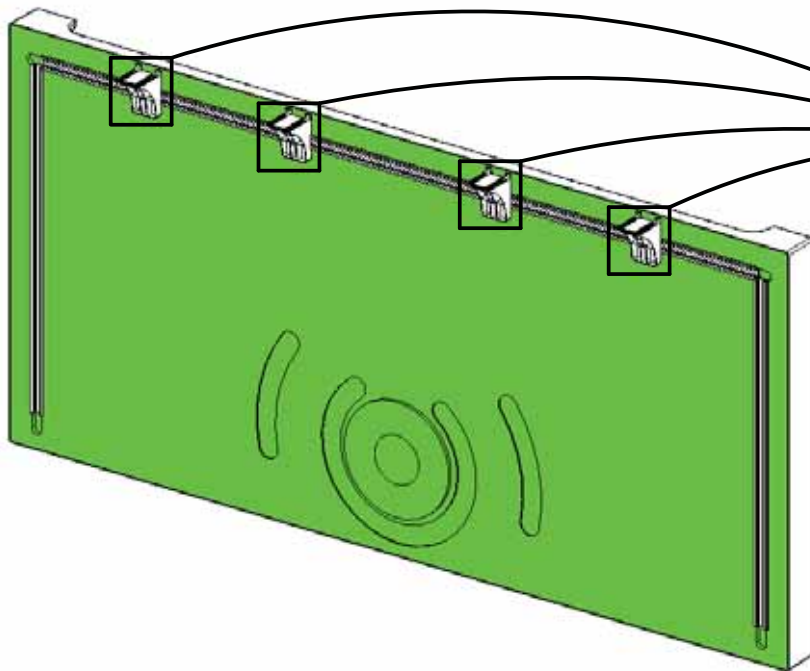


x4



Corner version



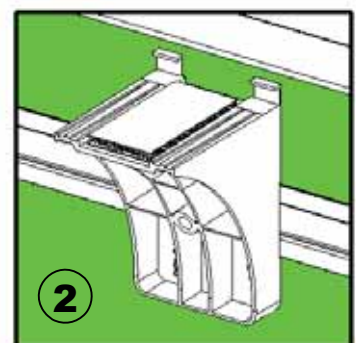
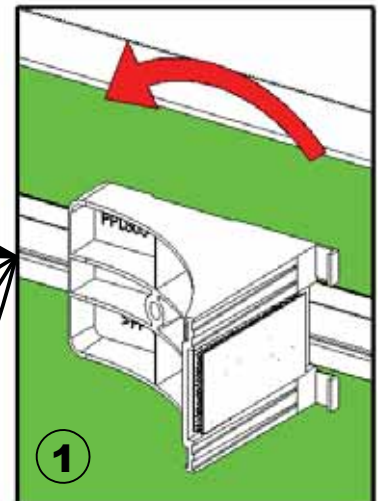
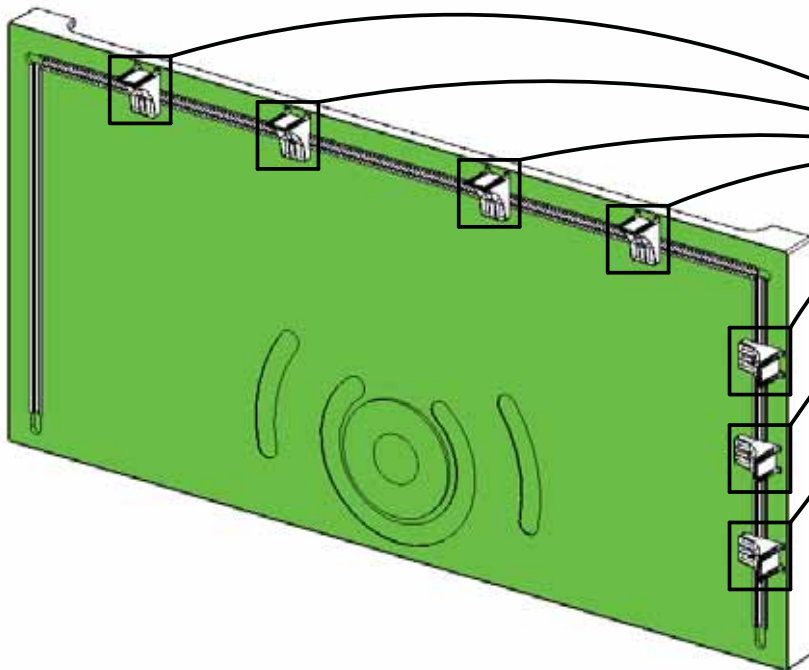



x7

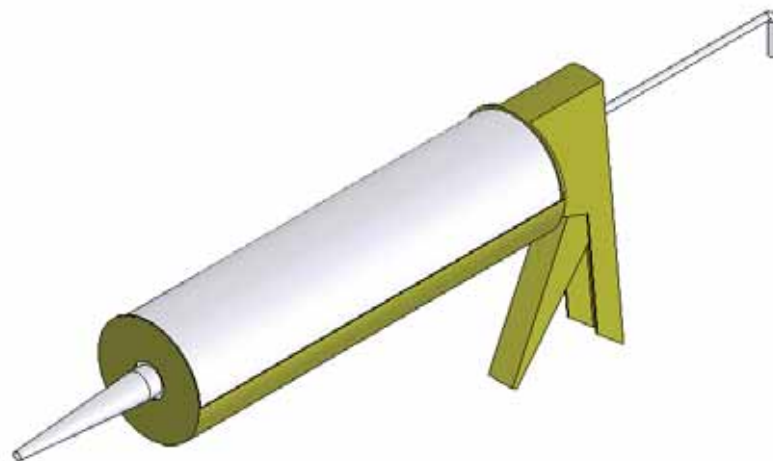


Polyurethane adhesive

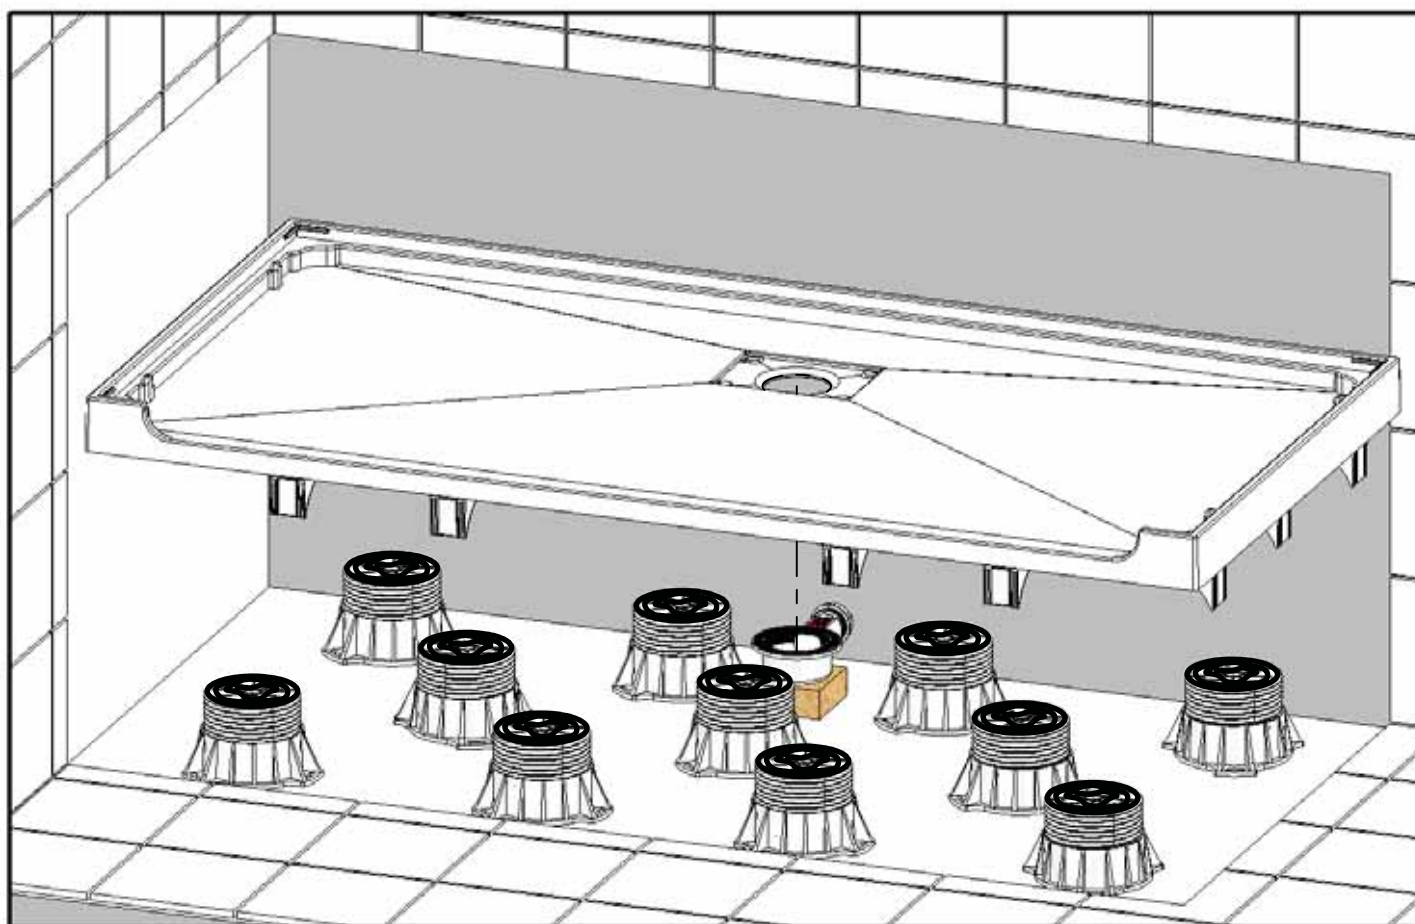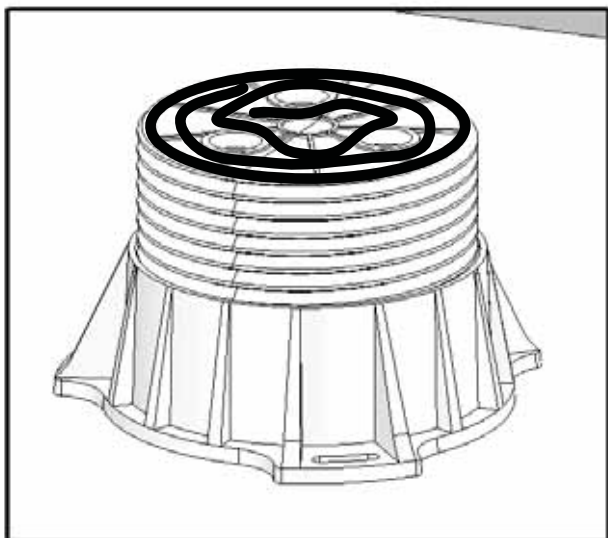

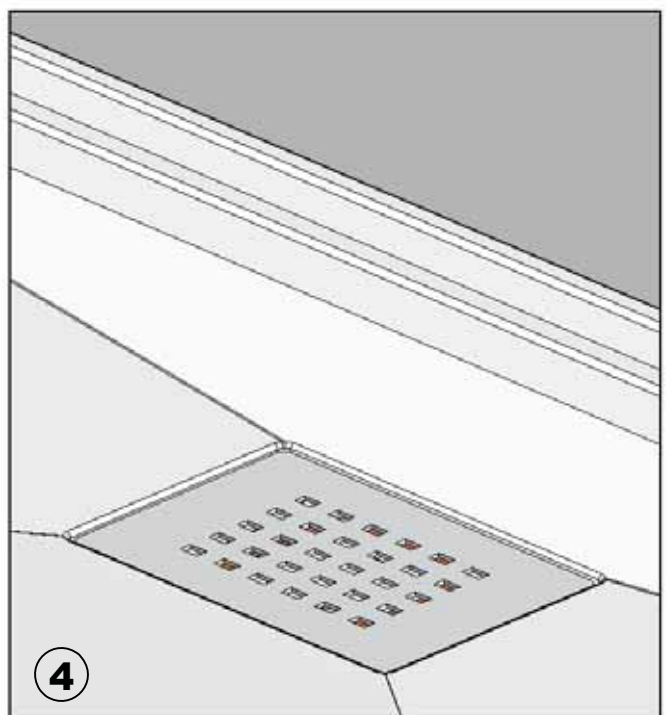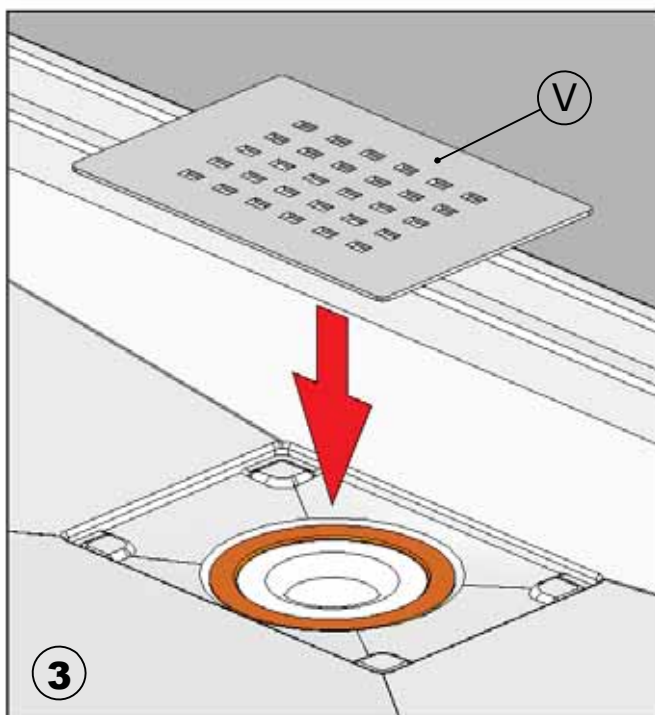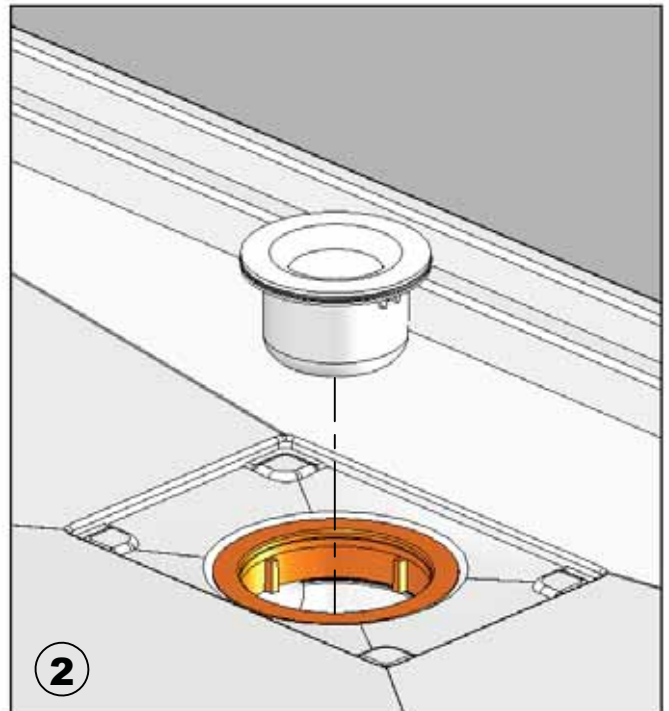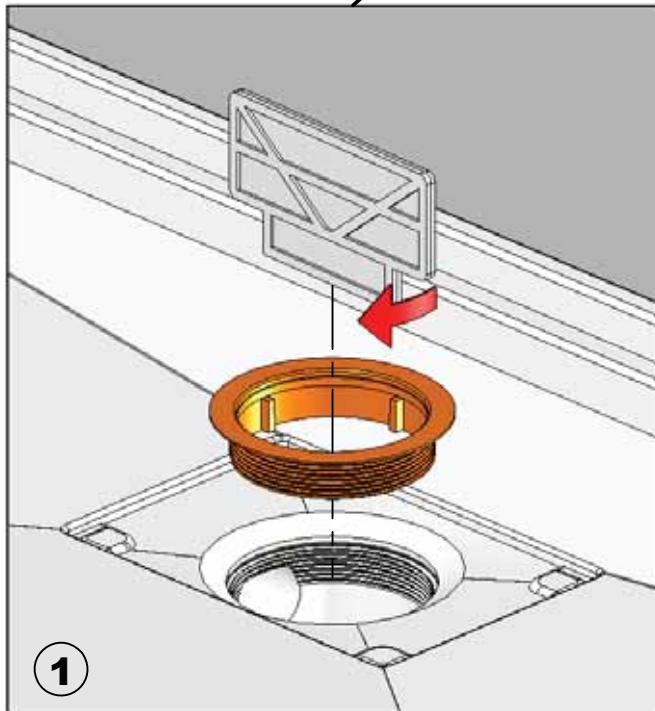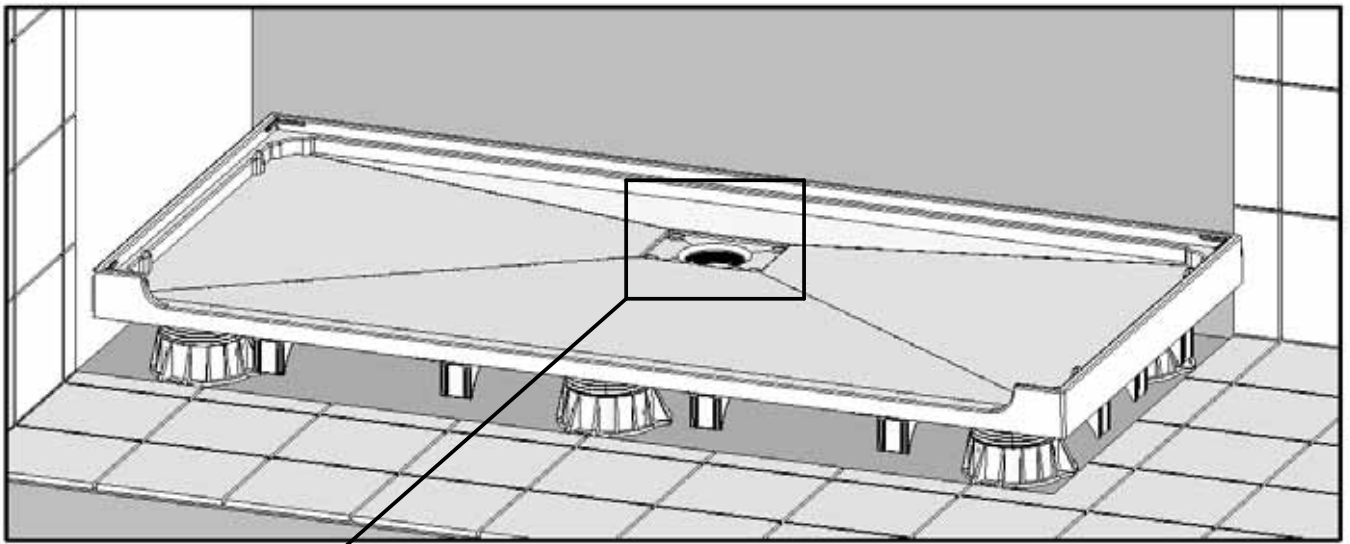


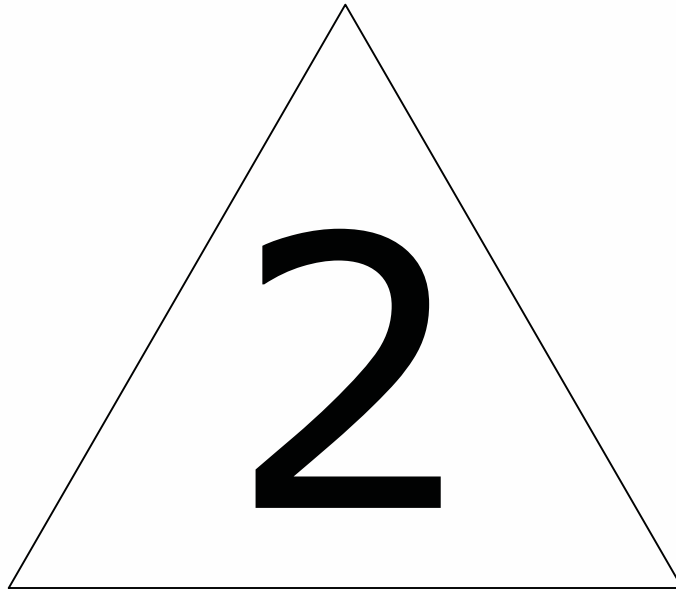

Et / And / Y / E / EN


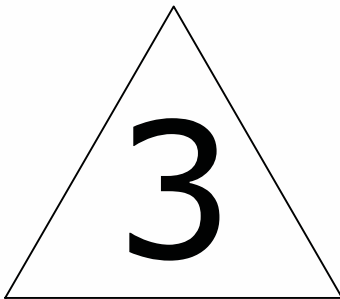


Ou / Or / O / O / EN

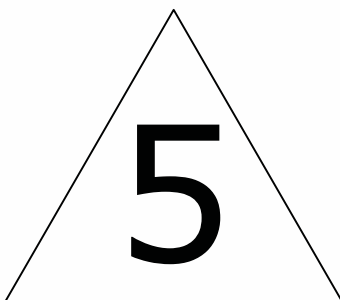



ATTENTION choose hand of panels

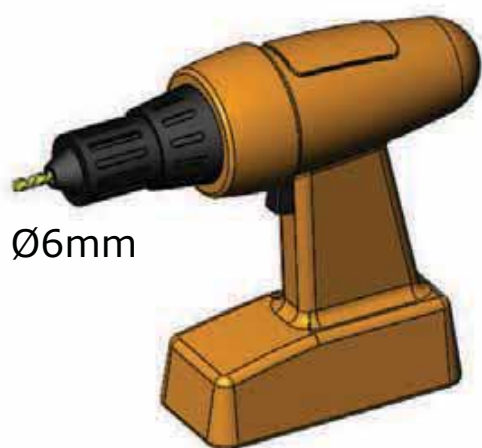
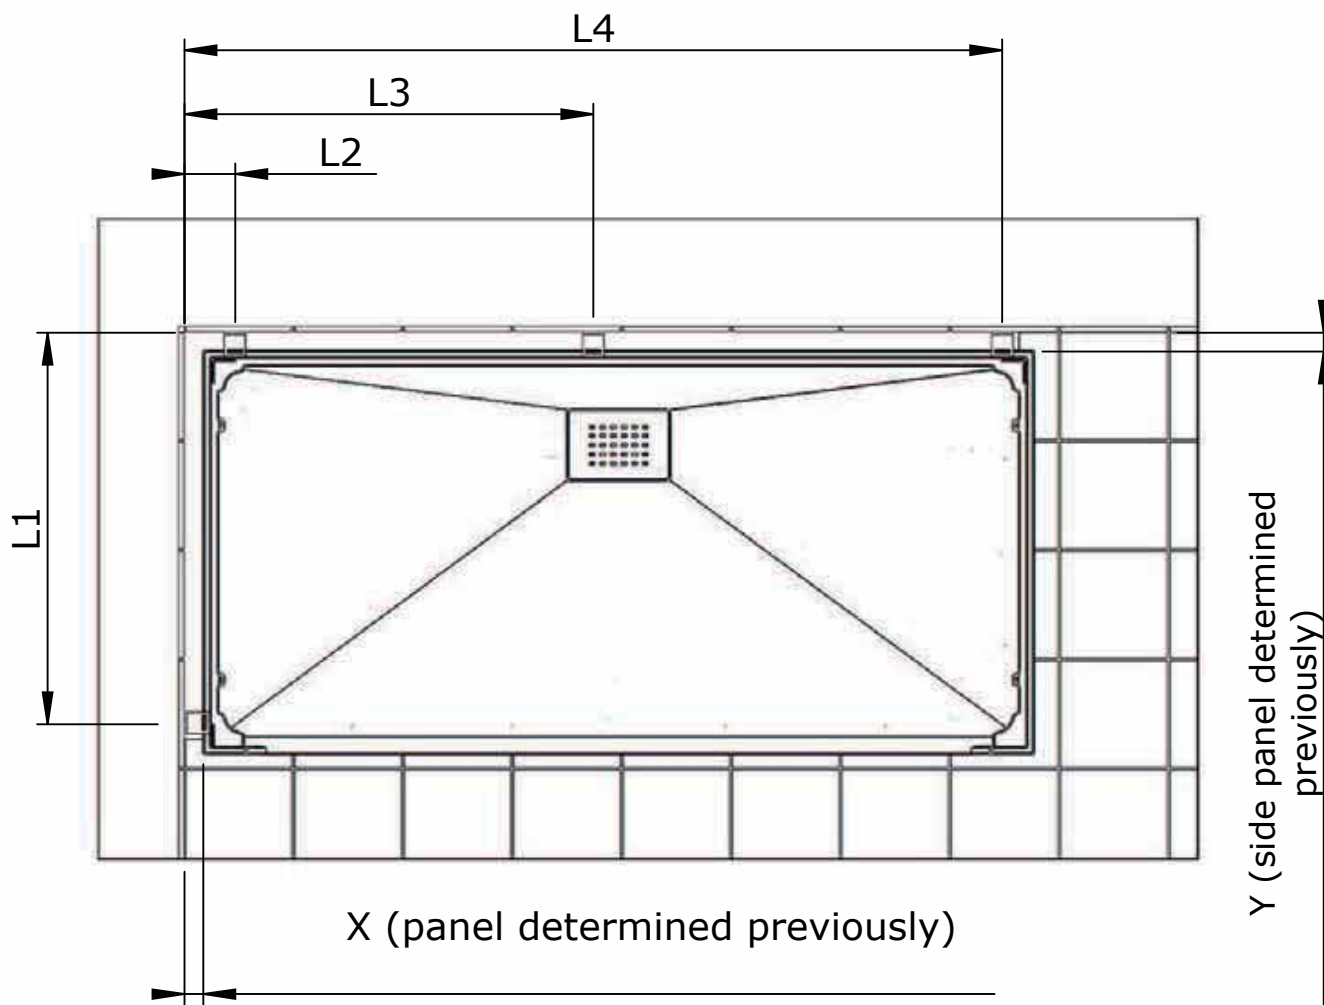



Ø6mm

H=1953*

Taille	L1	L2	L3	L4
670x1200	570+Y	60+X	600+X	1100+X
700x1200	600+Y		630+X	
700x1400				1300+X
700x1600				1500+X
700x1700				1600+X
800x1200	700+Y		730+X	1100+X
800x1400				1300+X
800x1600				1500+X
800x1700				1600+X
900x1200	800+Y		830+X	1100+X
900x1400				1300+X
900x1600				1500+X
900x1700				1600+X


*The dimension H is taken from the top rim of the shower tray.

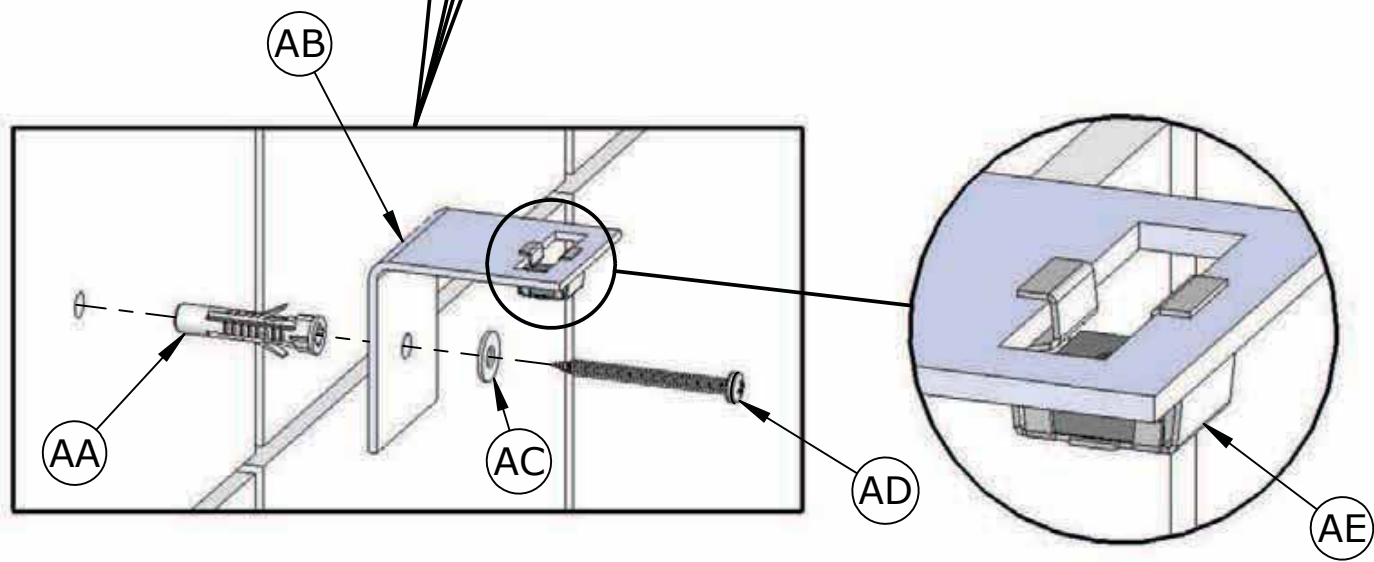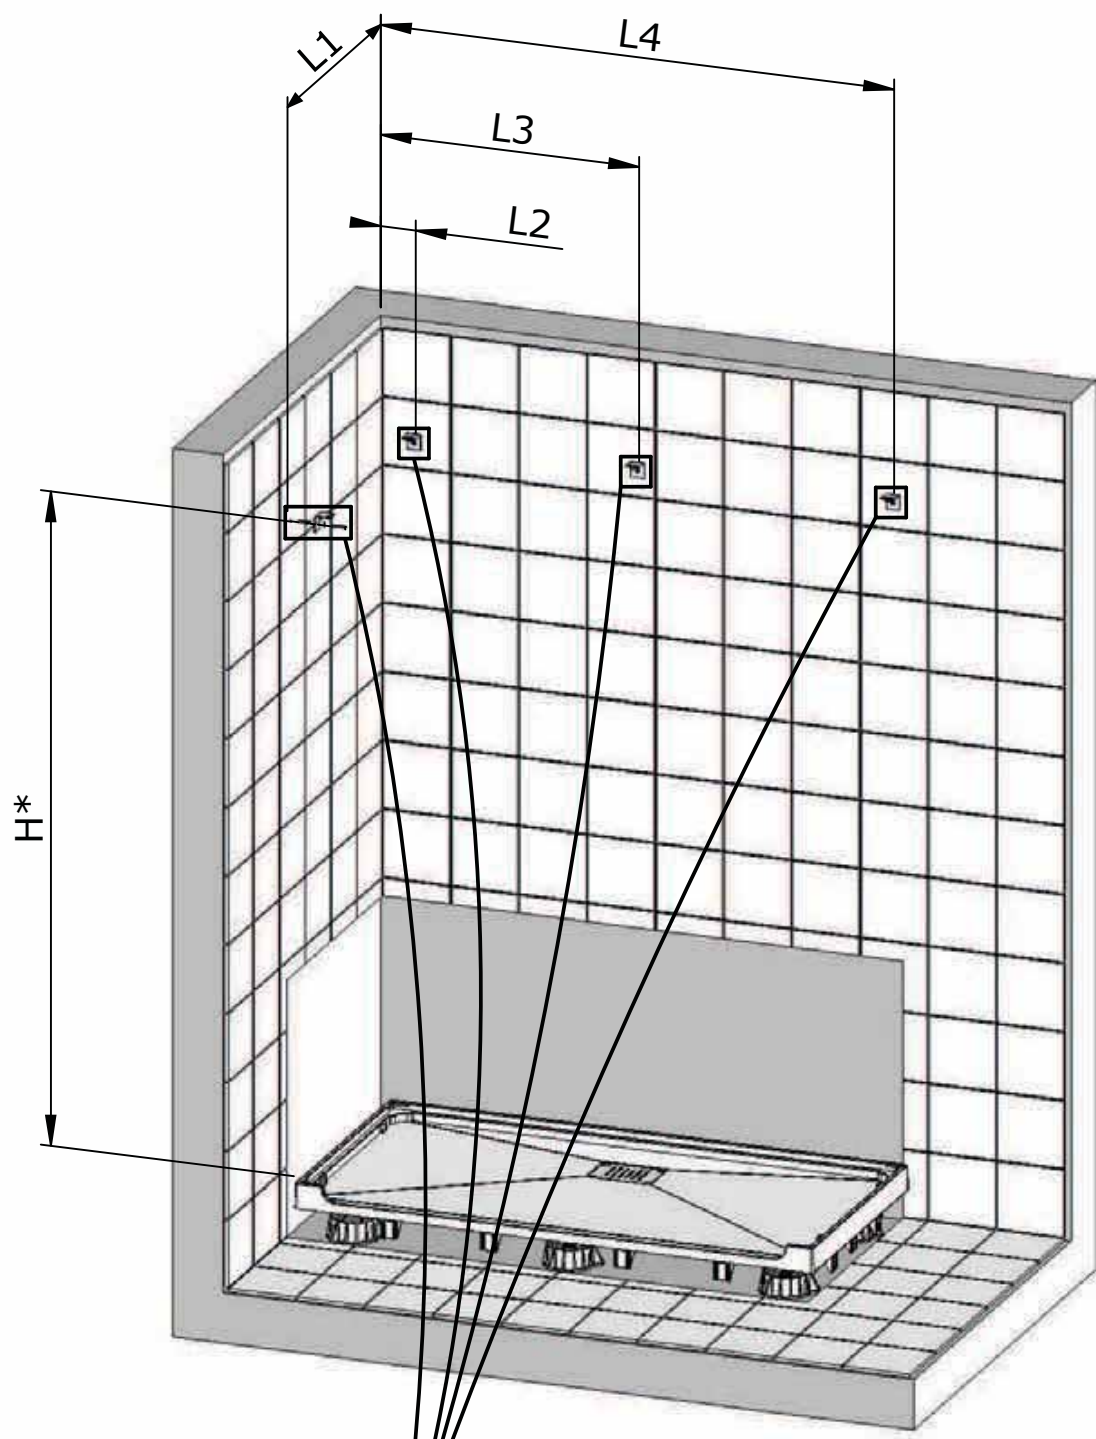

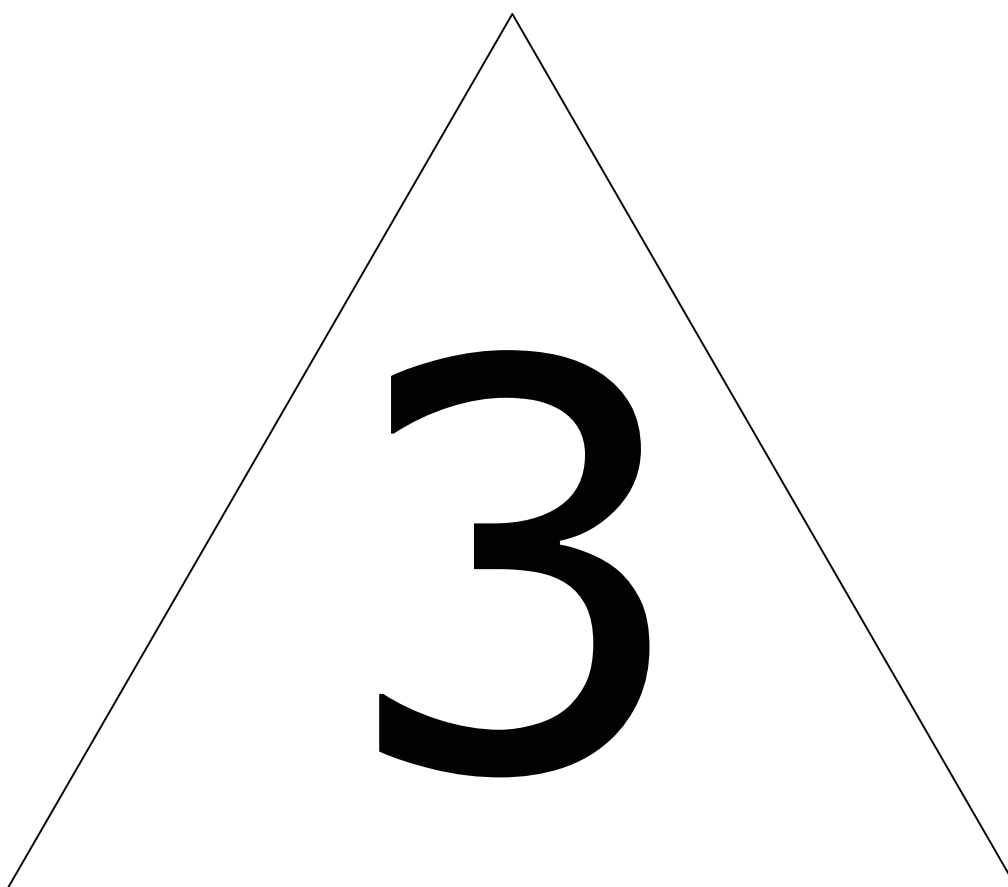




NOTE. The seat and shower panel are interchangeable

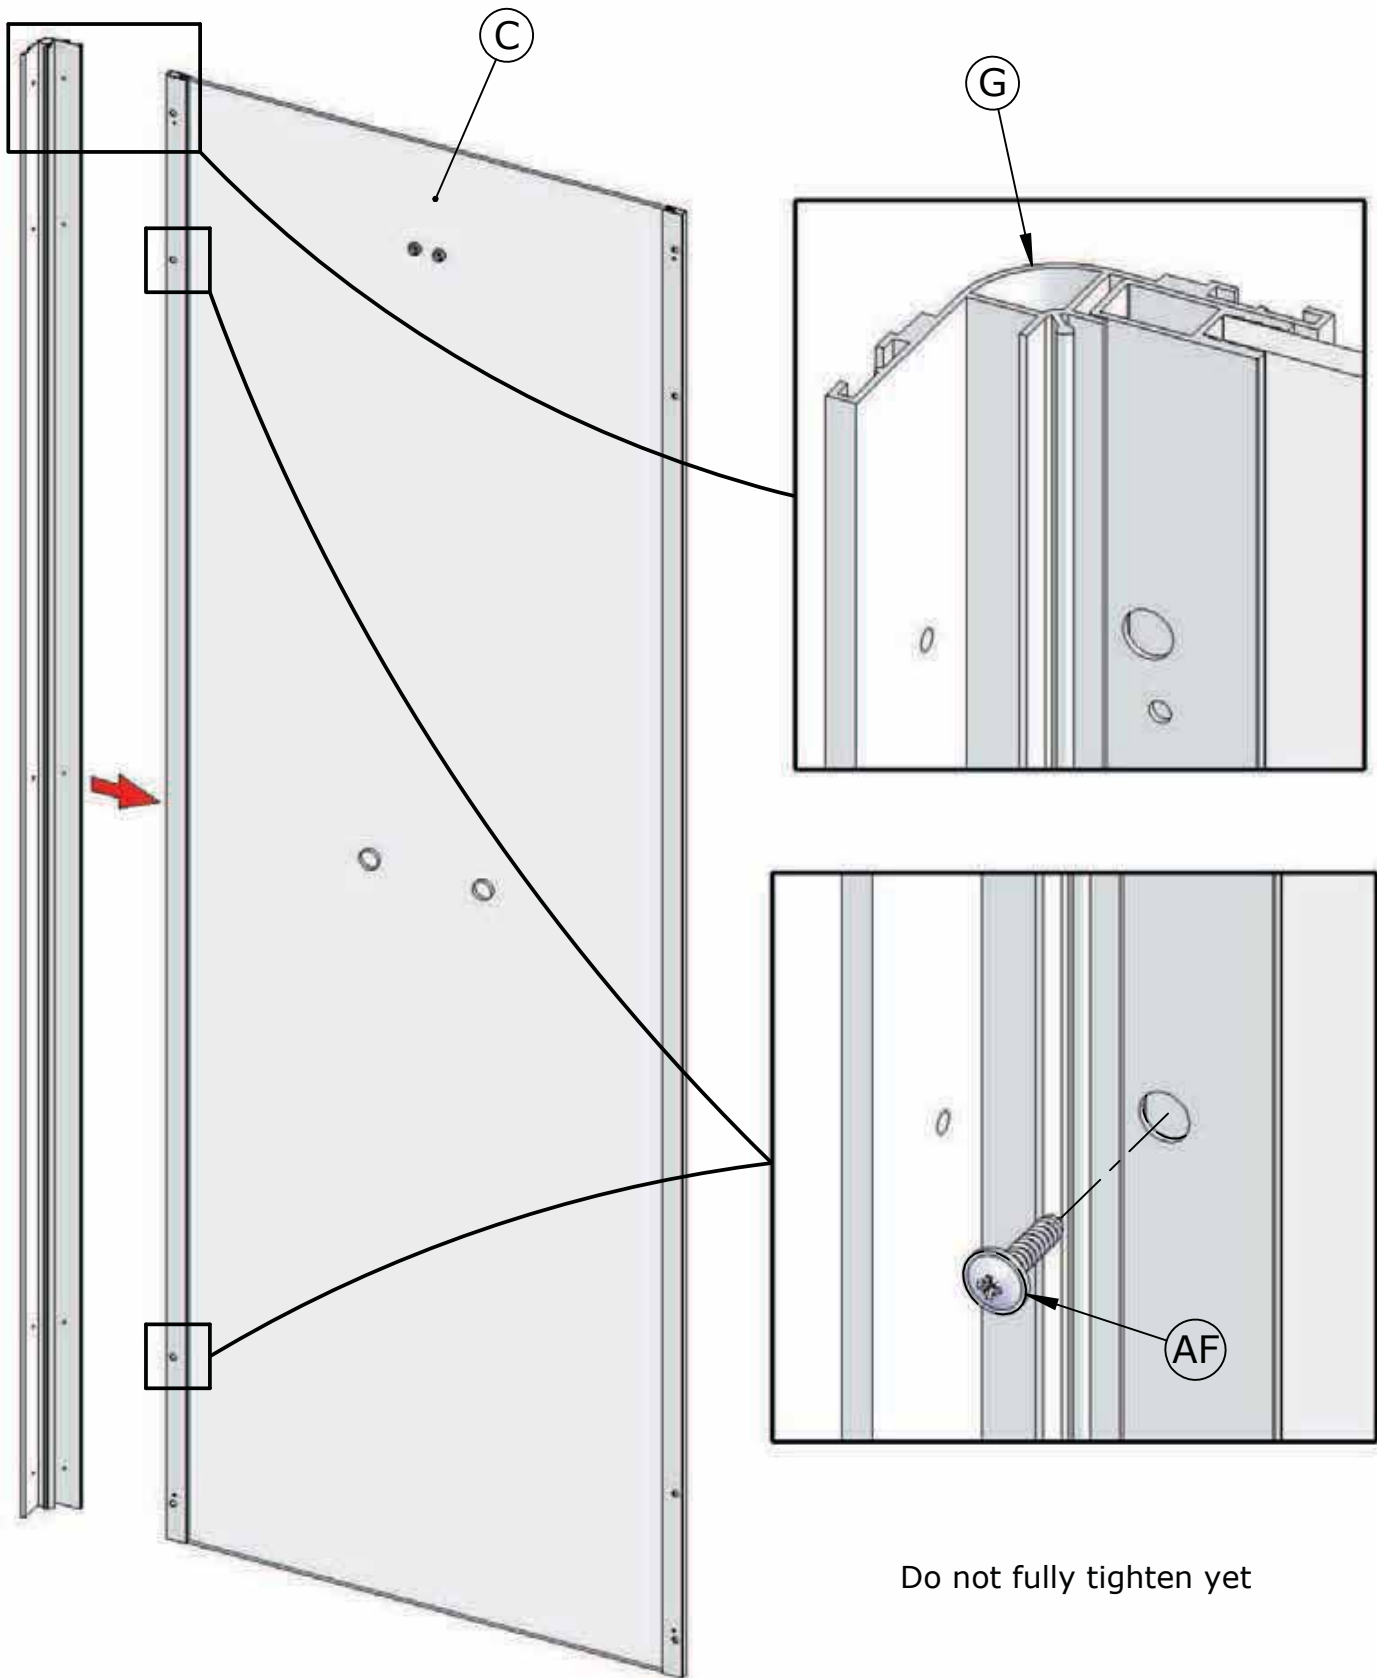


Do not fully tighten yet


MECA


Not applicable in UK

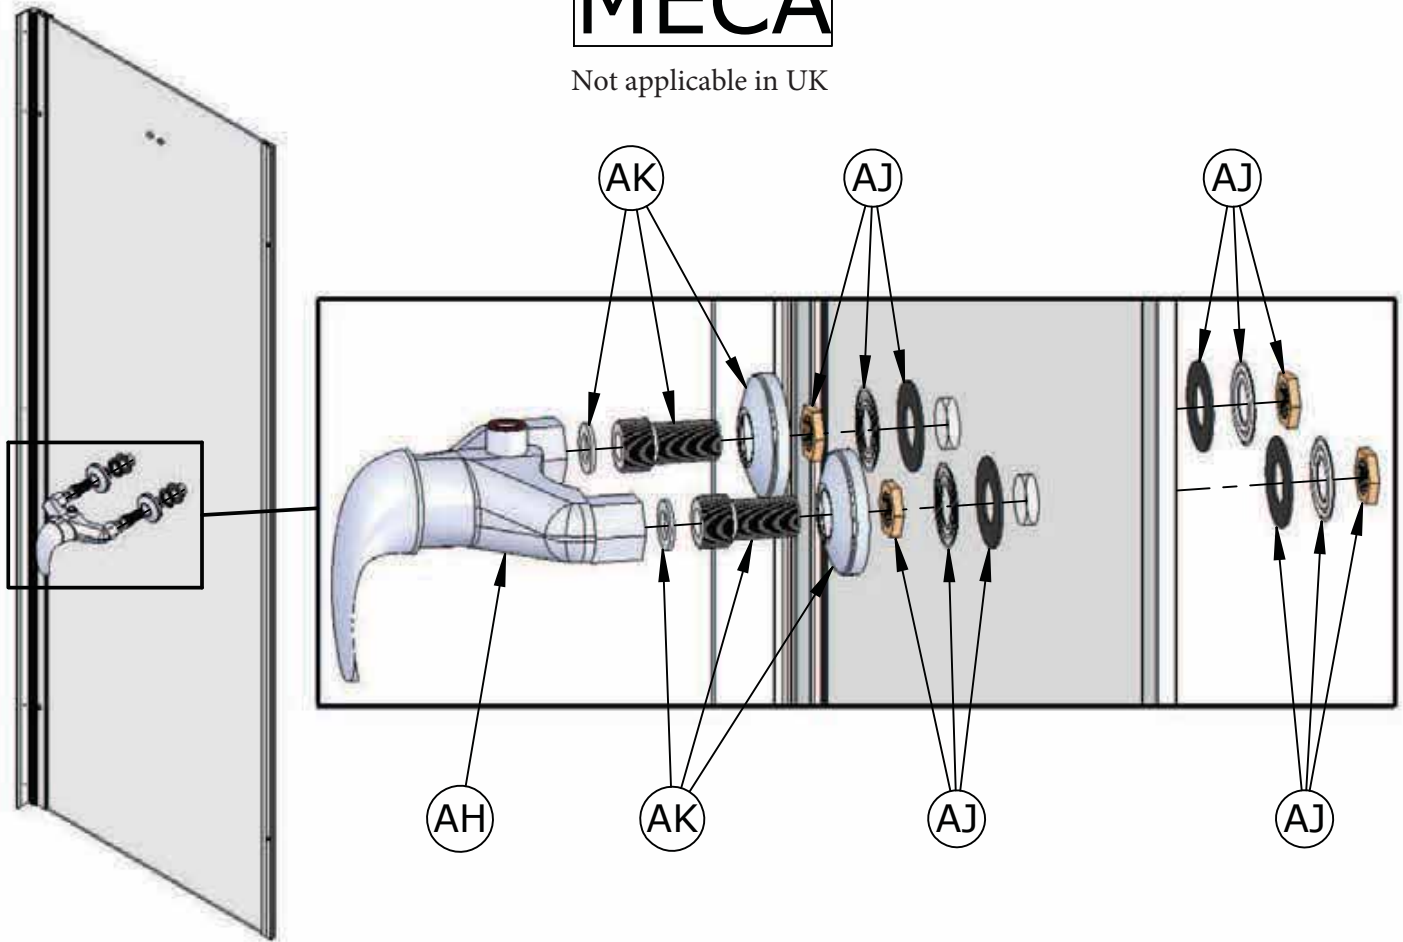

THERMO

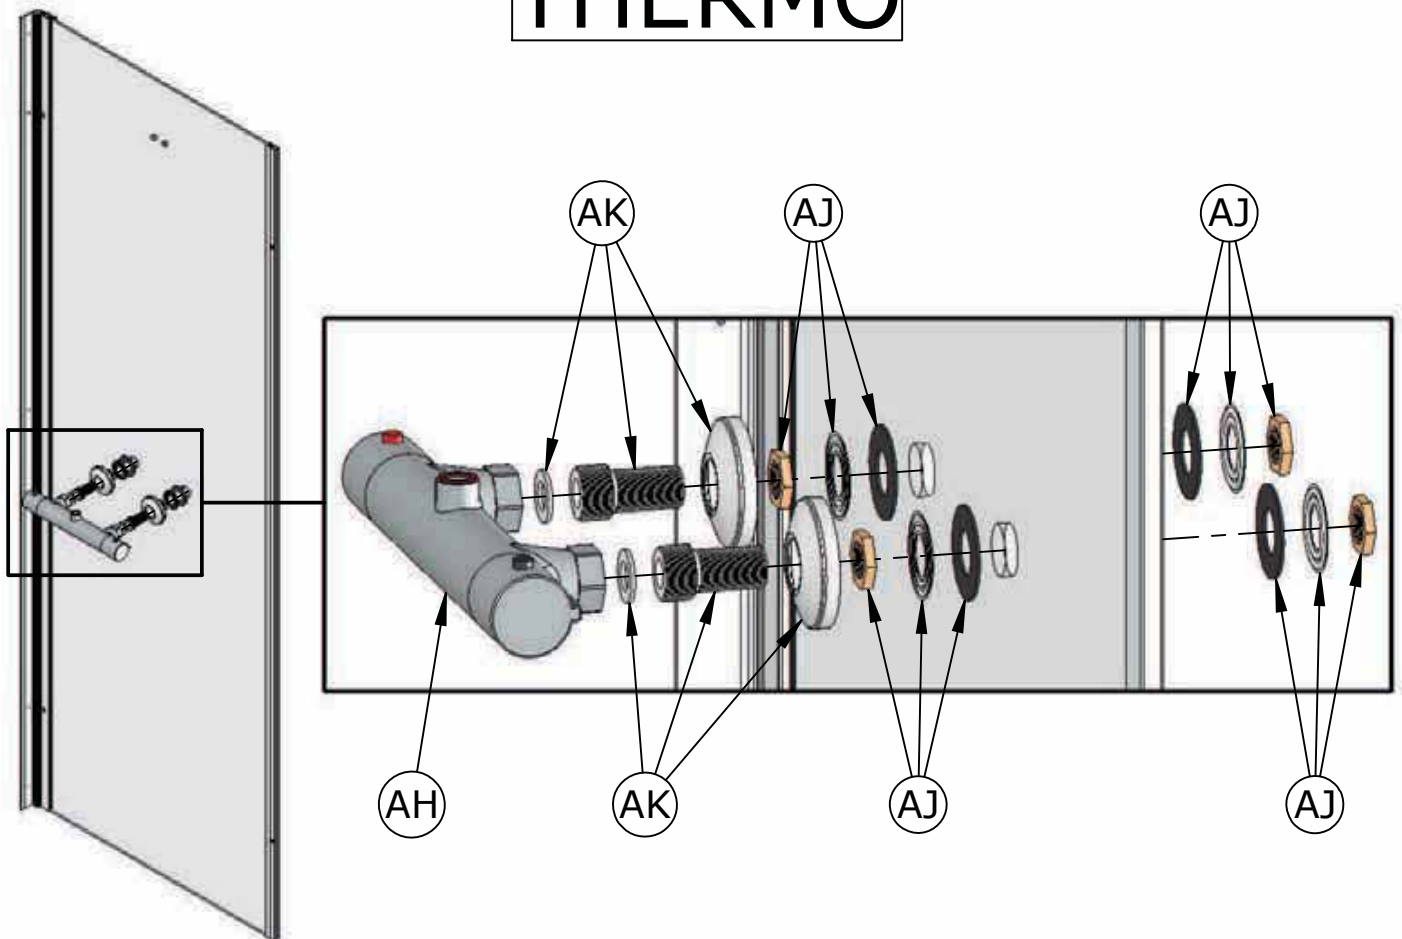


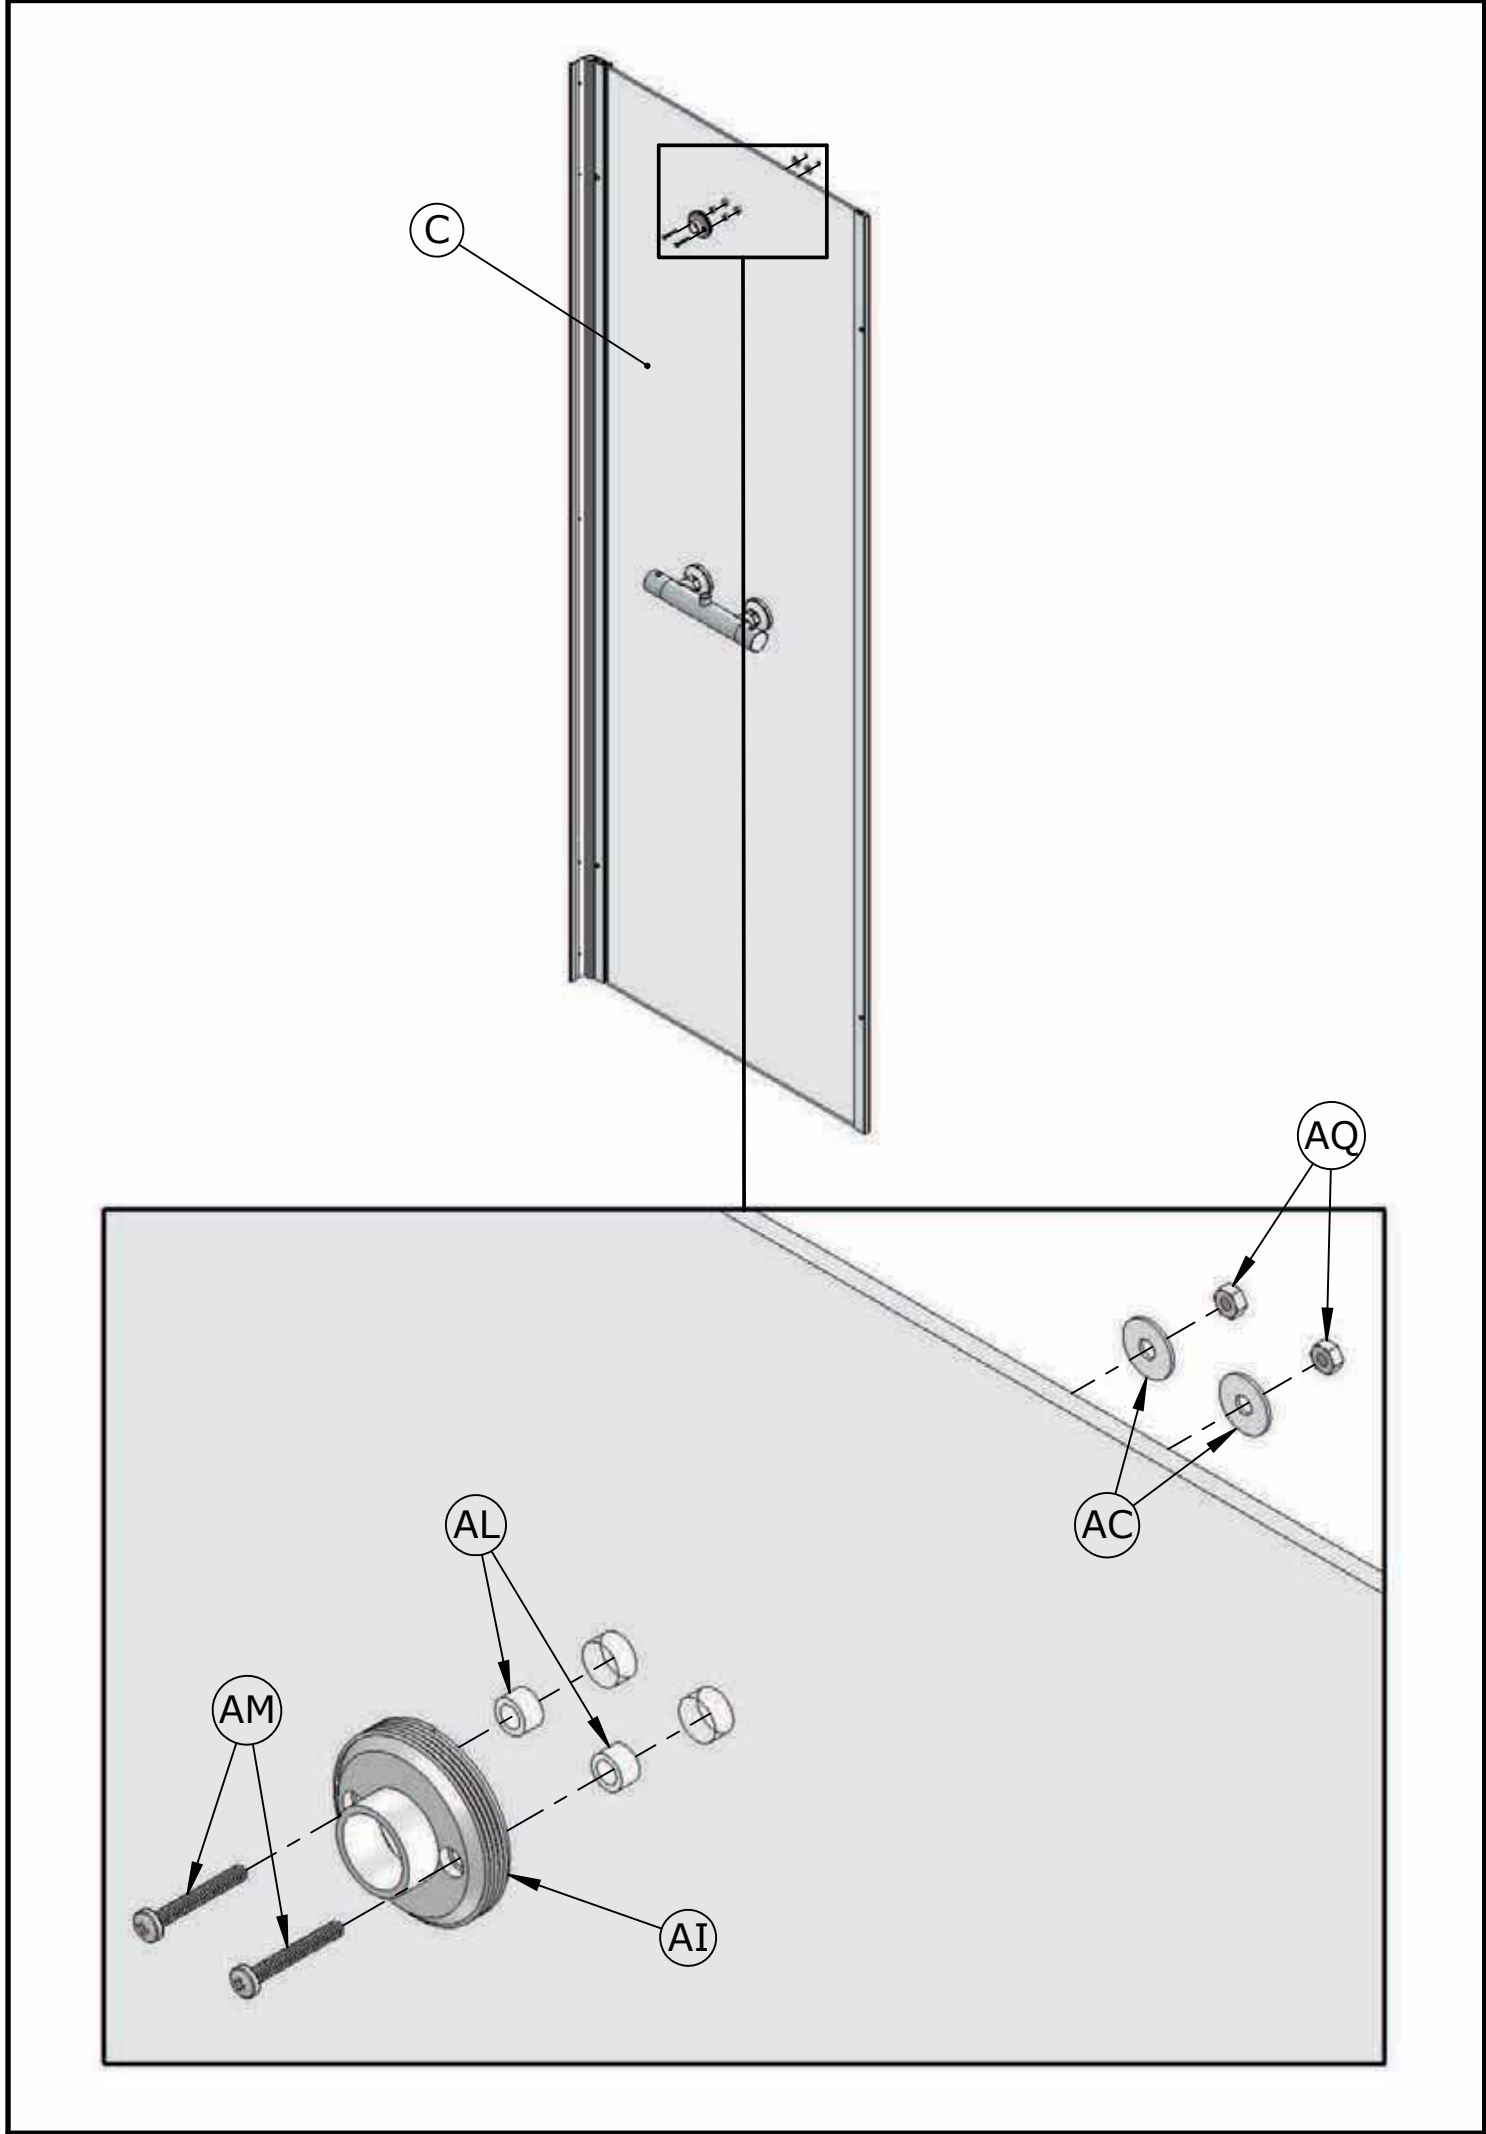

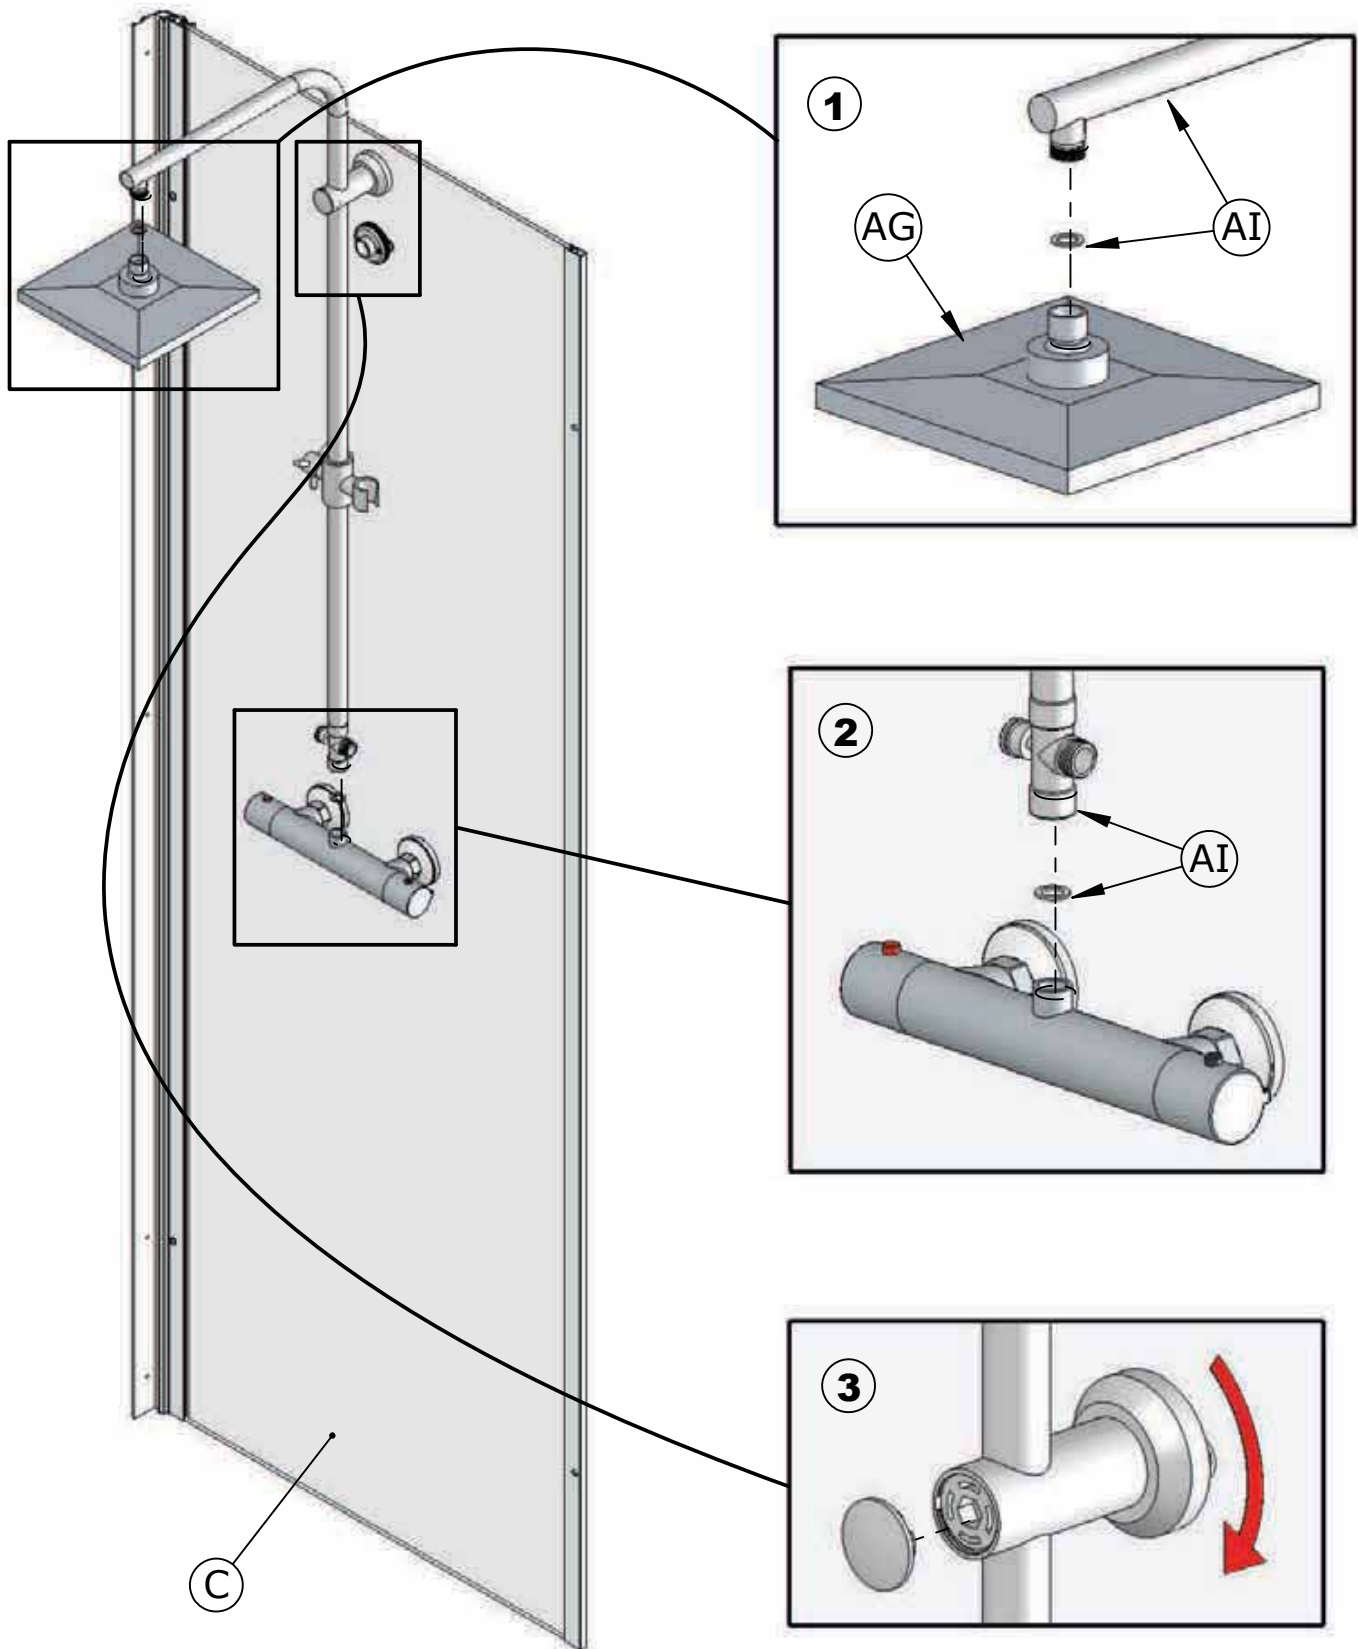


Riser extension if required




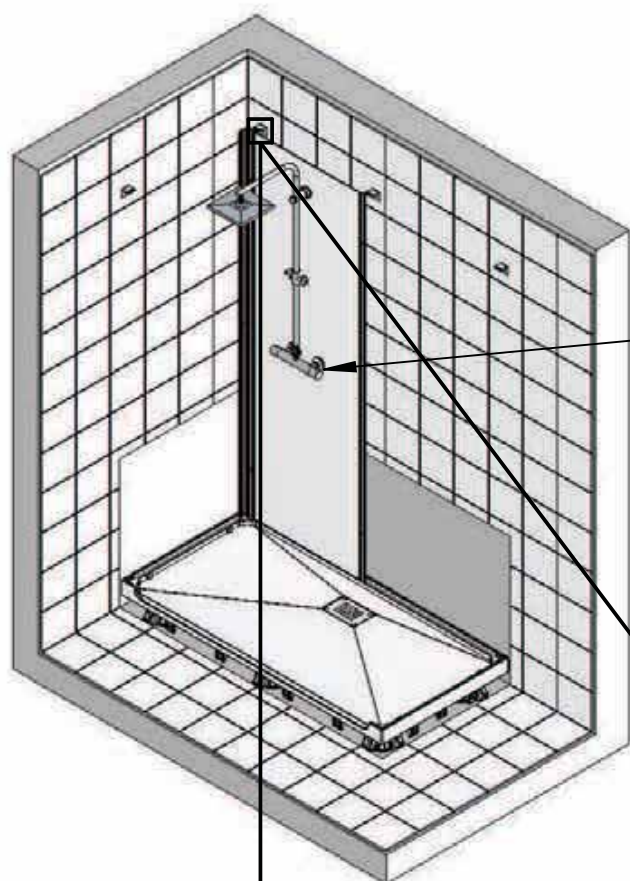


Install earth bonding at this point if required.


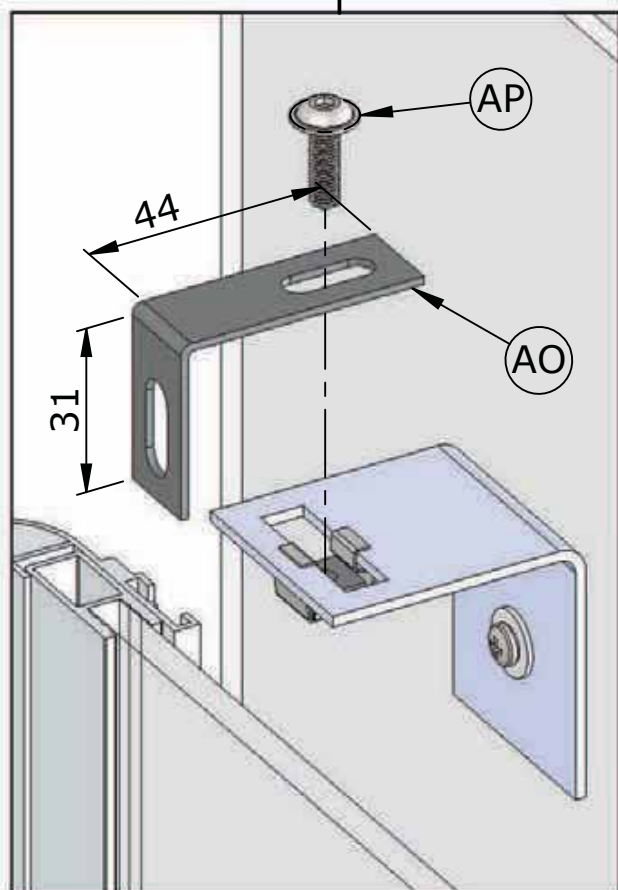


OU

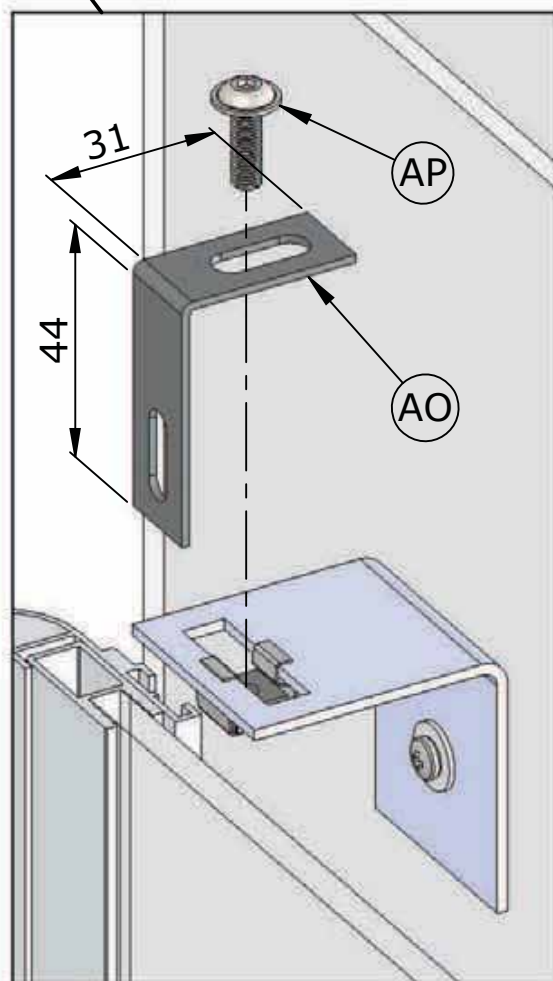


Do not fully tighten yet

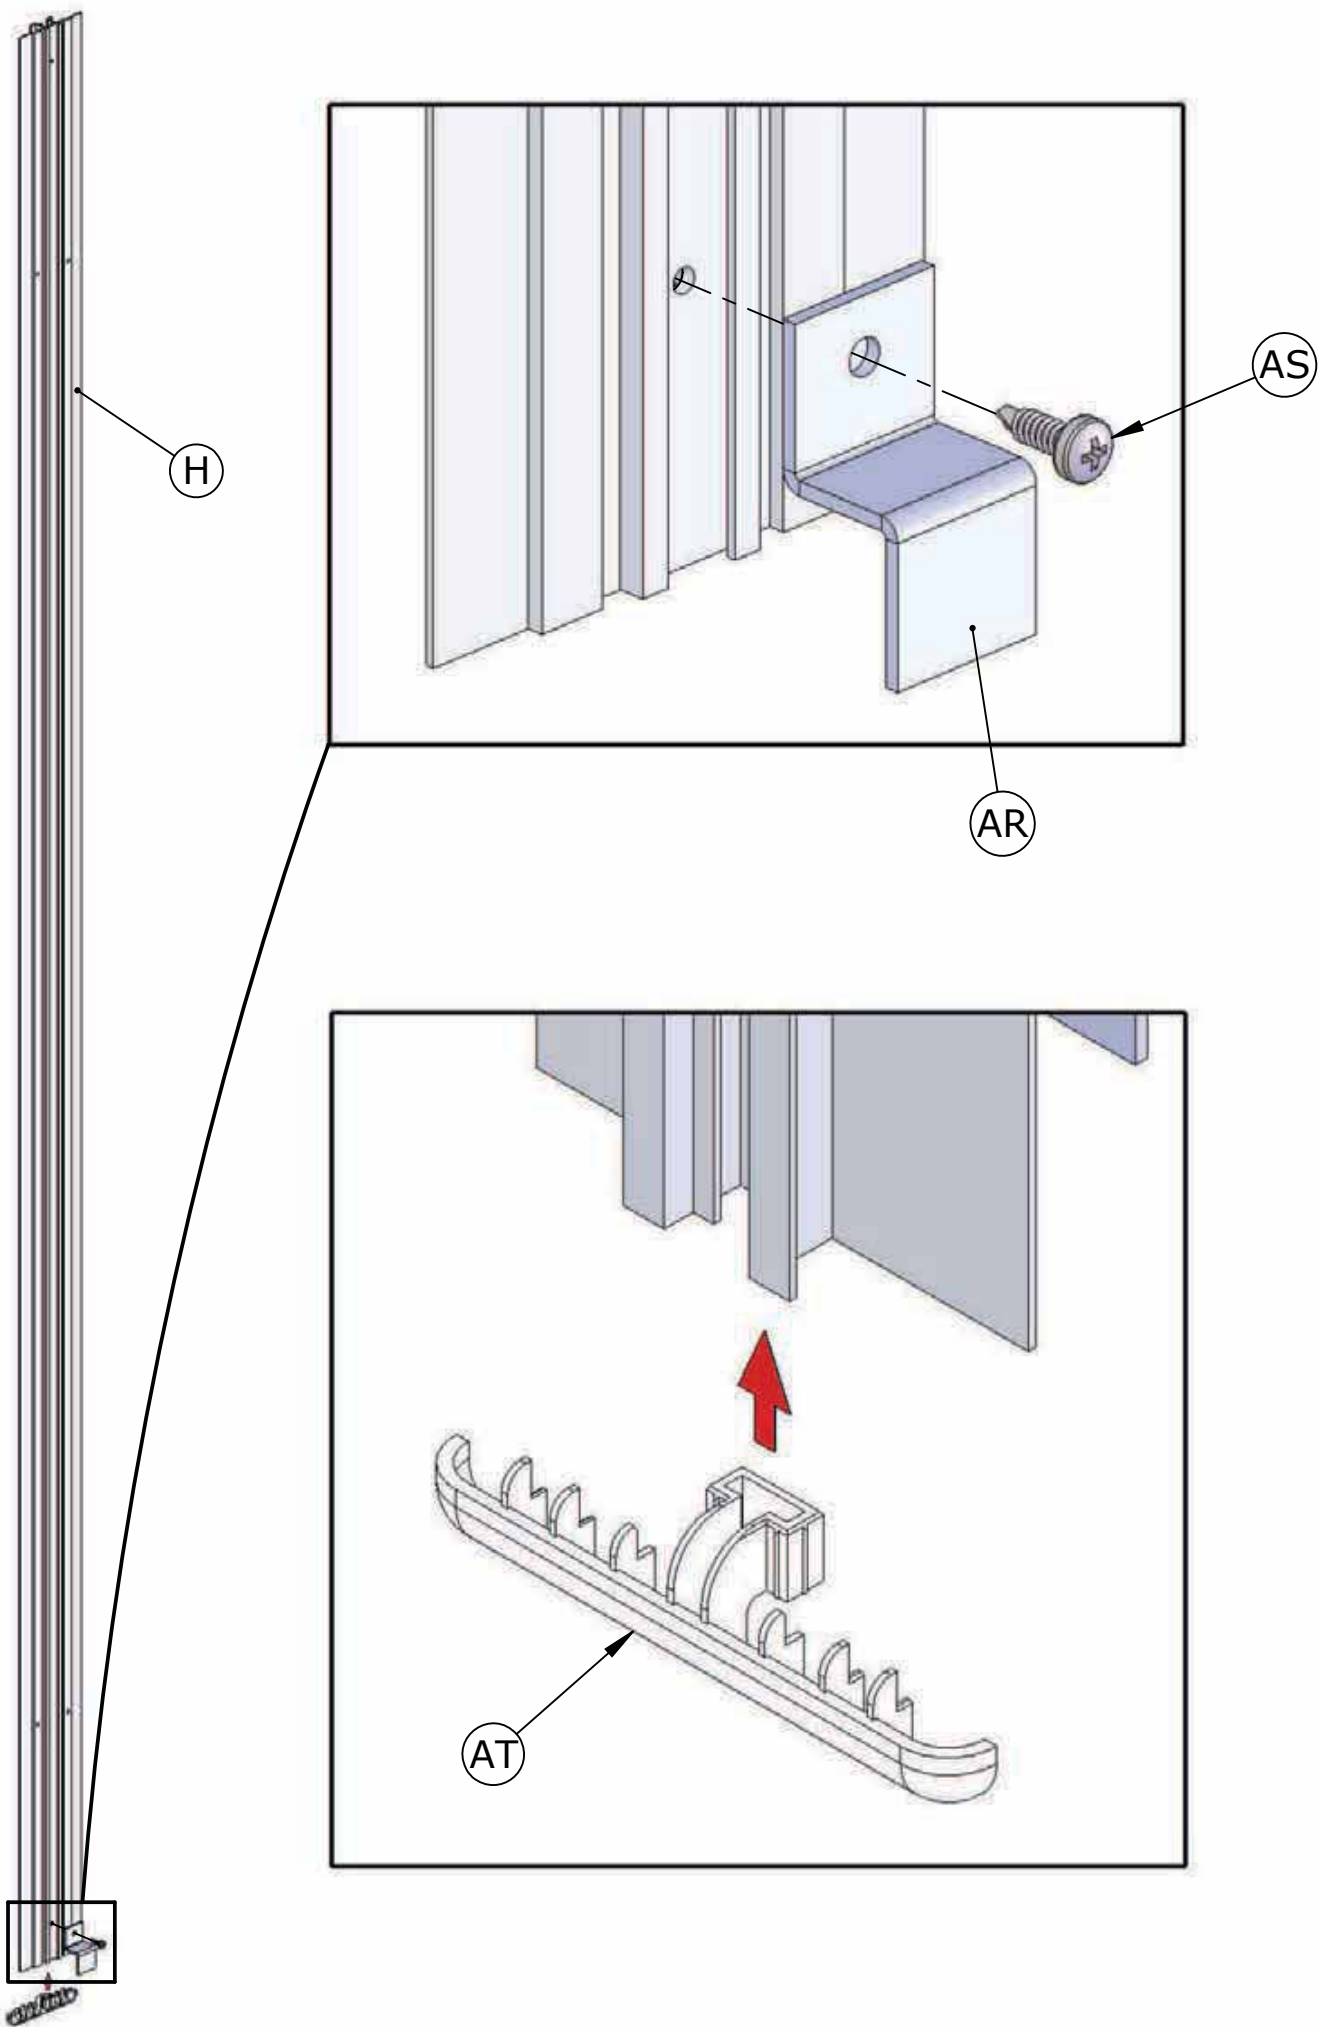

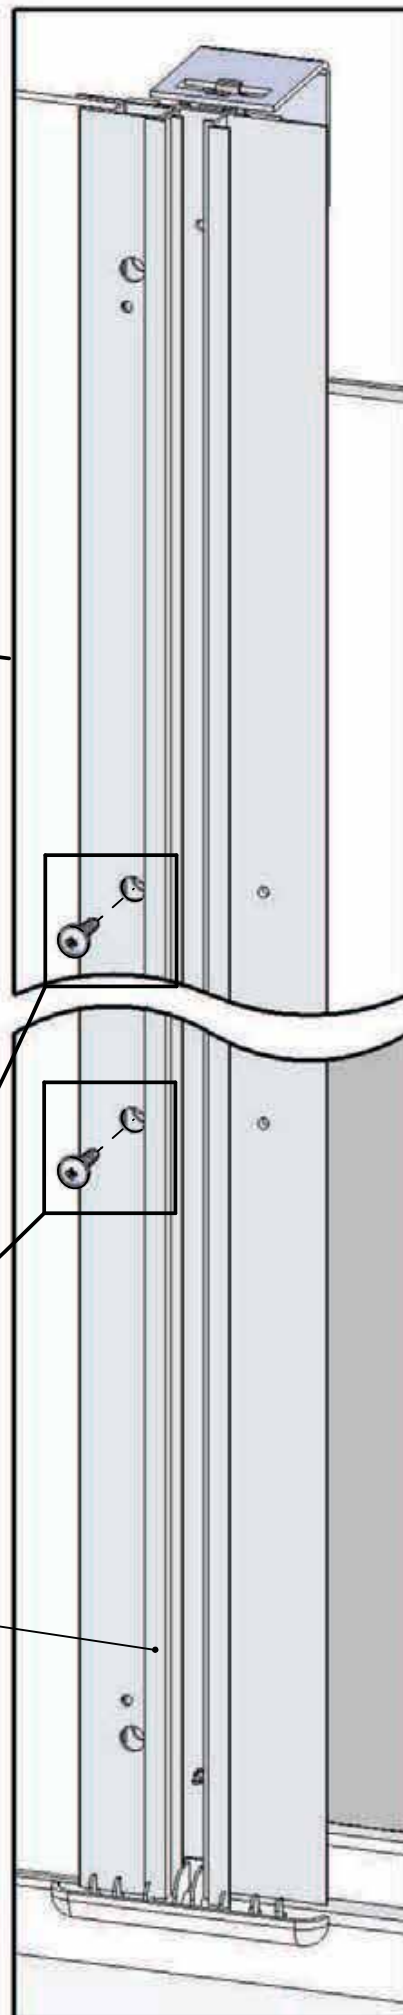
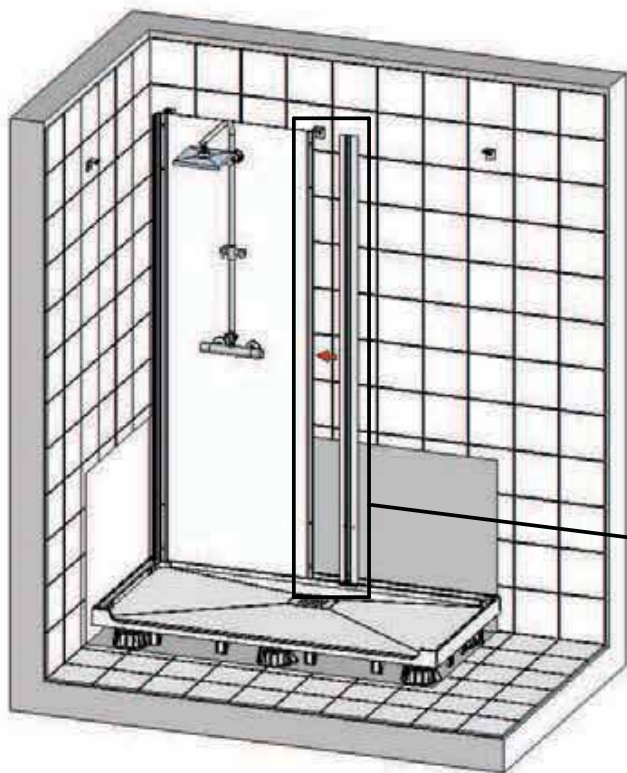


(AF)

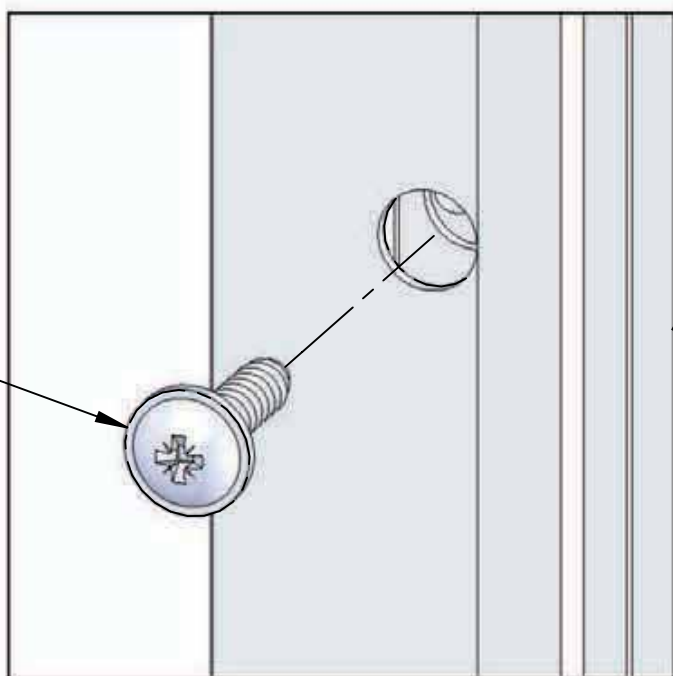


(H)


Do not fully tighten yet

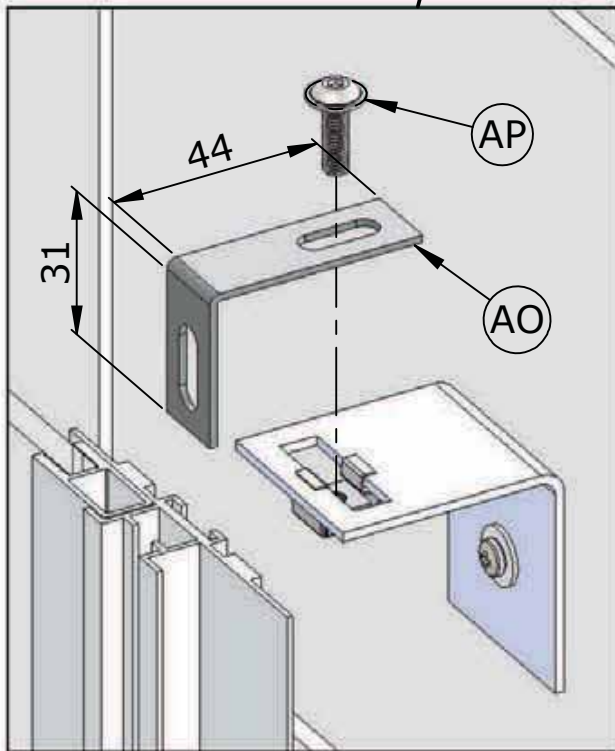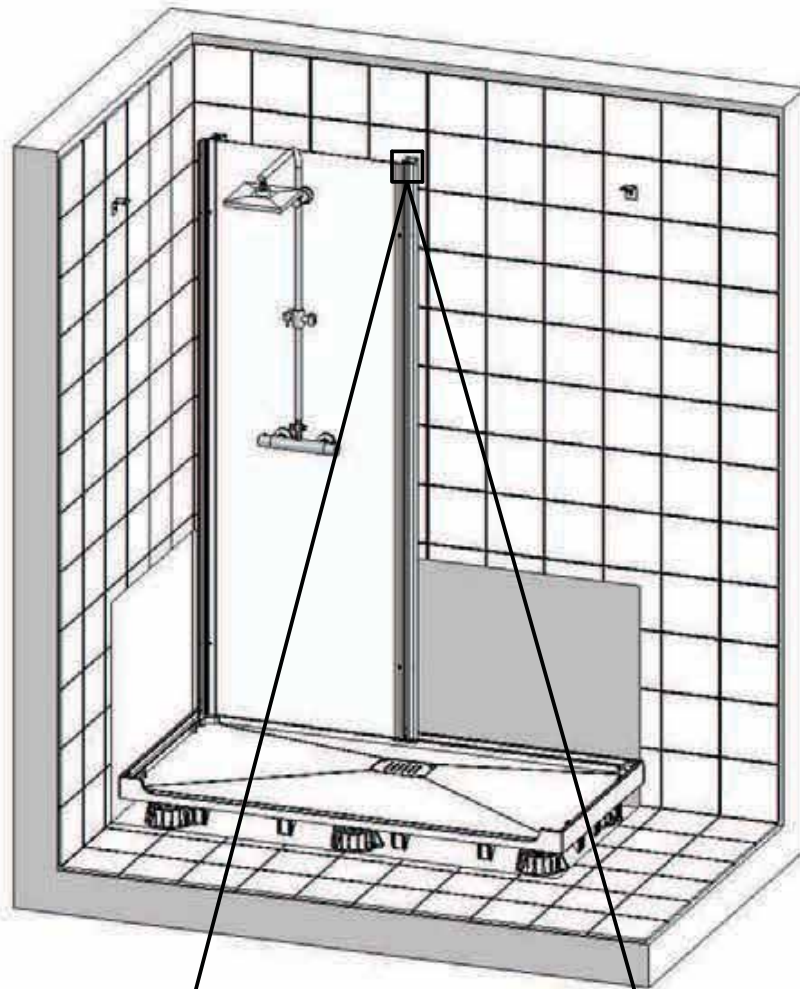


OU



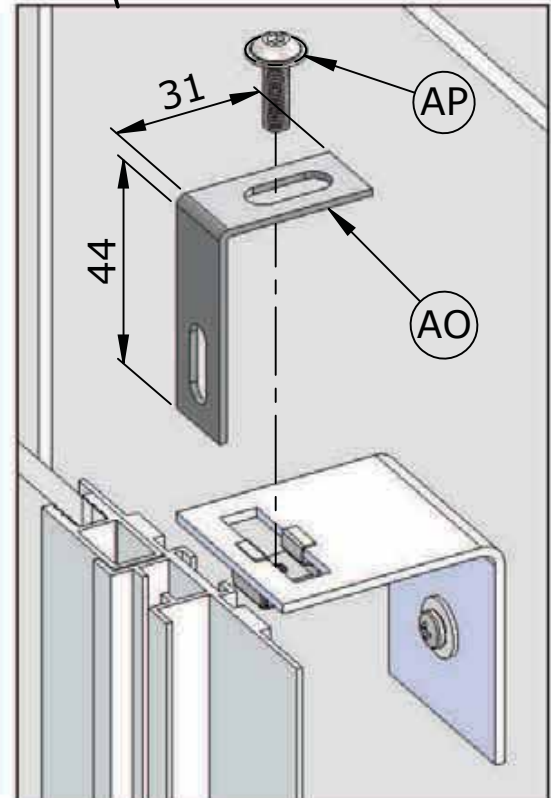


Do not fully tighten yet


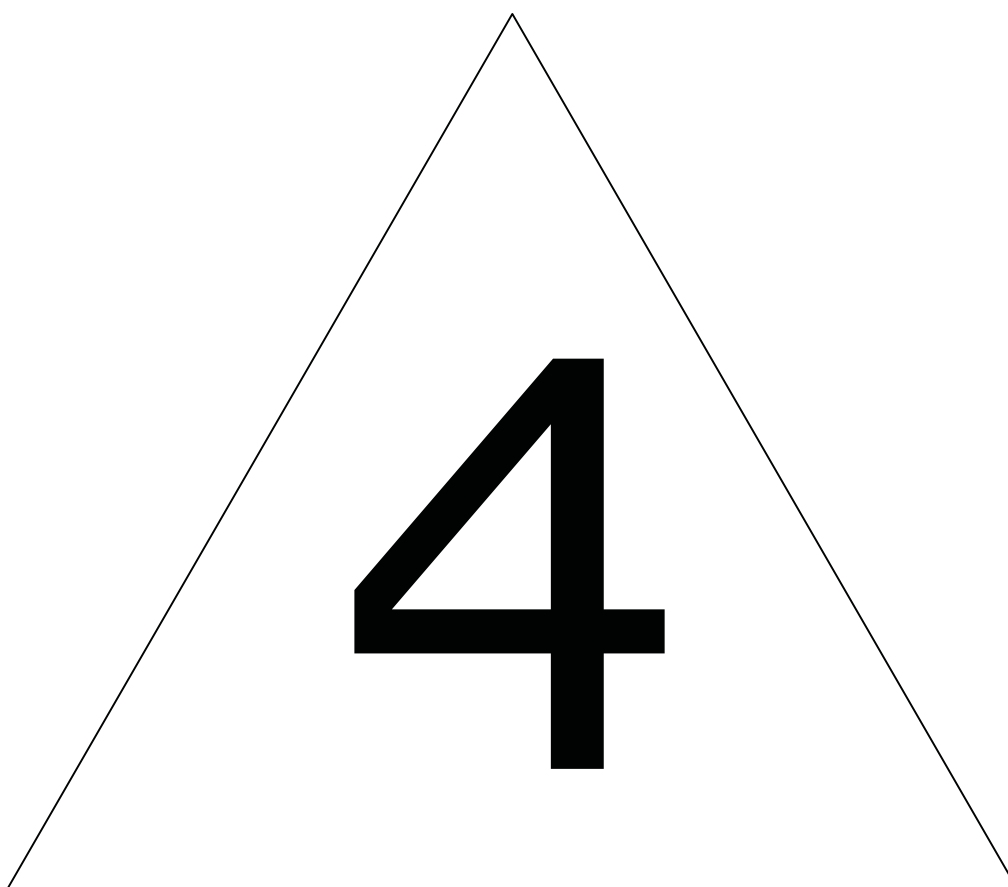


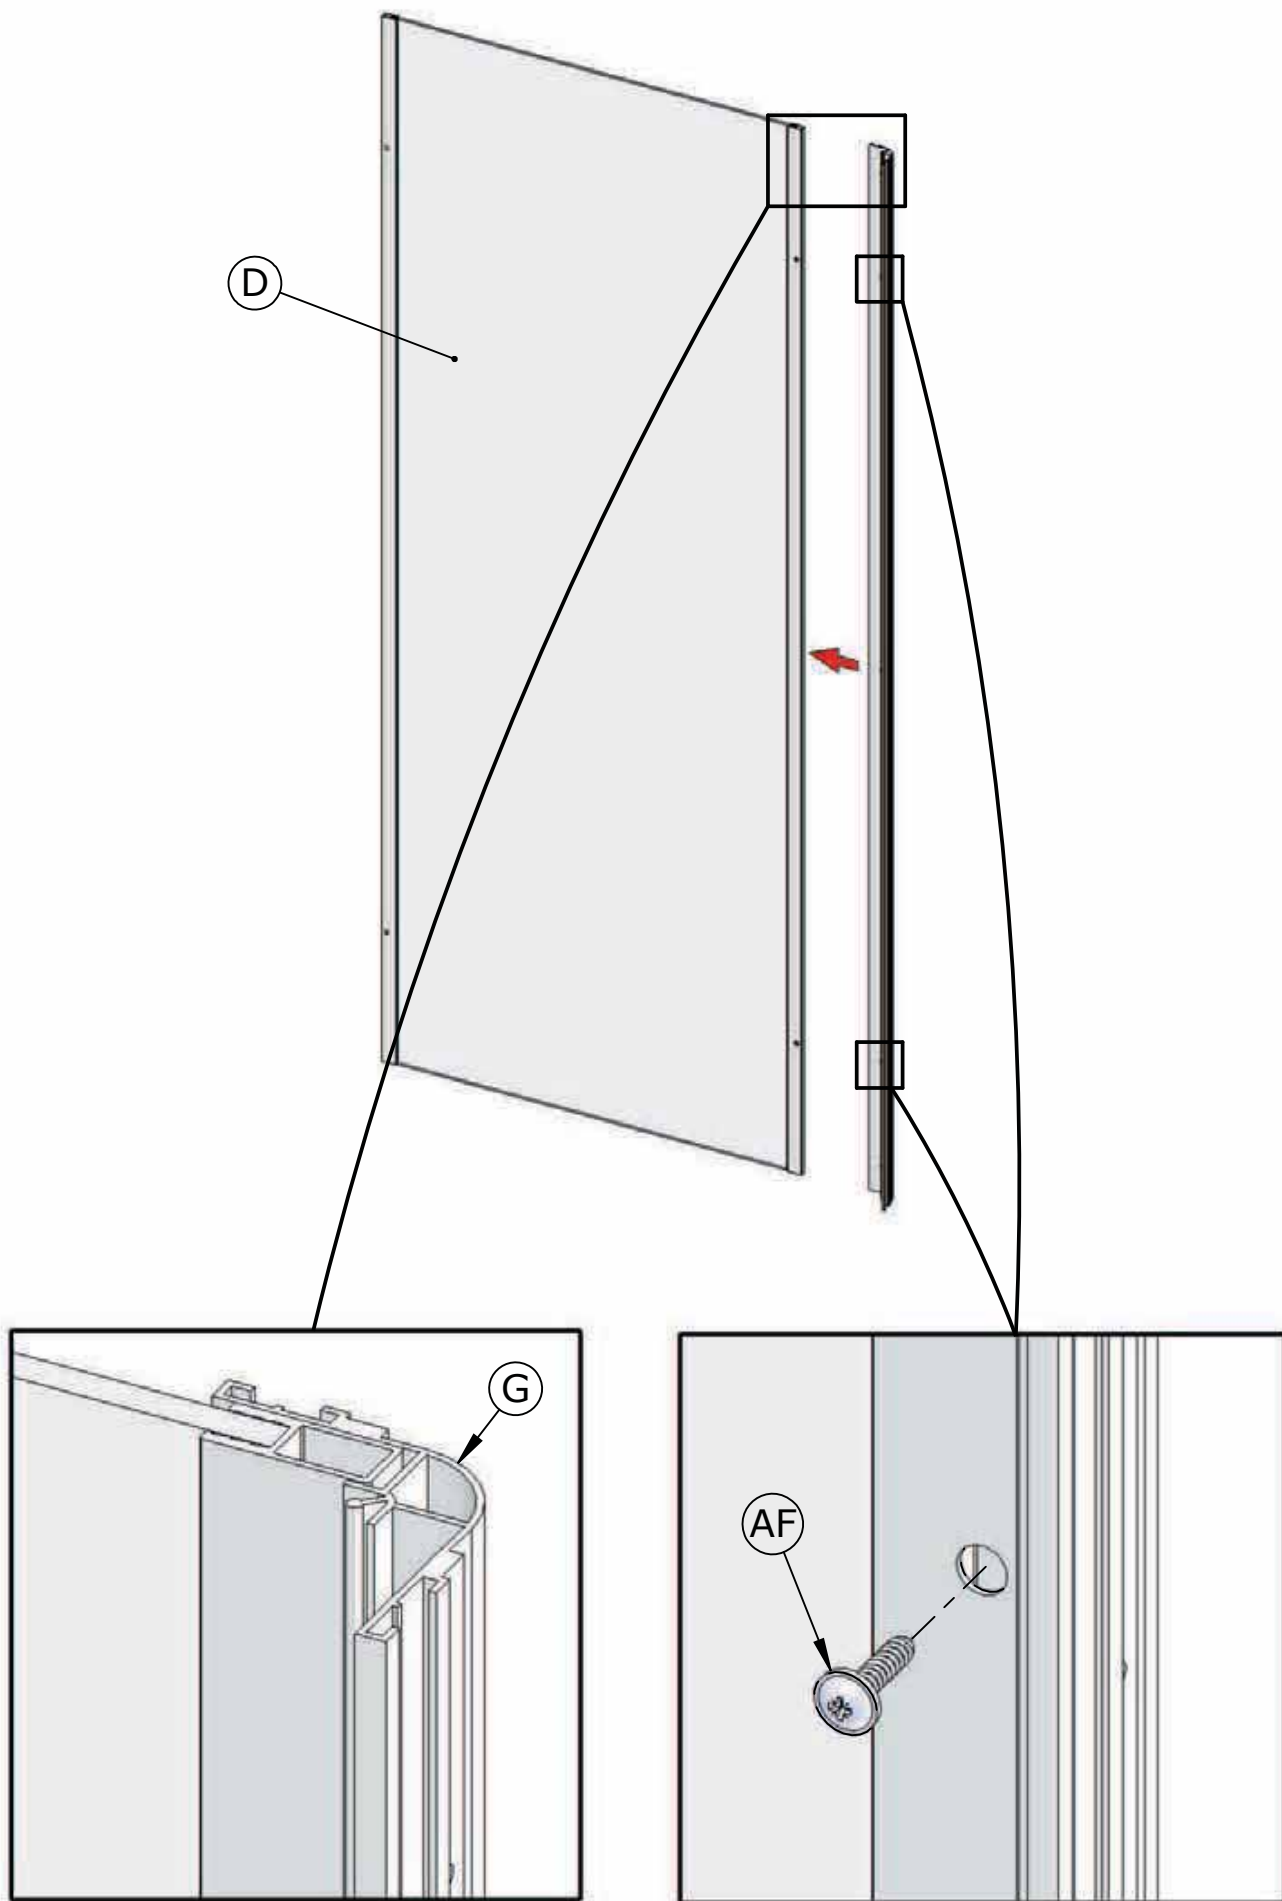


Do not fully tighten yet

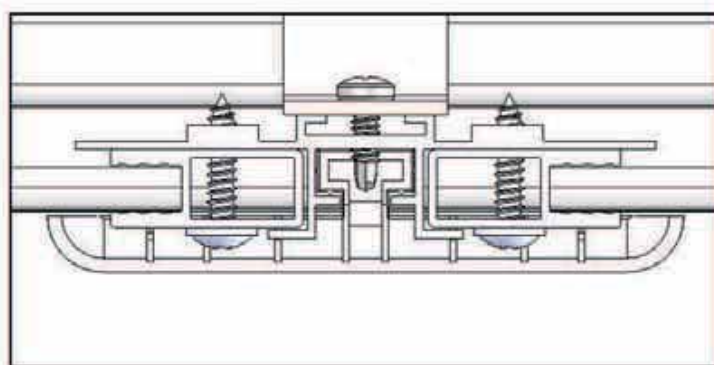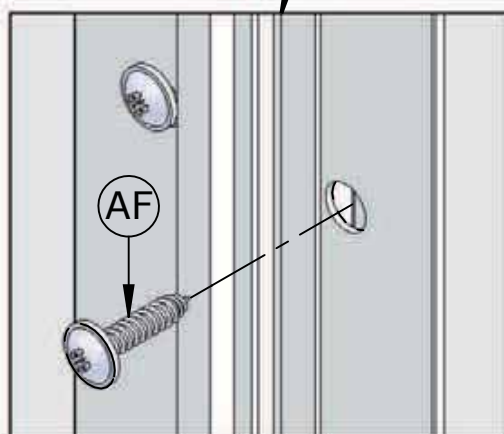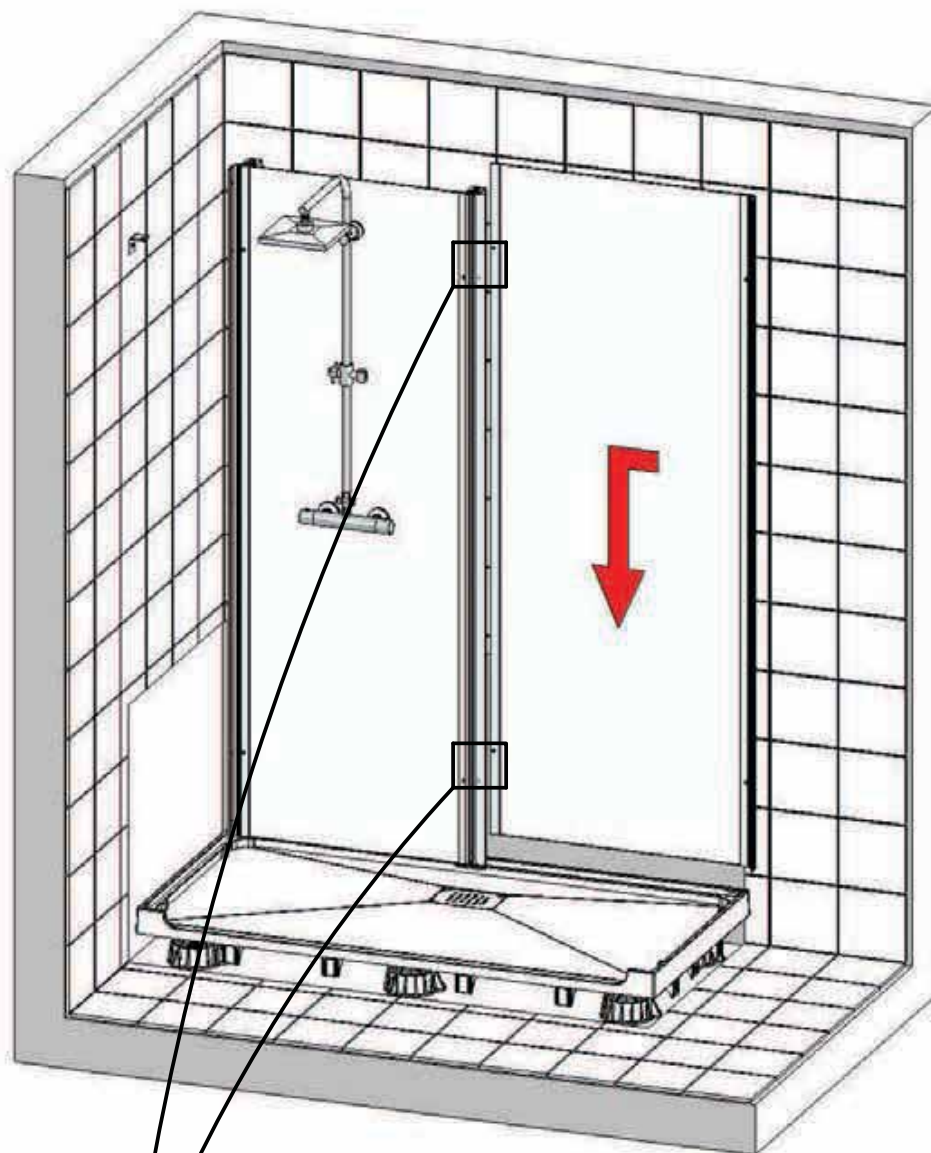


Ne pas serrer la/les vis

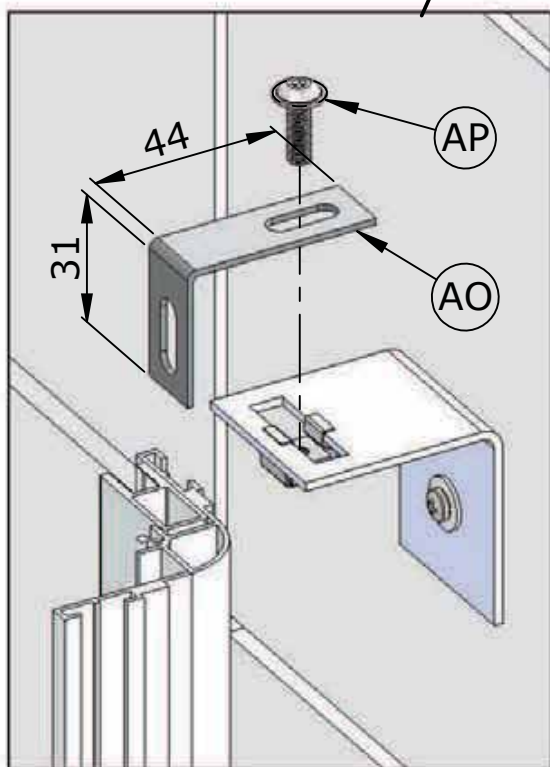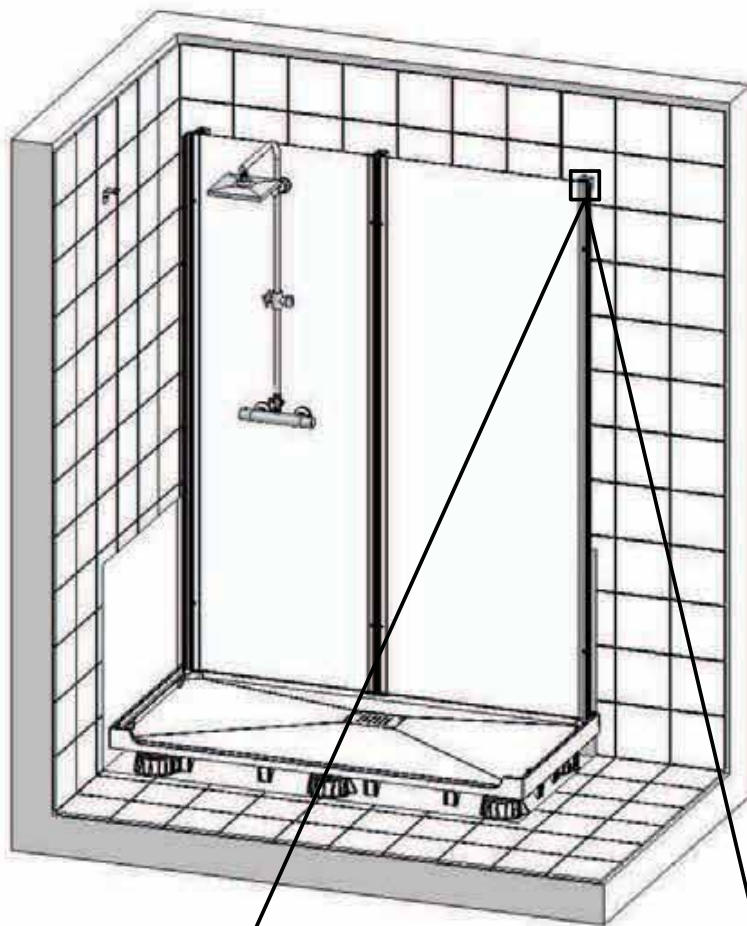


OU

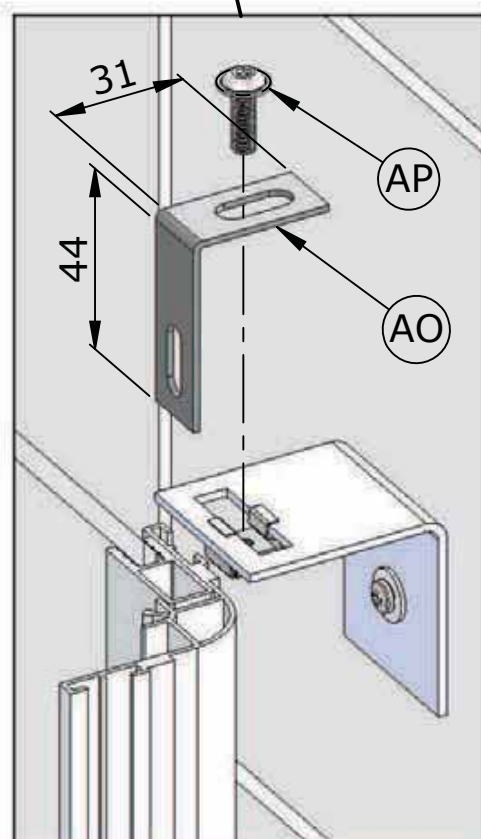

Do not fully tighten yet

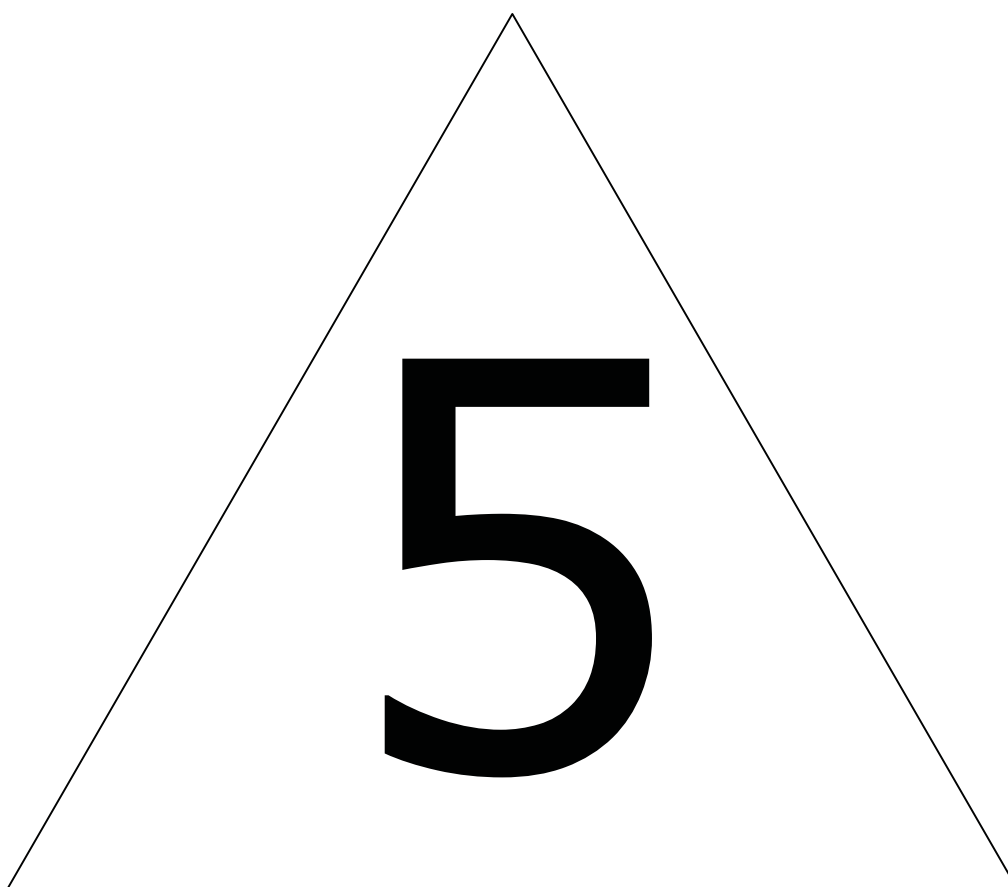


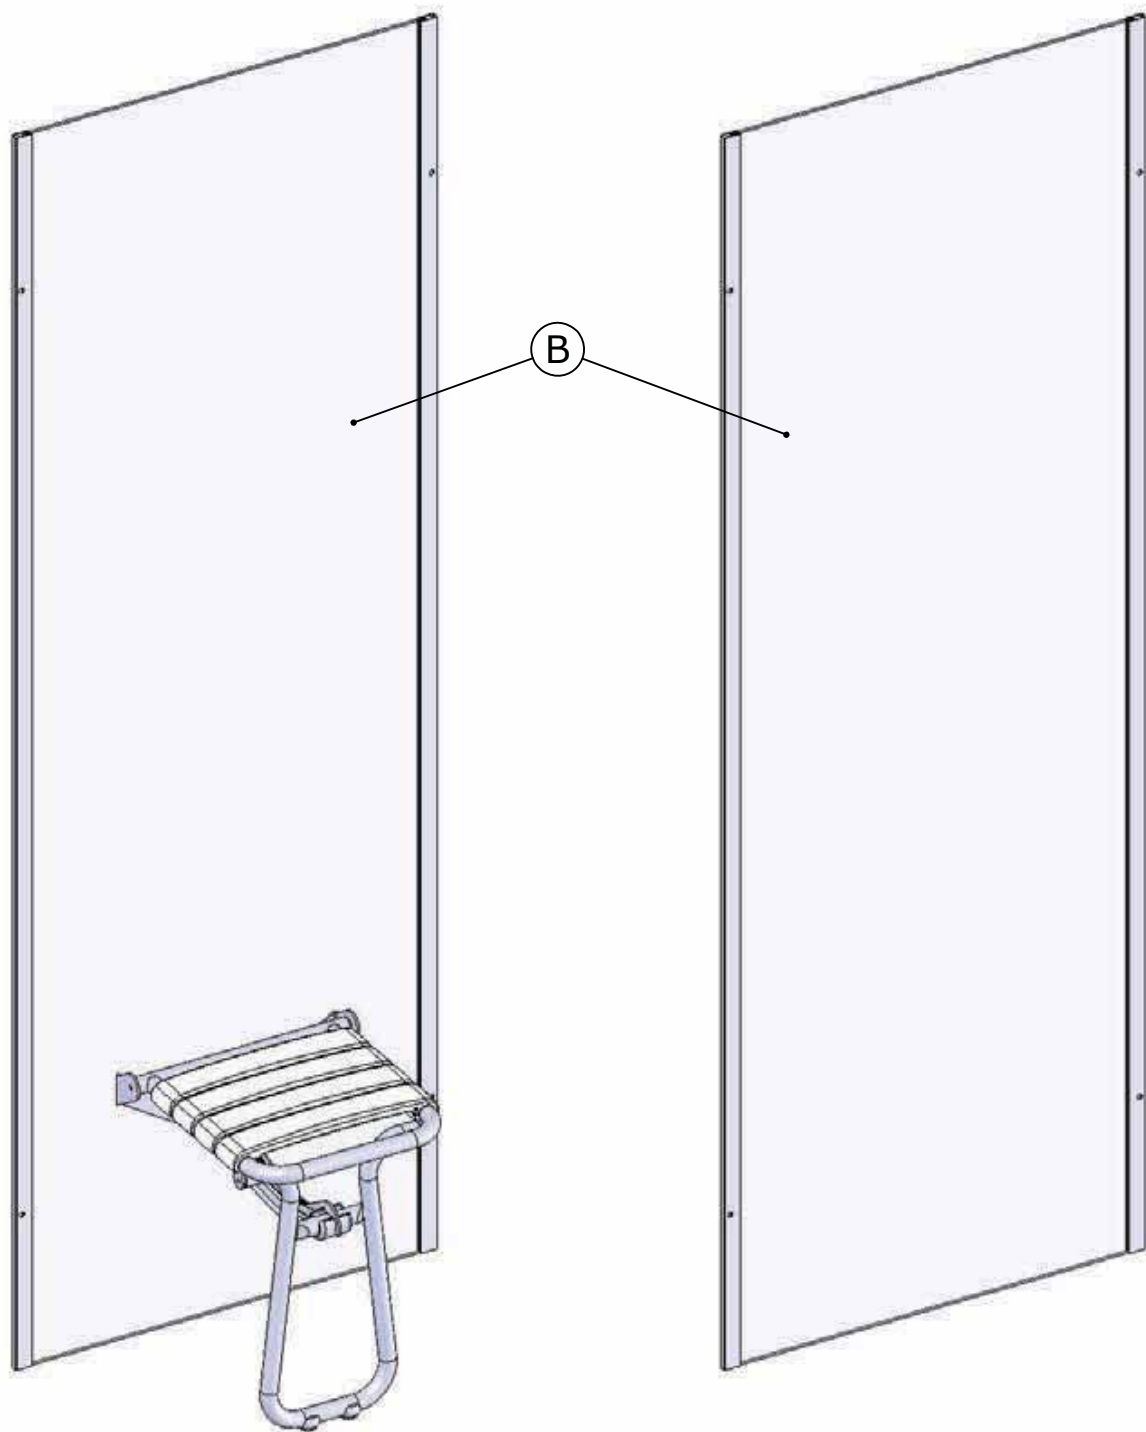



SERENITE

DESIGN

See seat installation instructions if required.

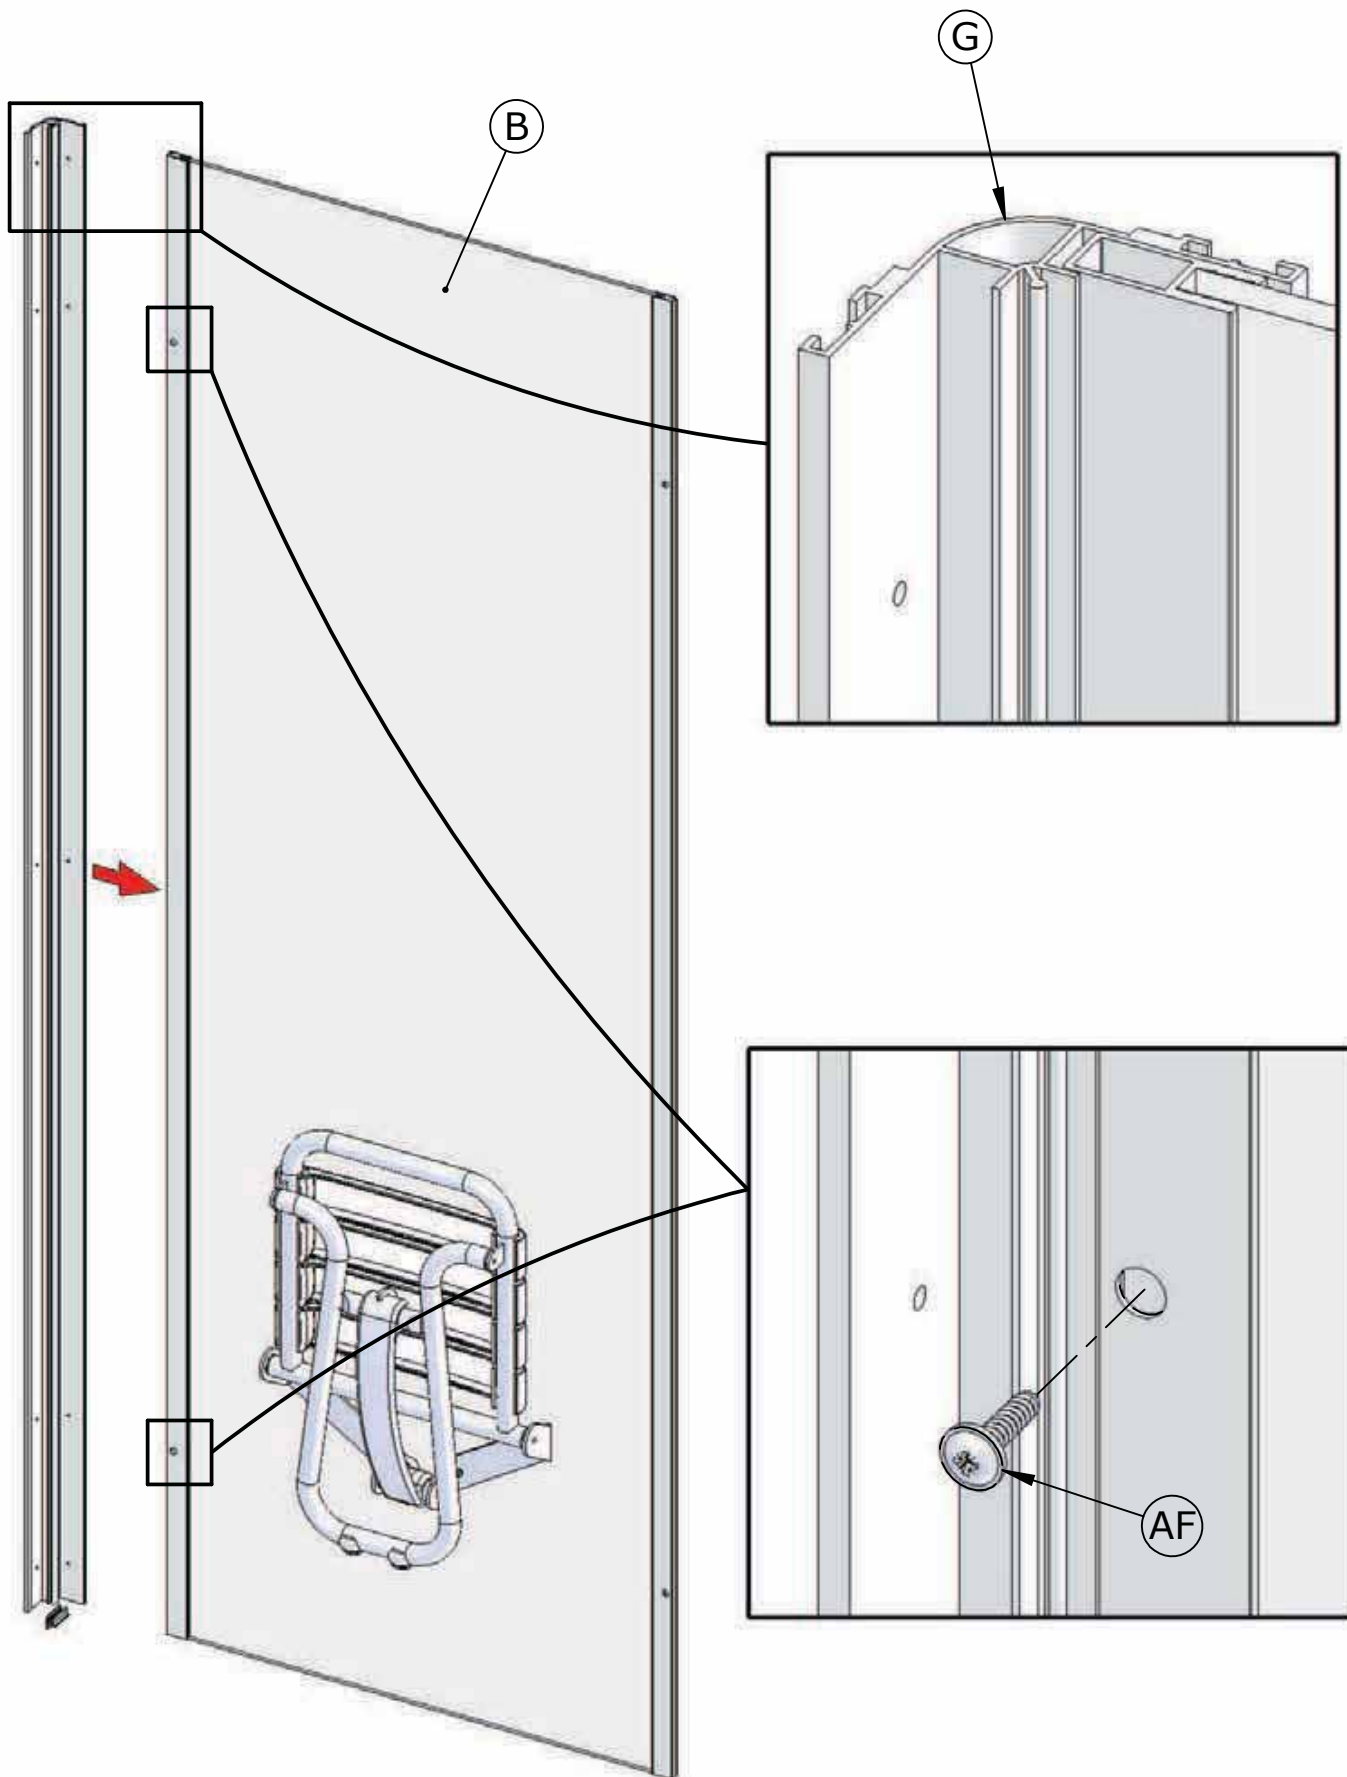



Do not fully tighten yet

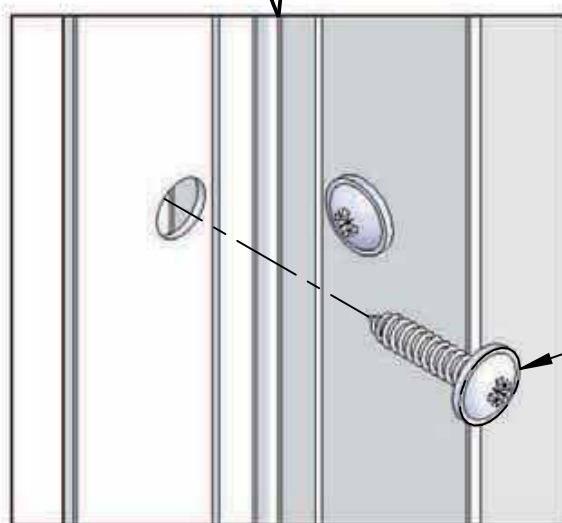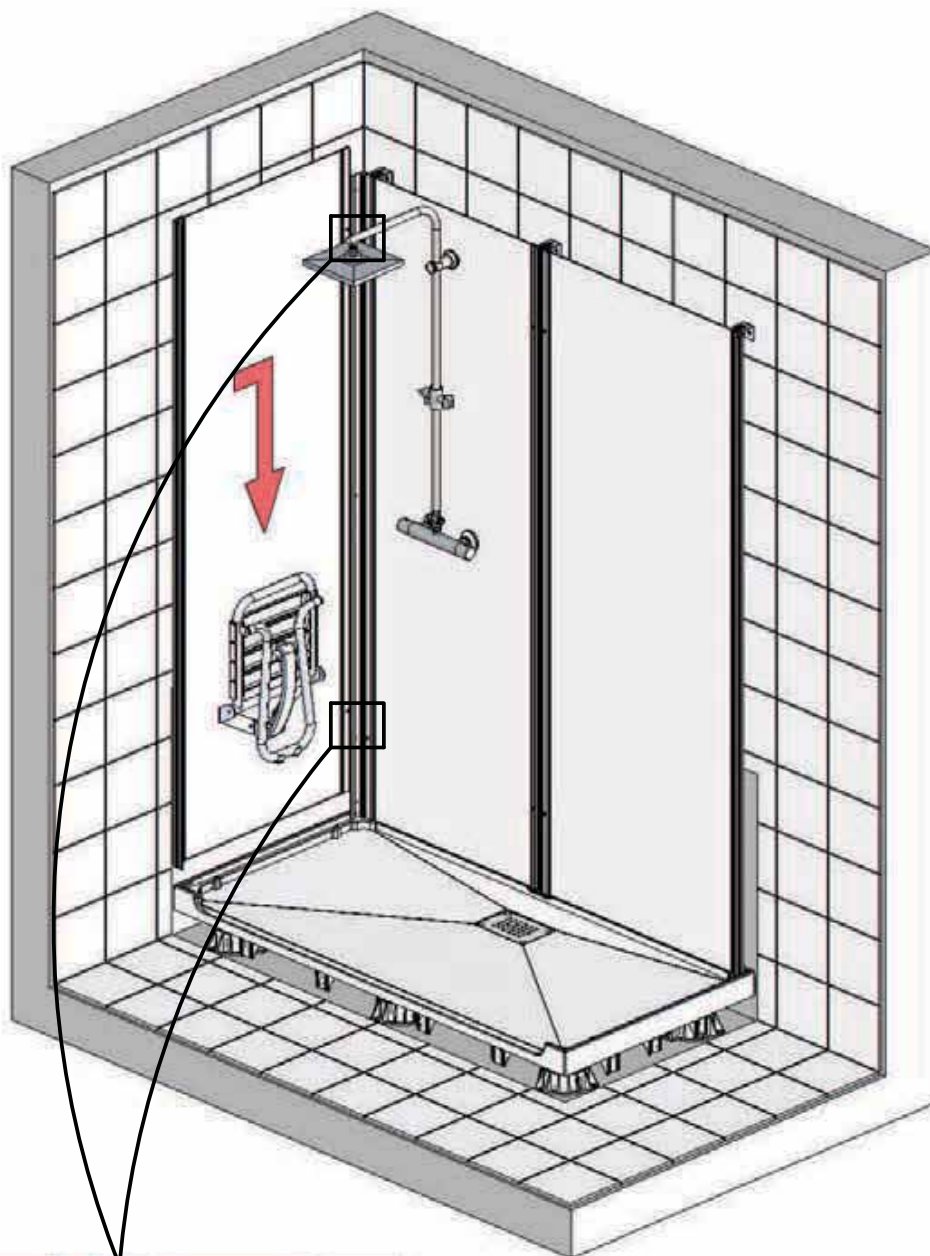


(AF)

Do not fully tighten yet

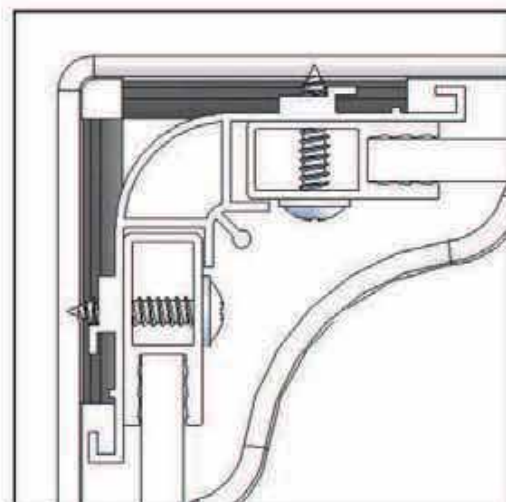


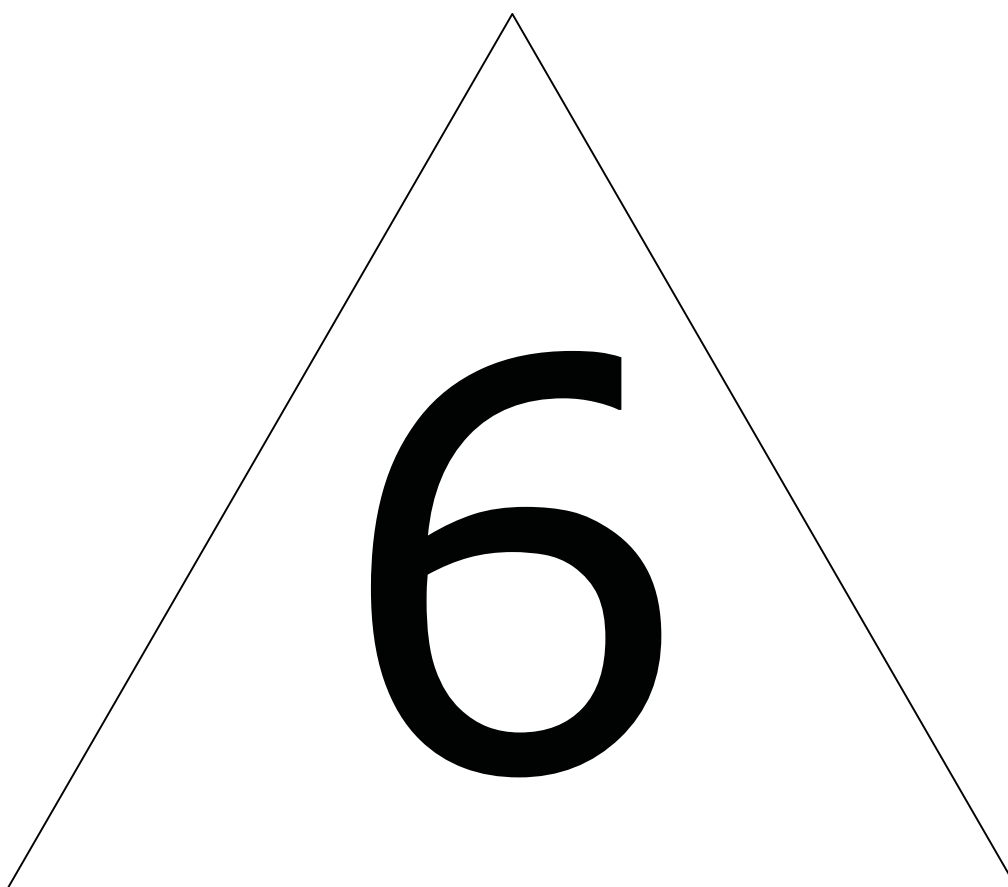


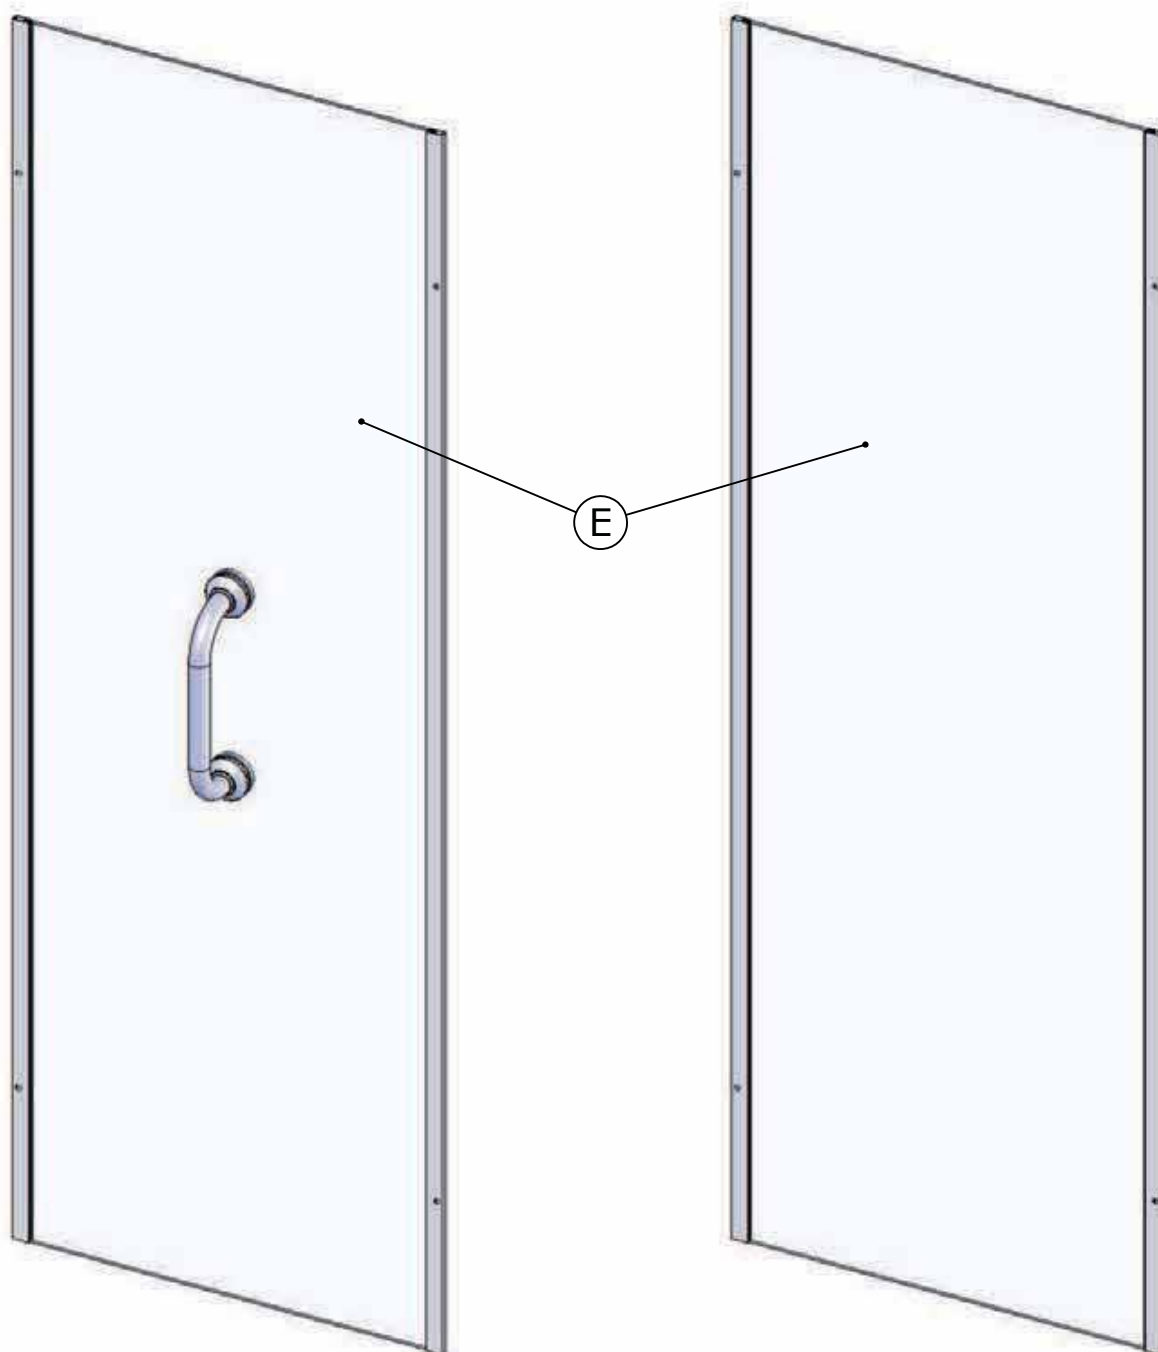
**SERENITE****DESIGN**

See grab bar installation instructions if required.


Ensure corner post is over as far as it will go

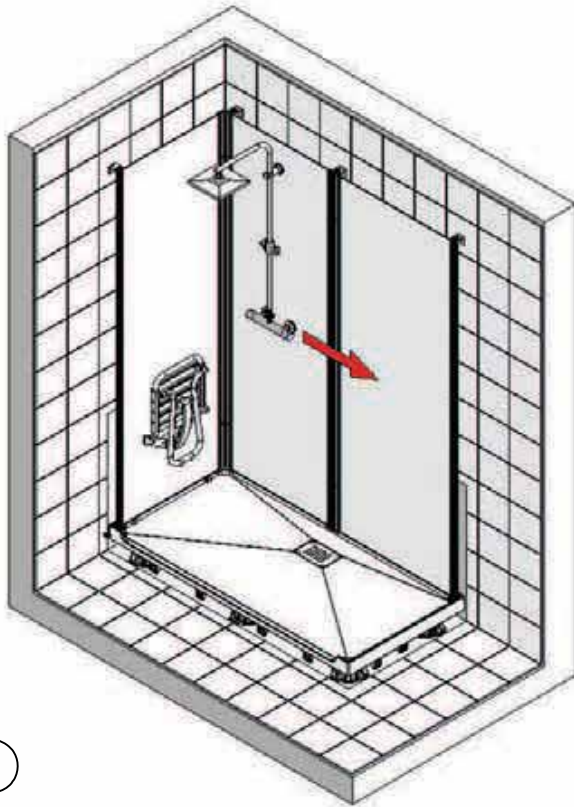

1

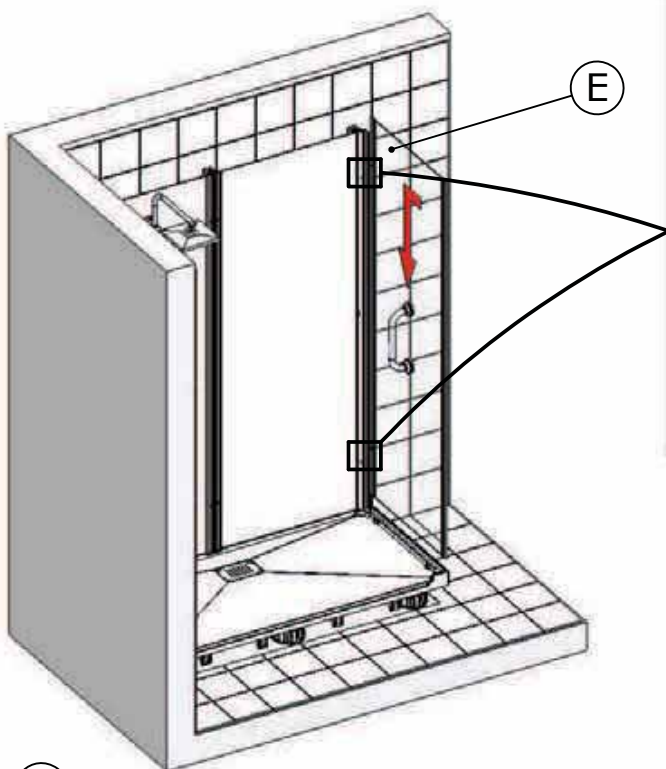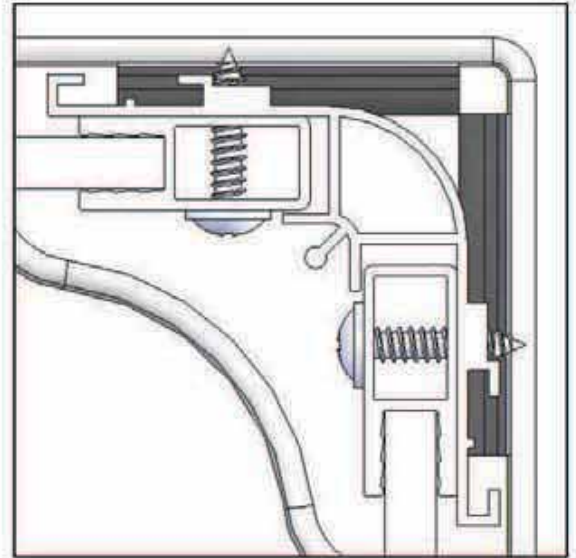



2

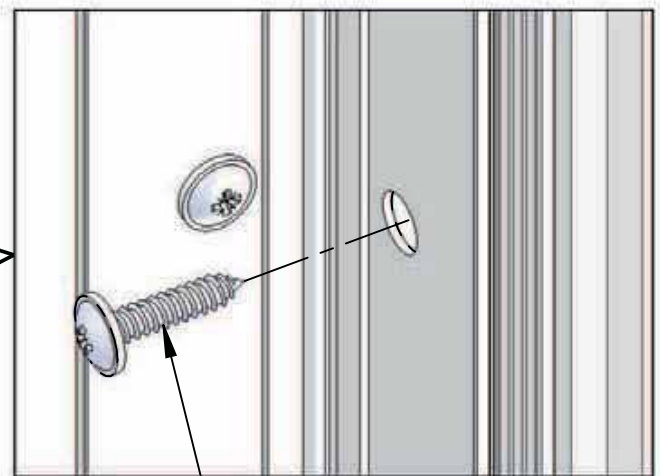






AF






Do not fully tighten yet

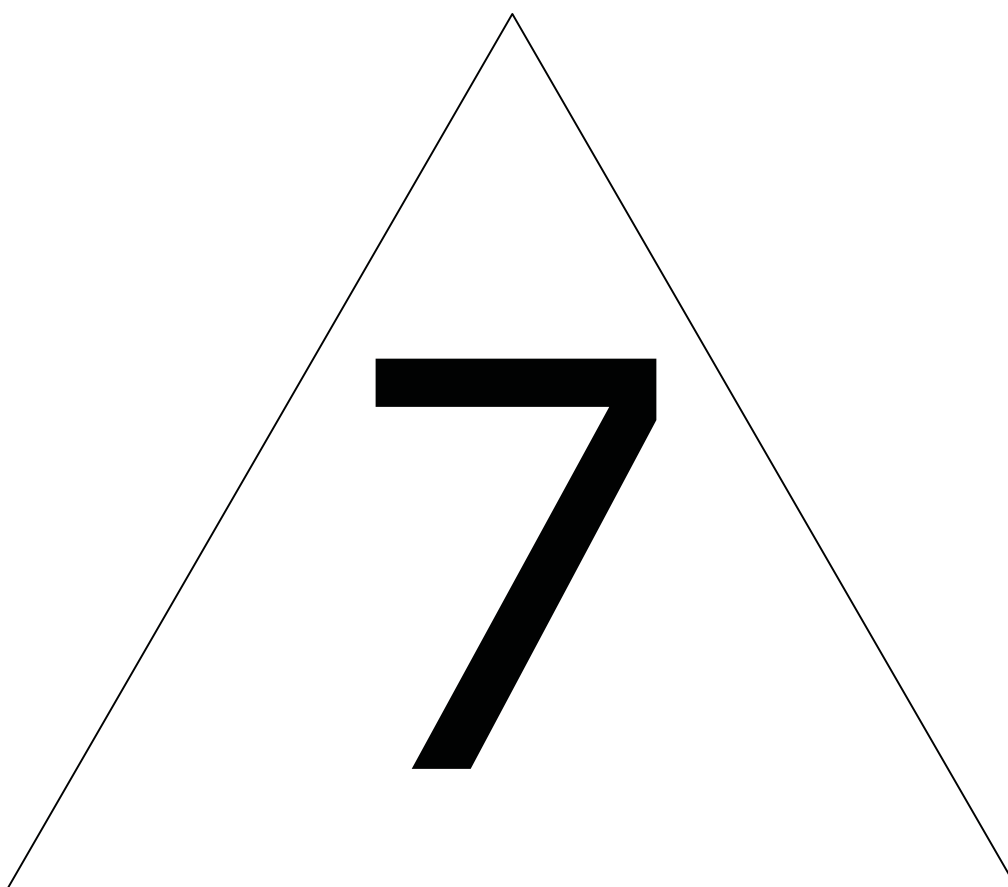

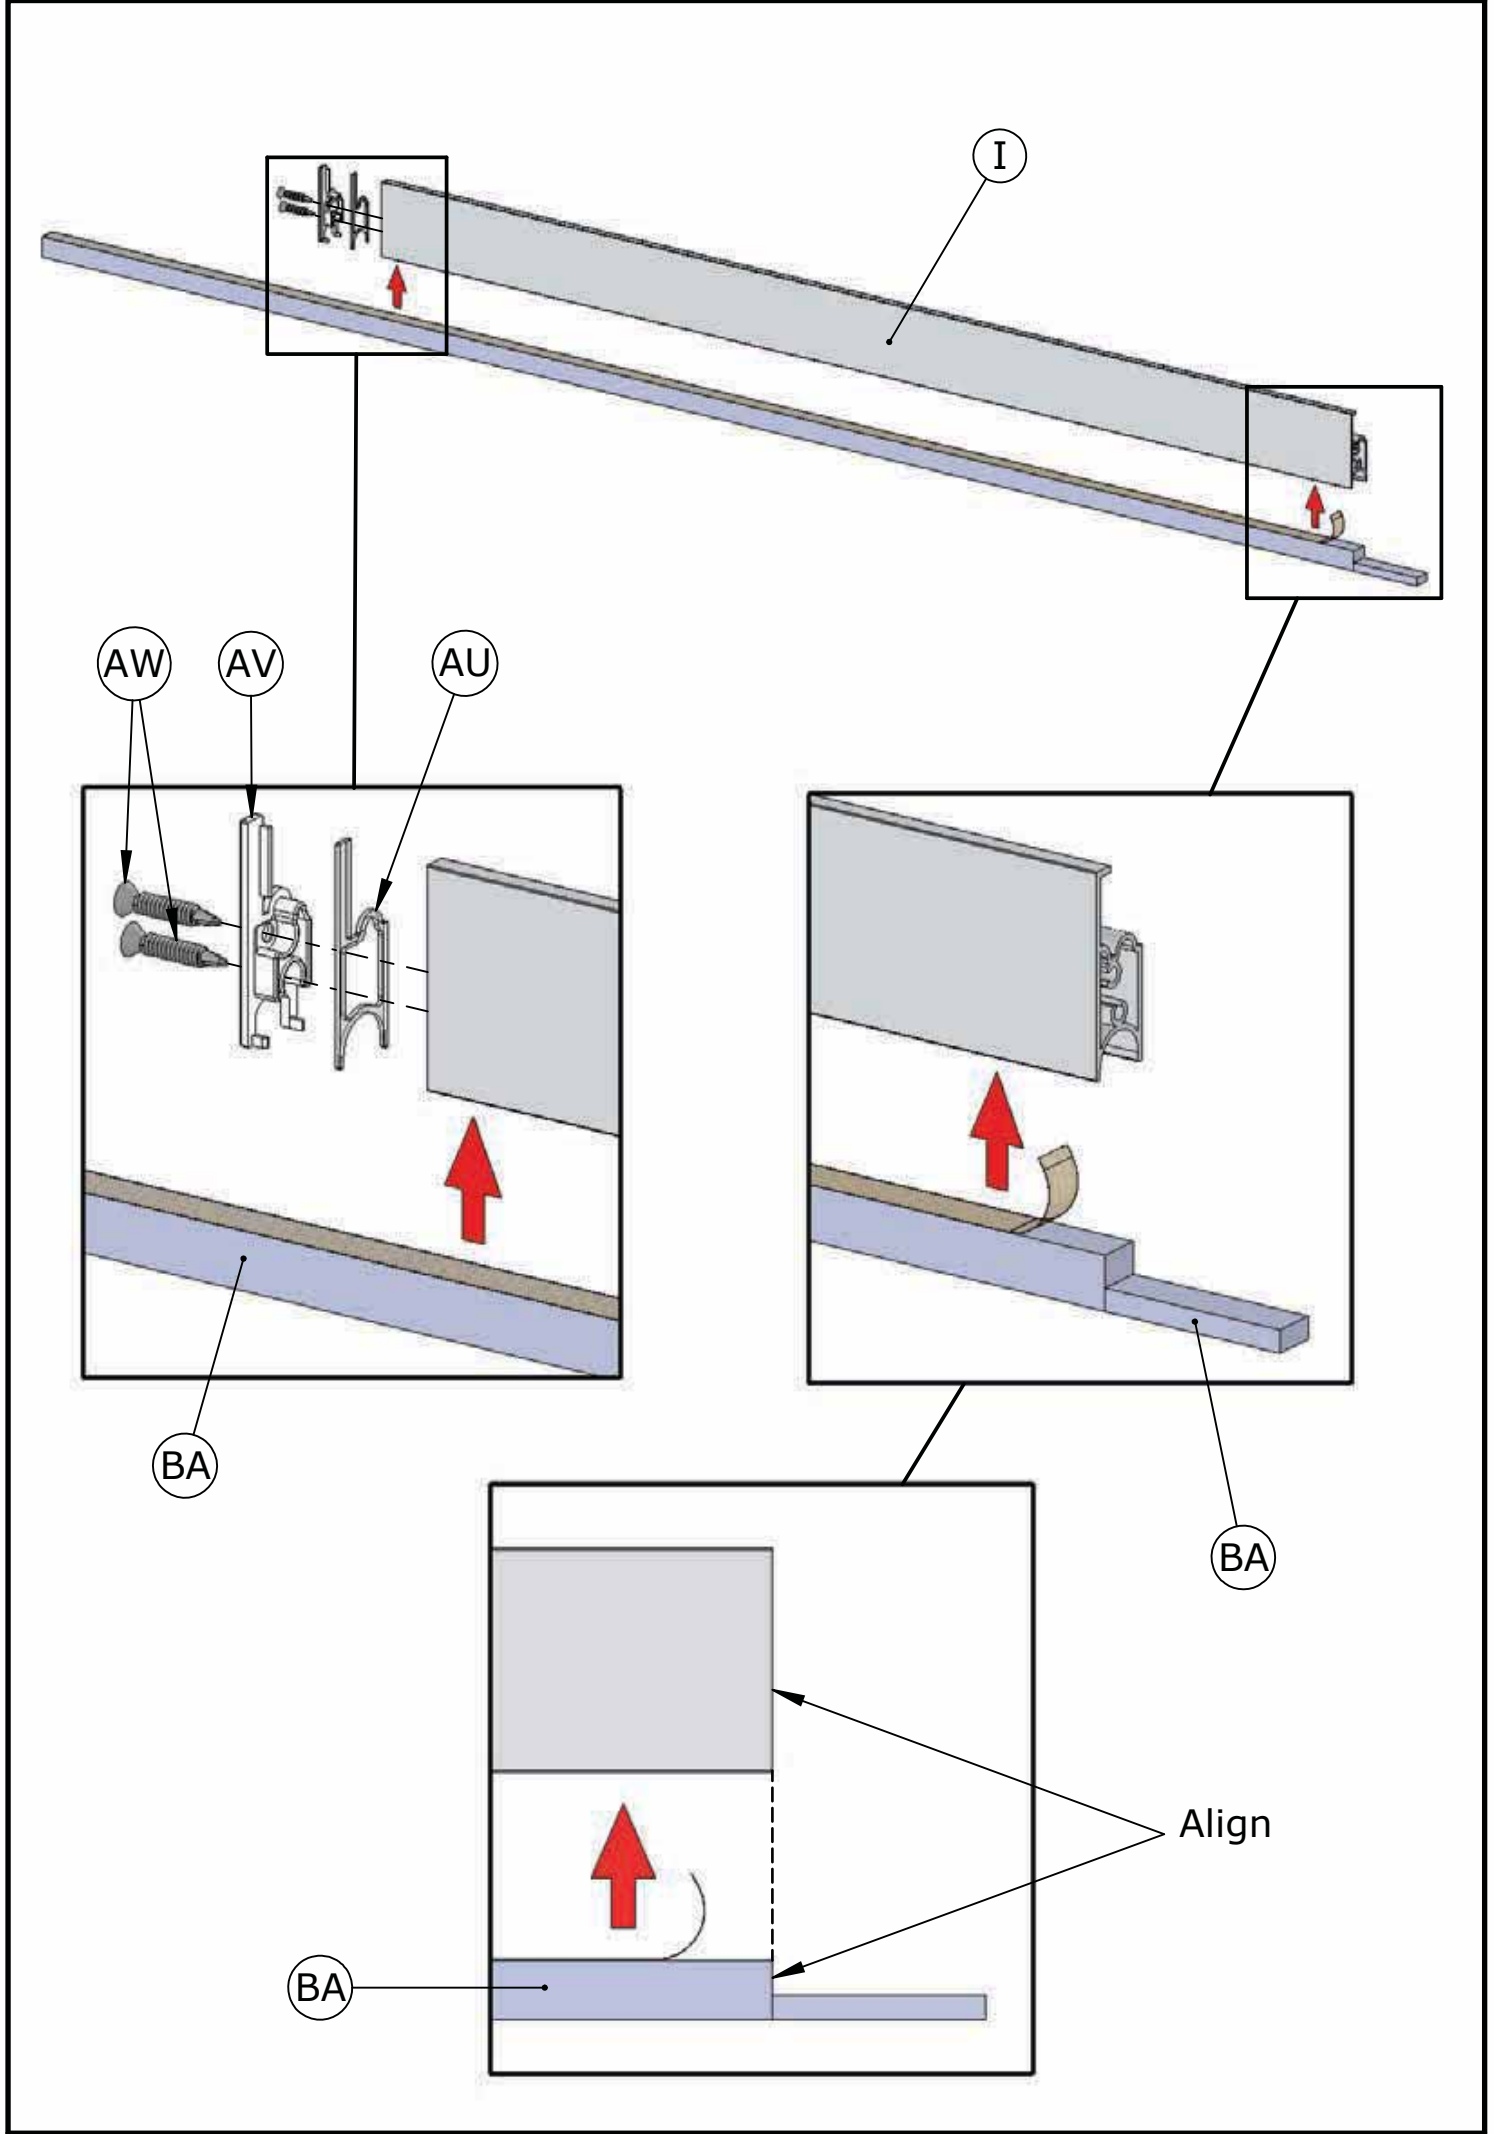


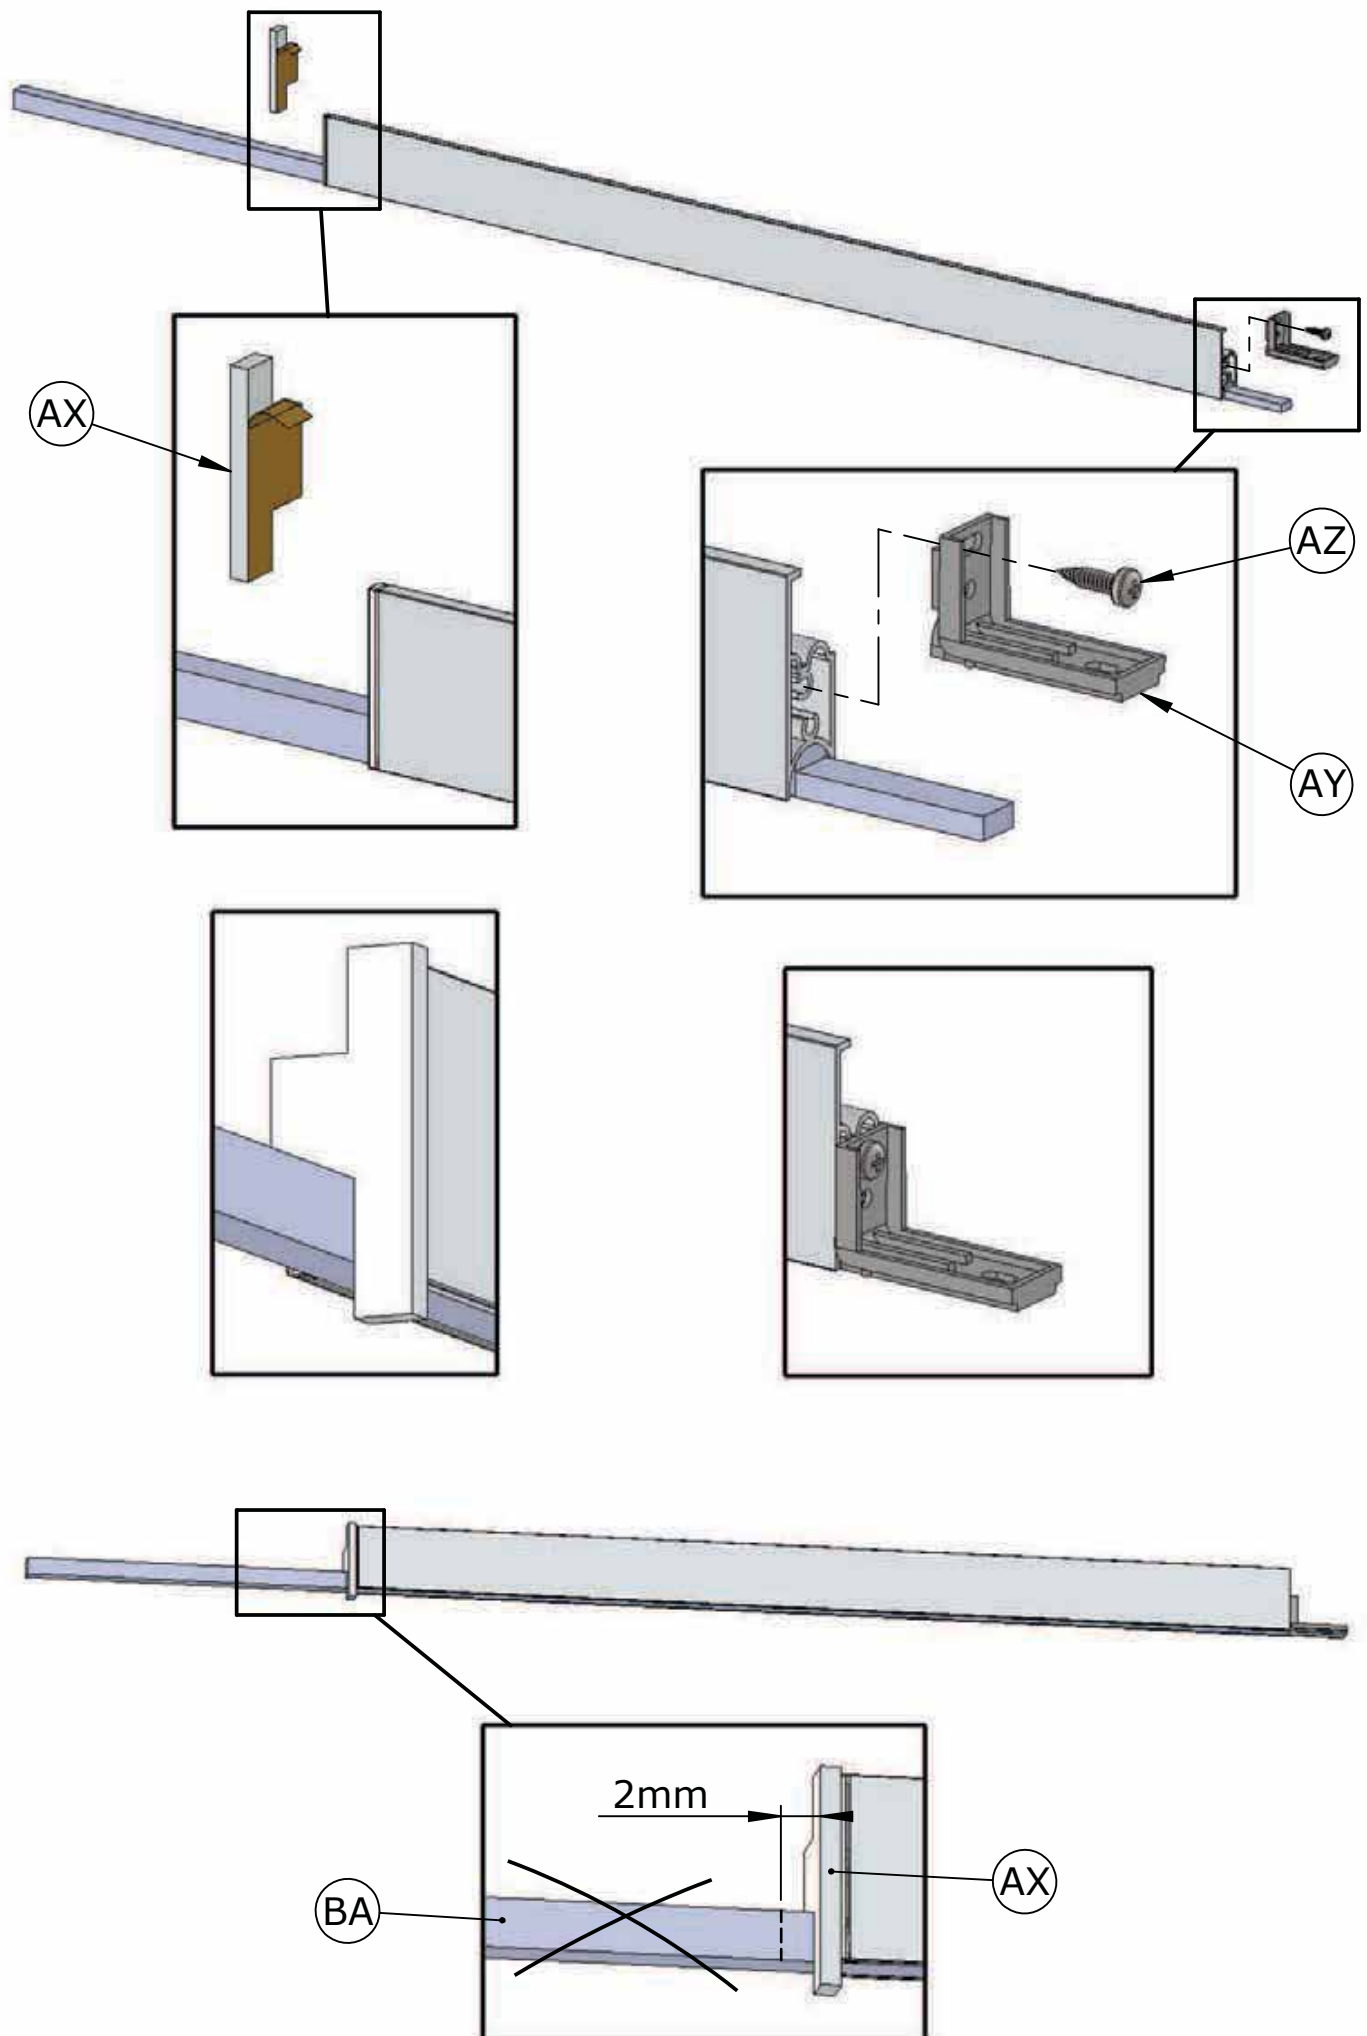

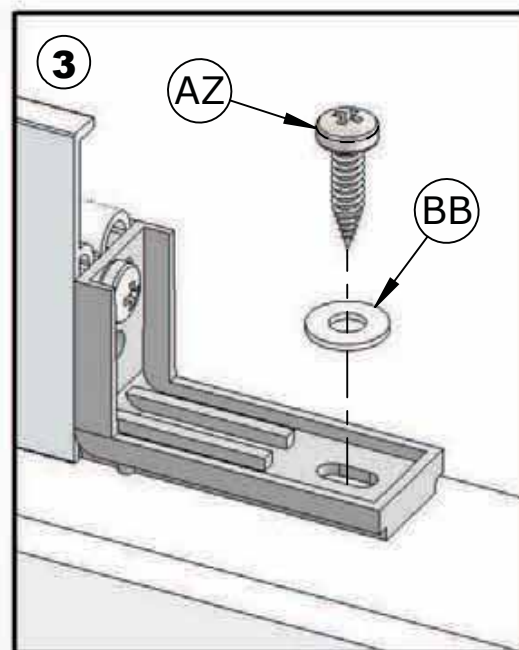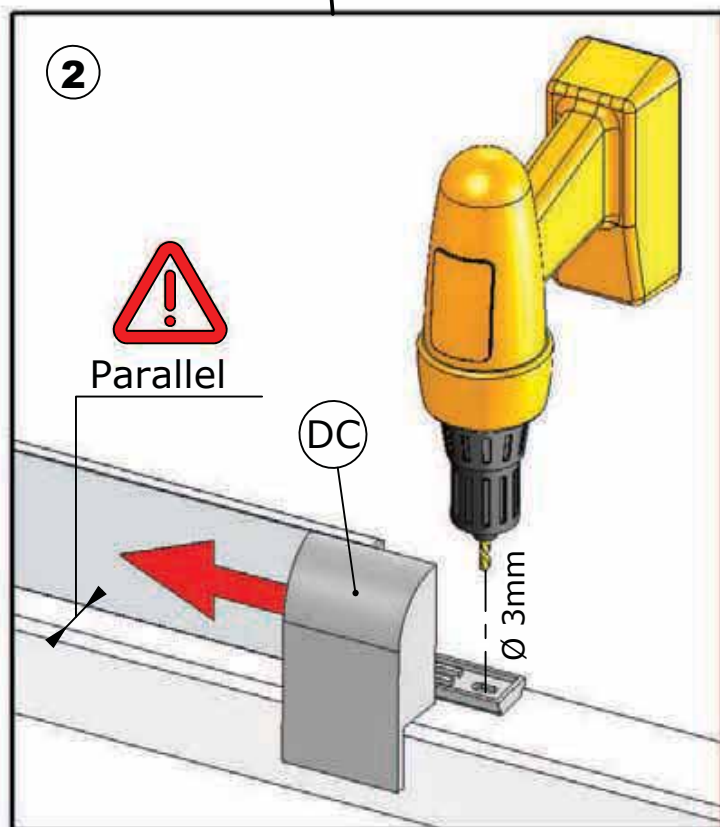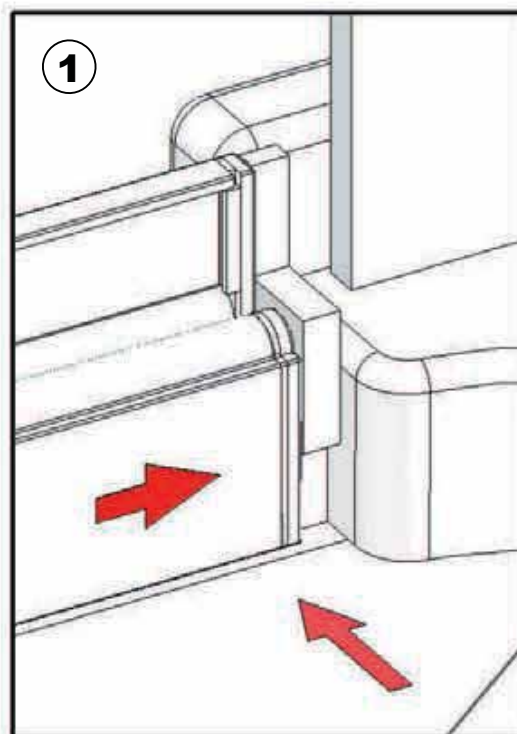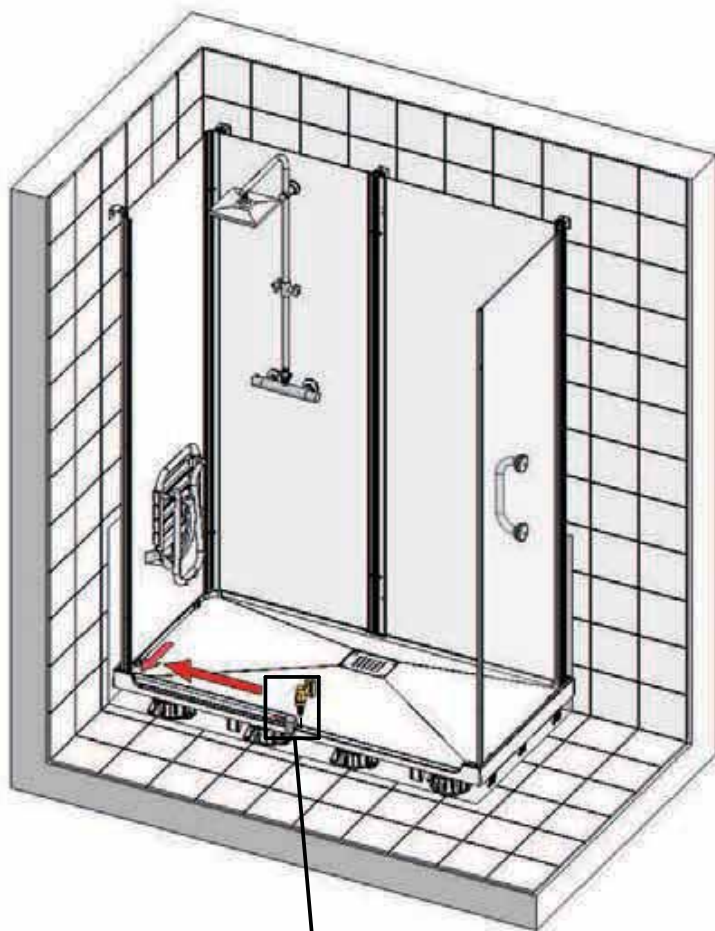


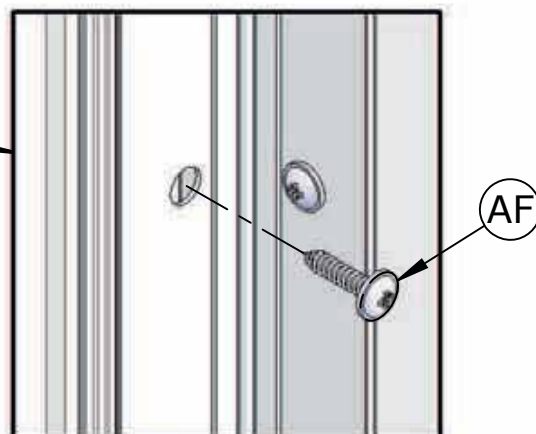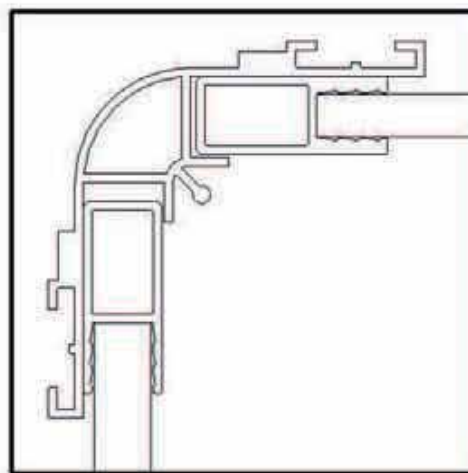
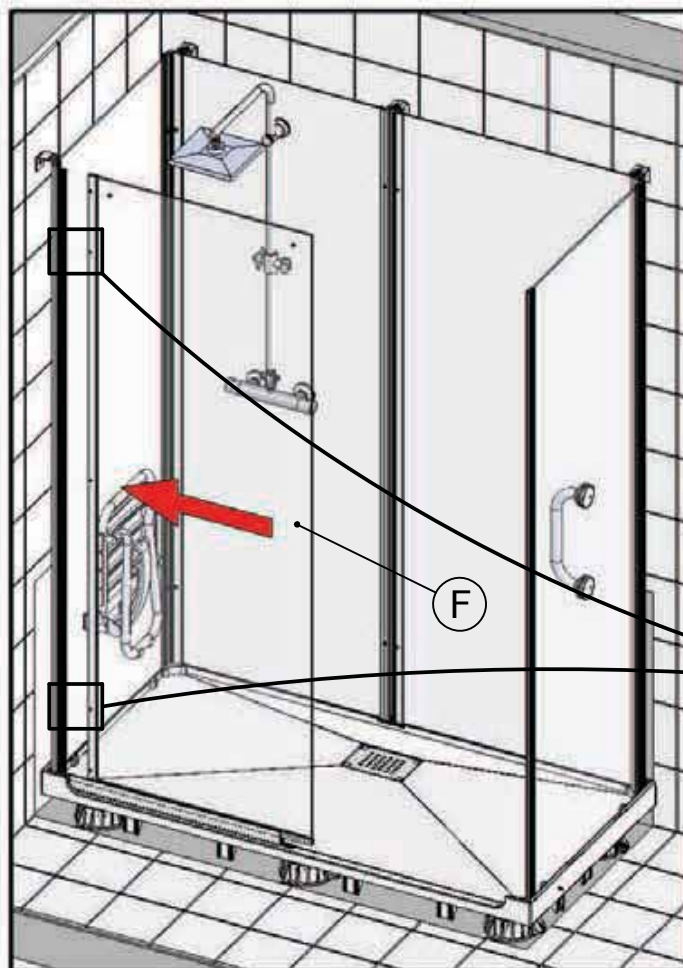
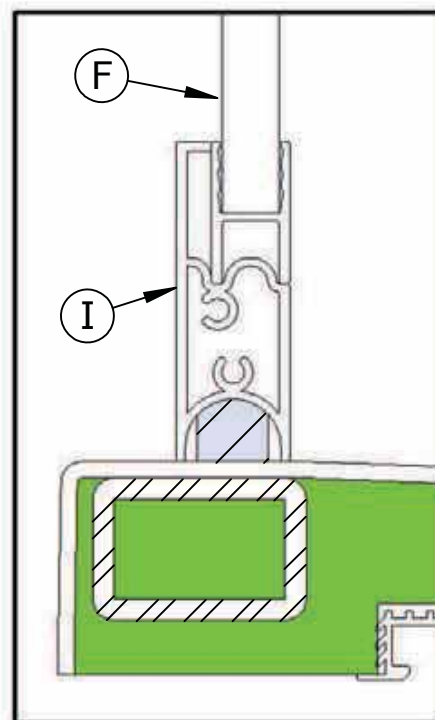
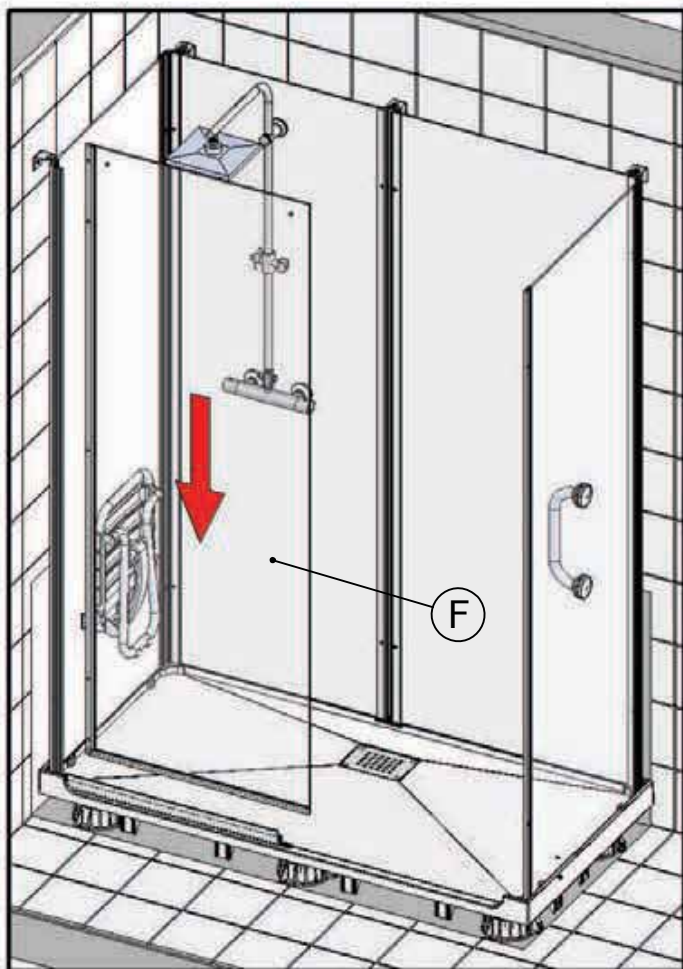




Corner version

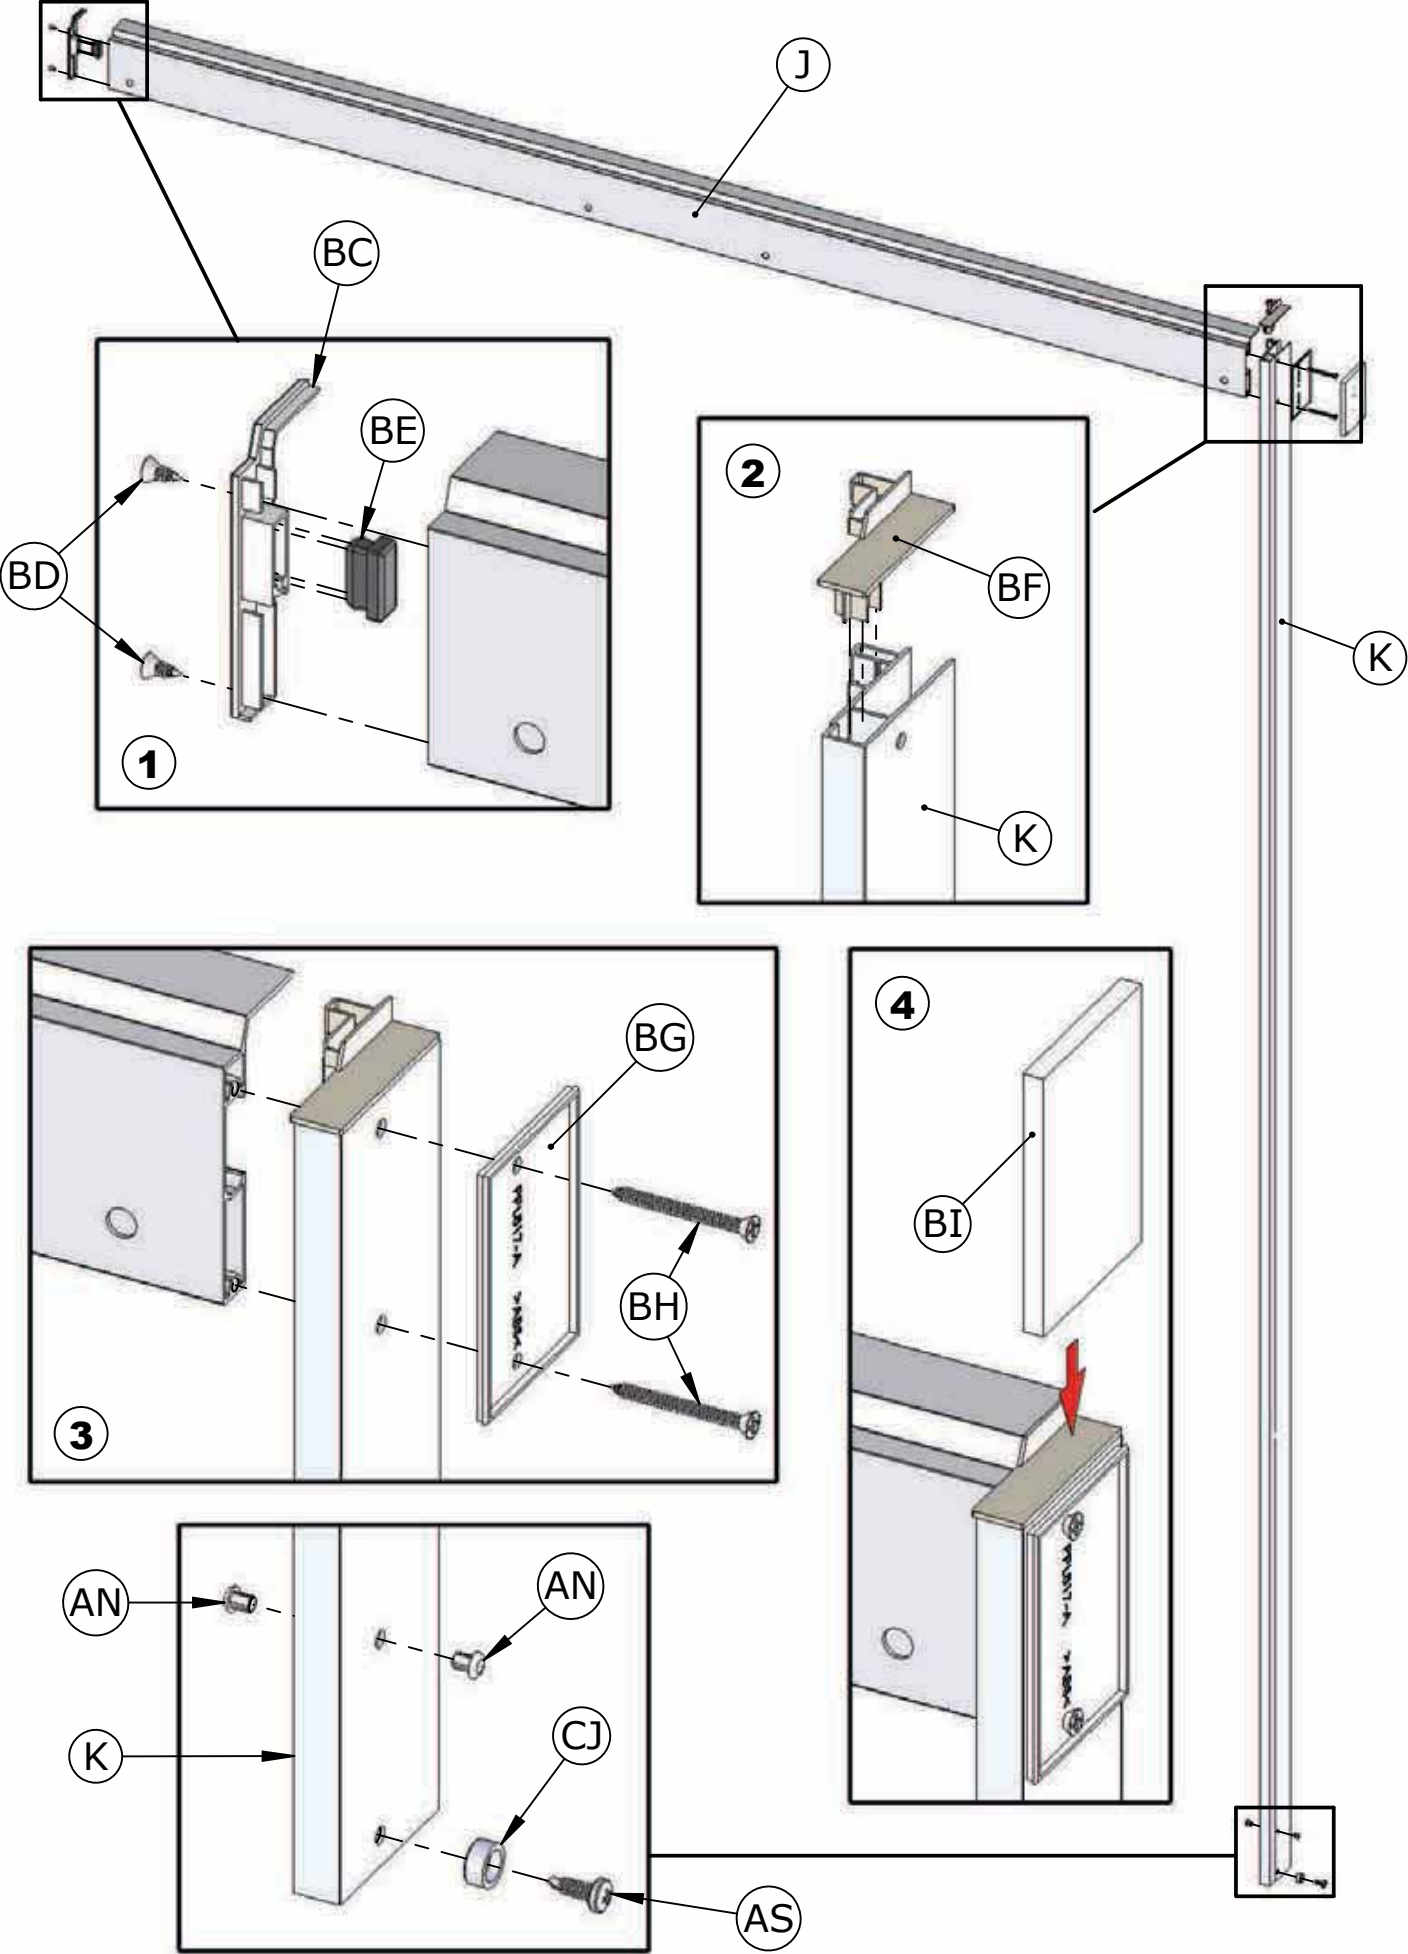


Recess version




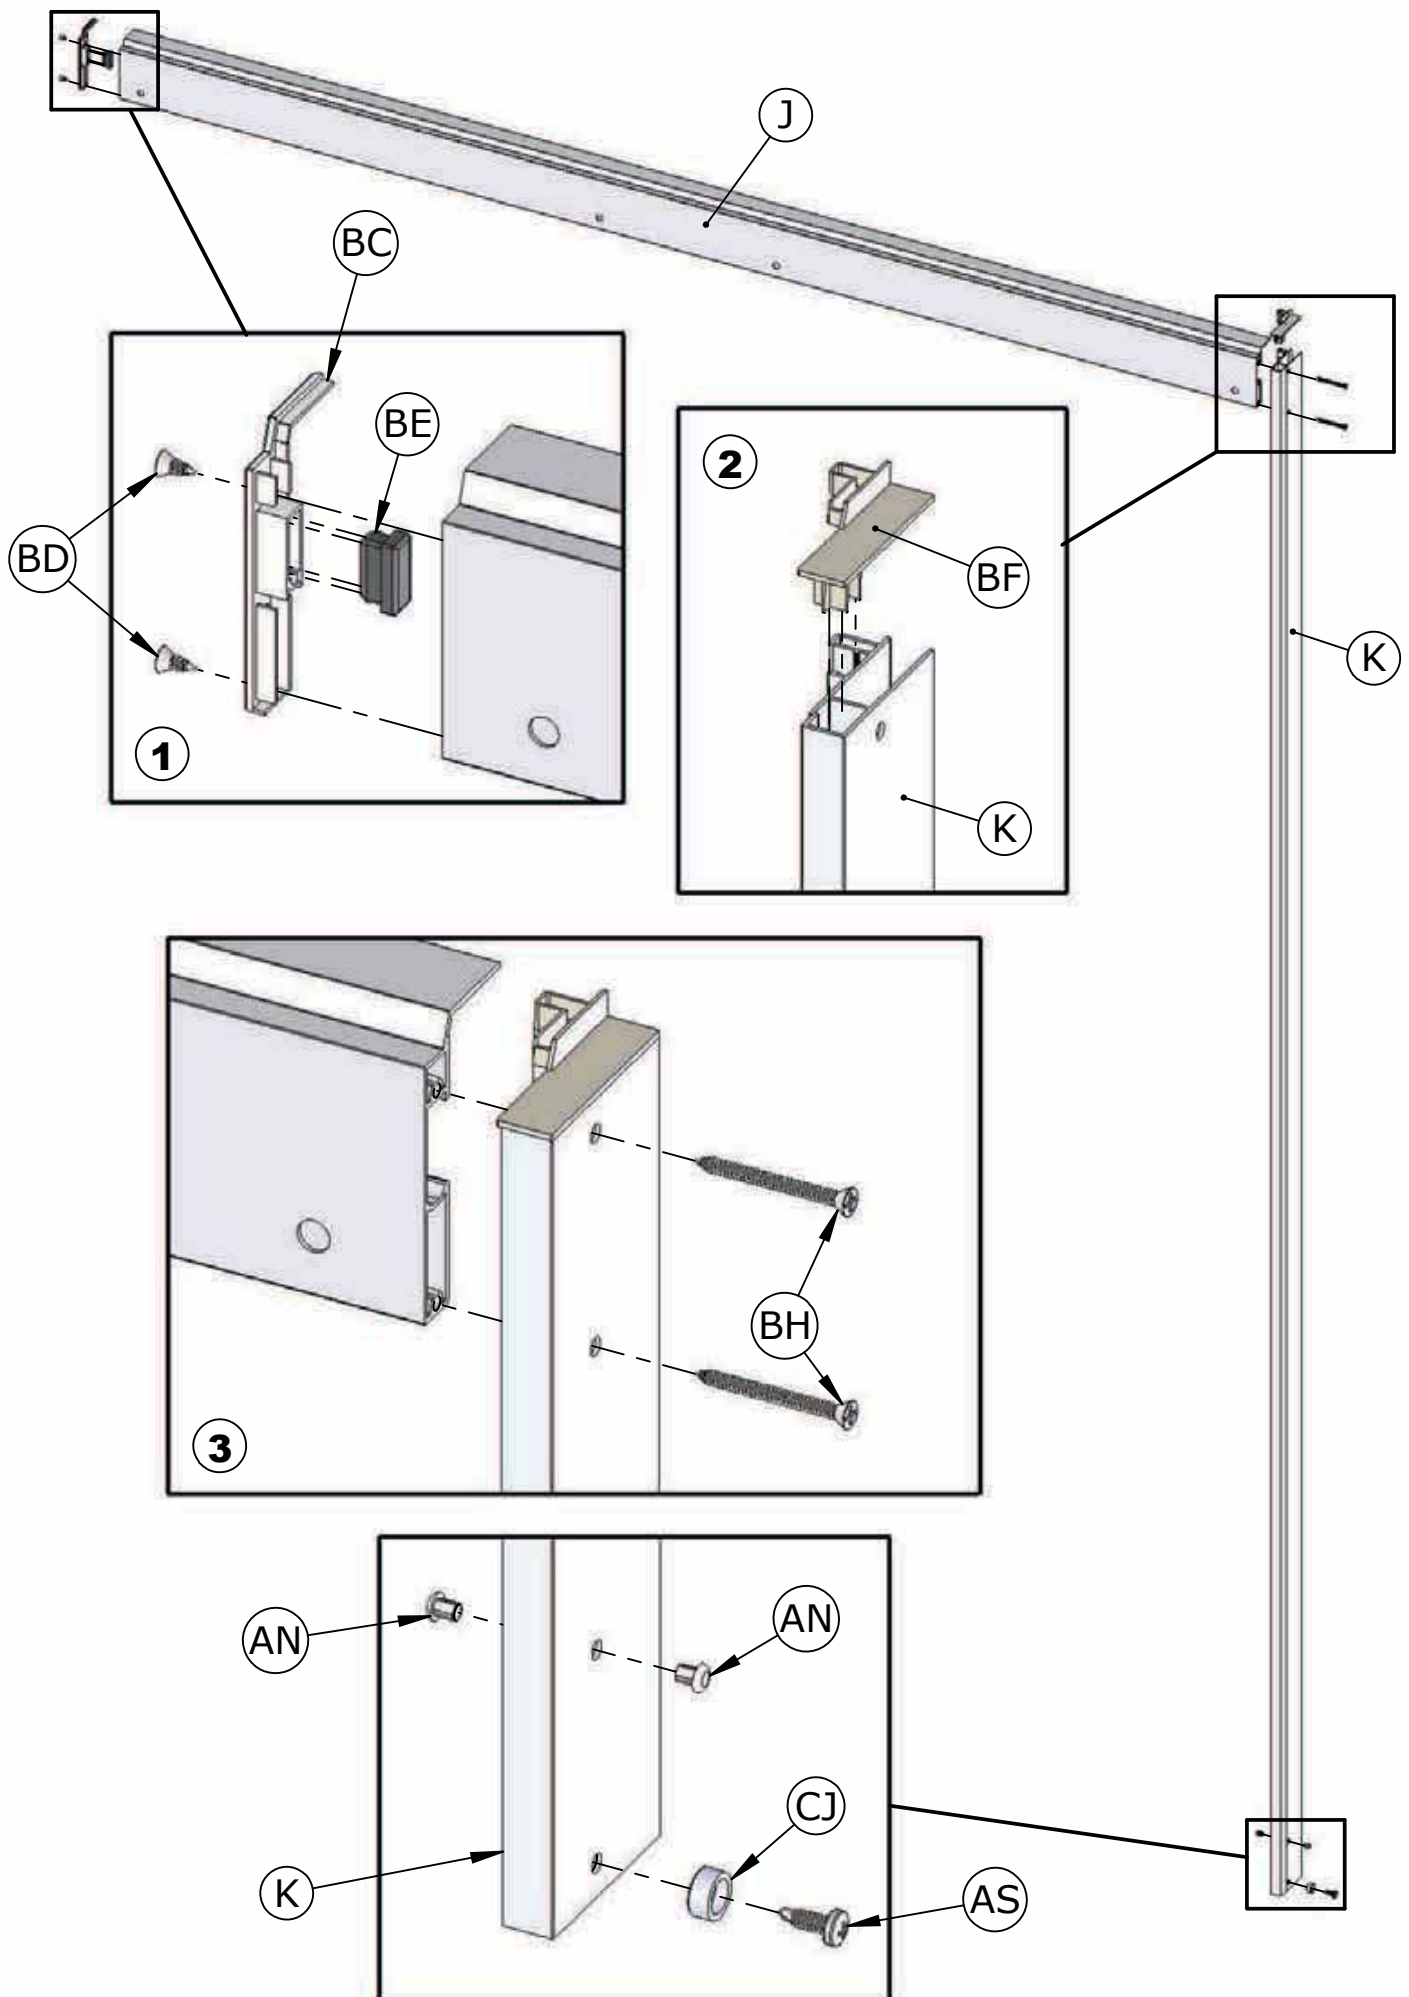


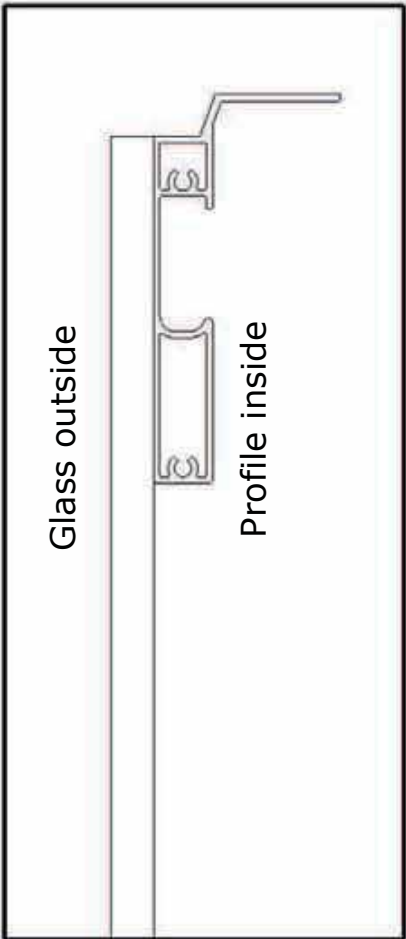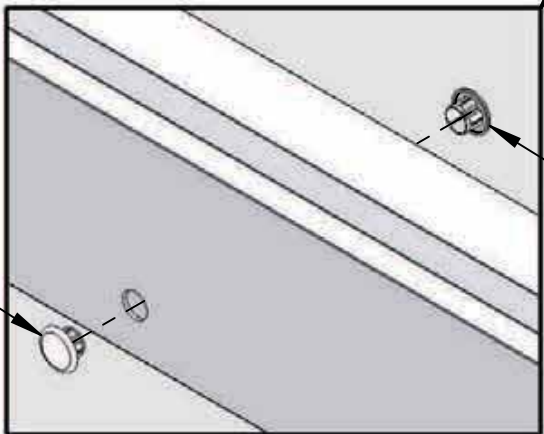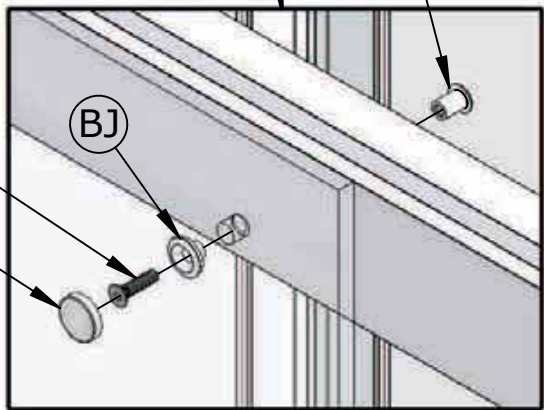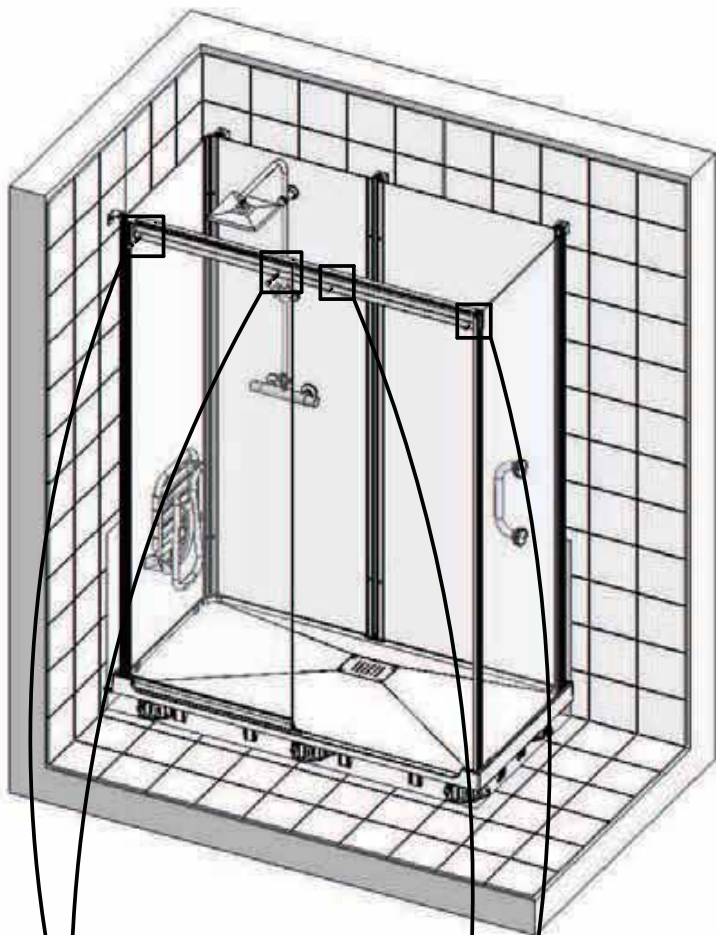


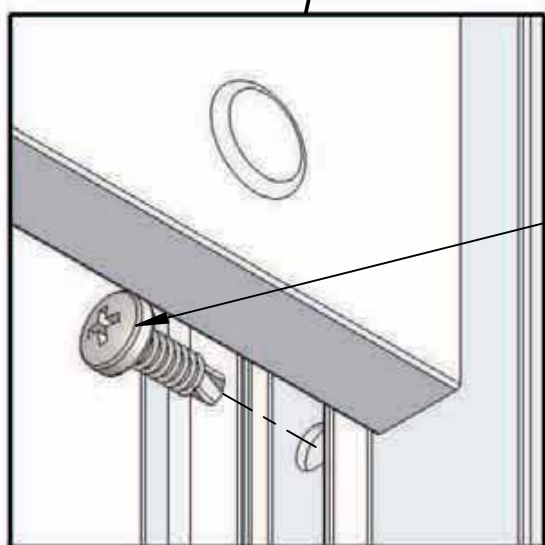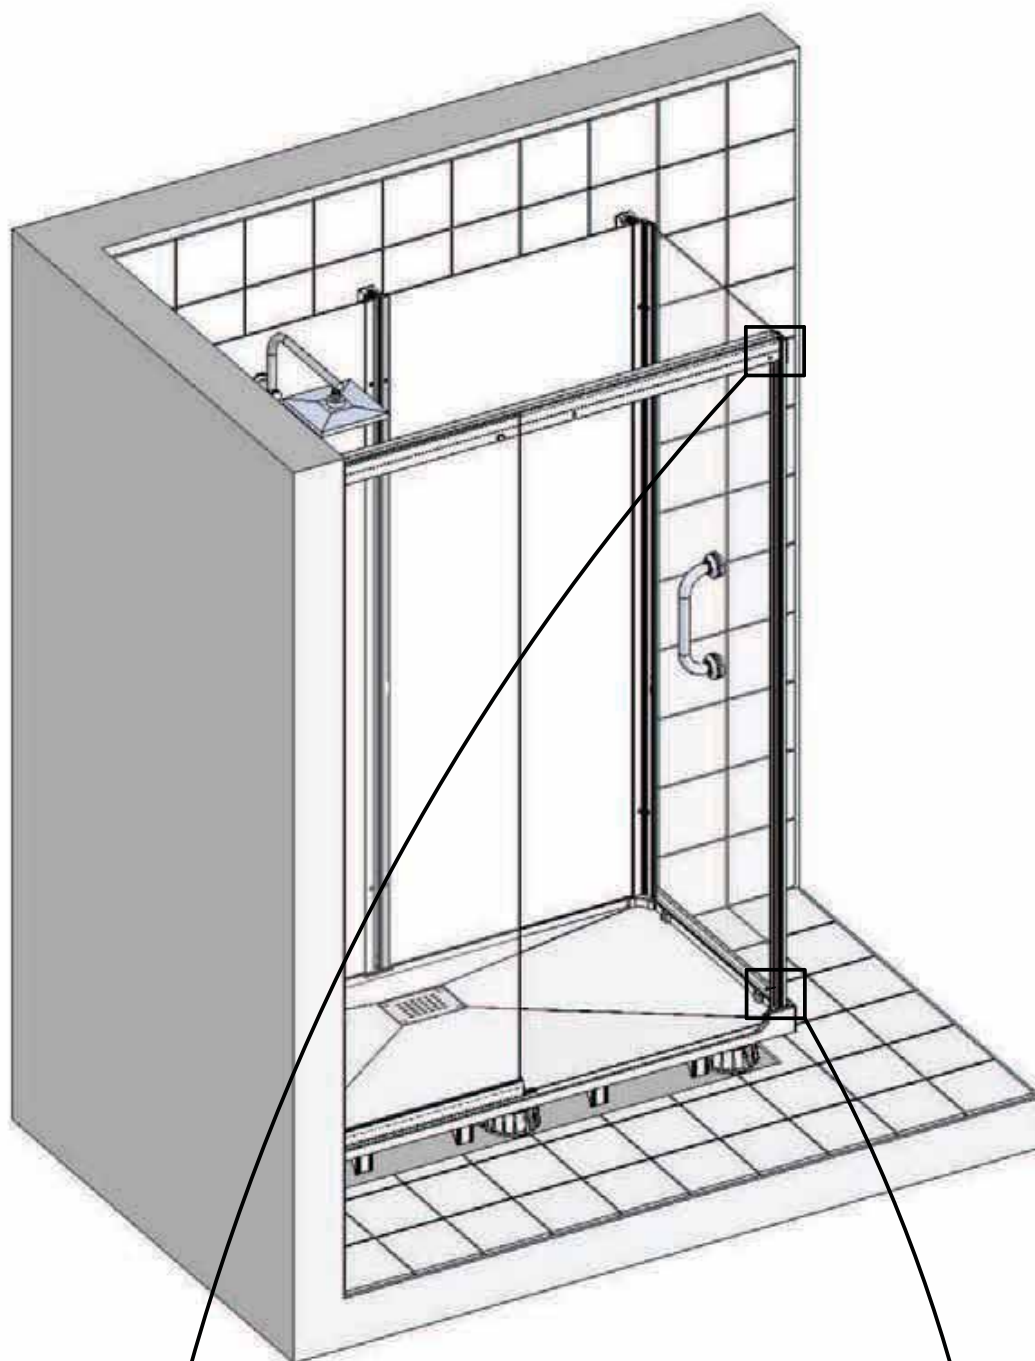



AS

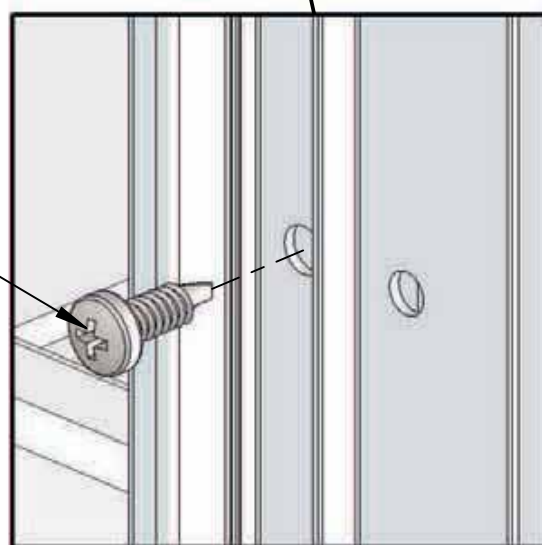

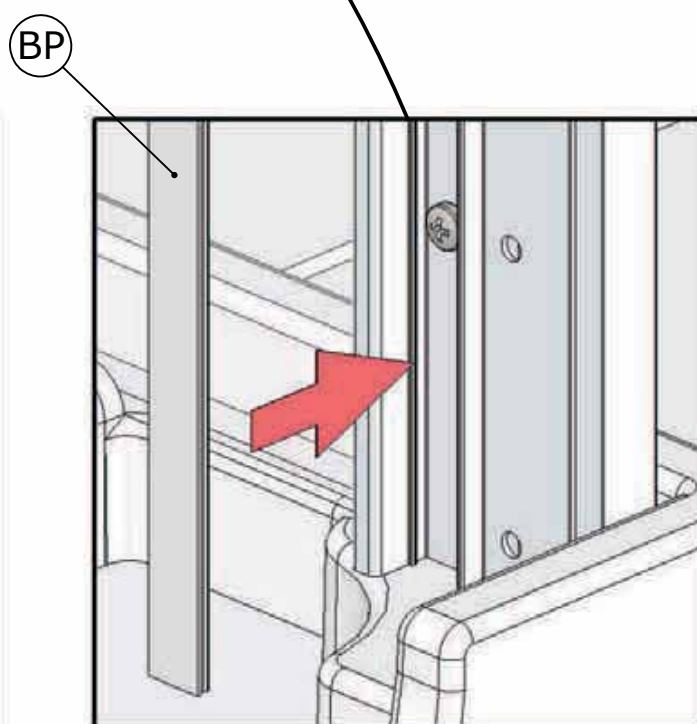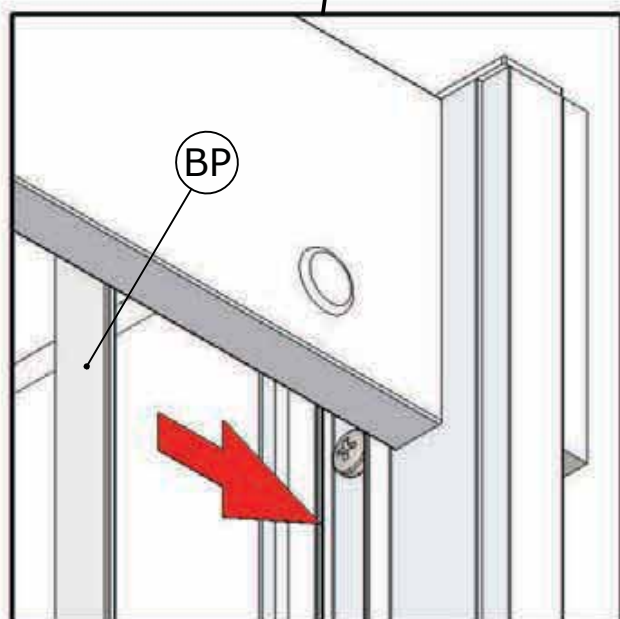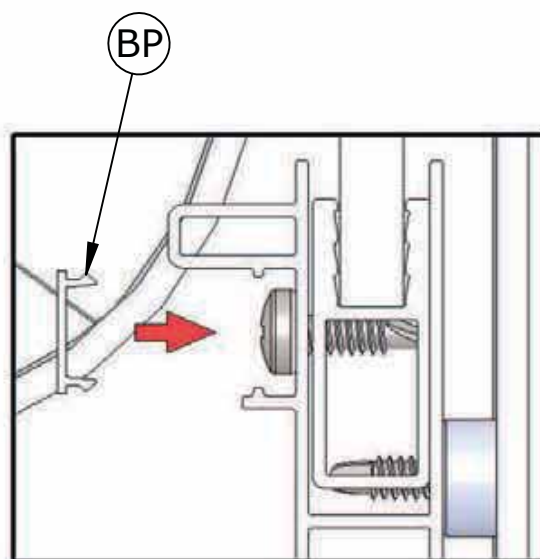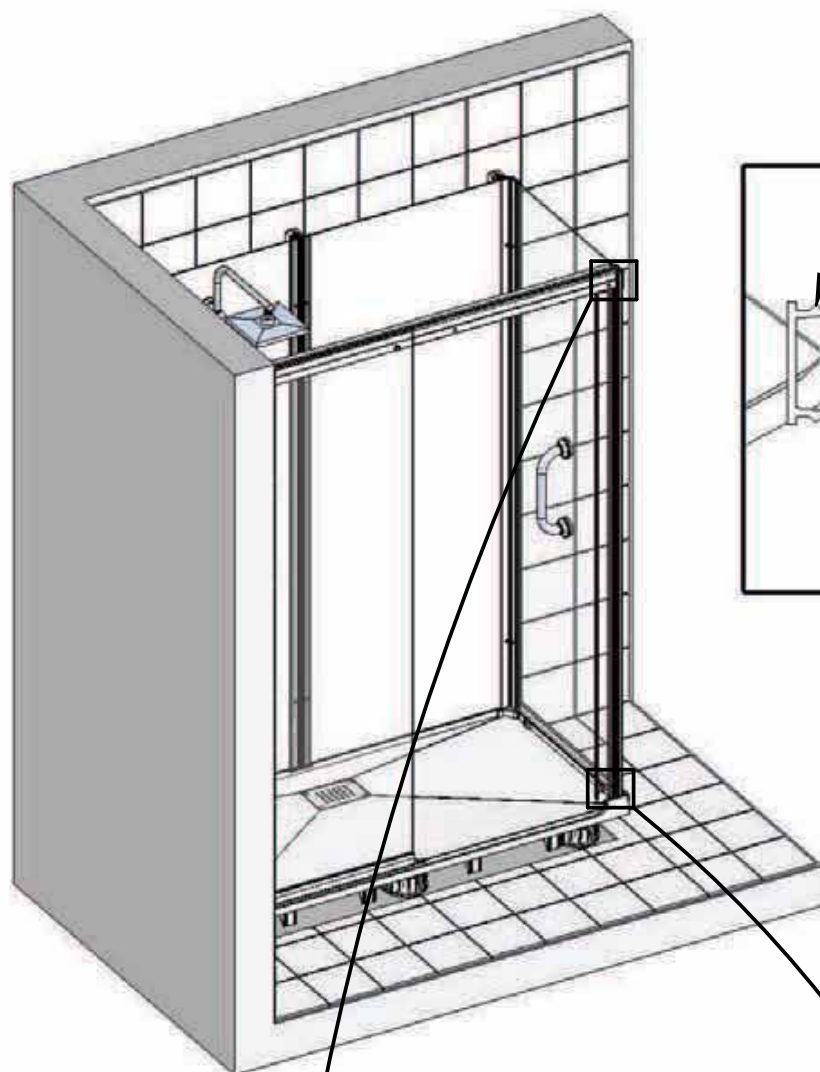



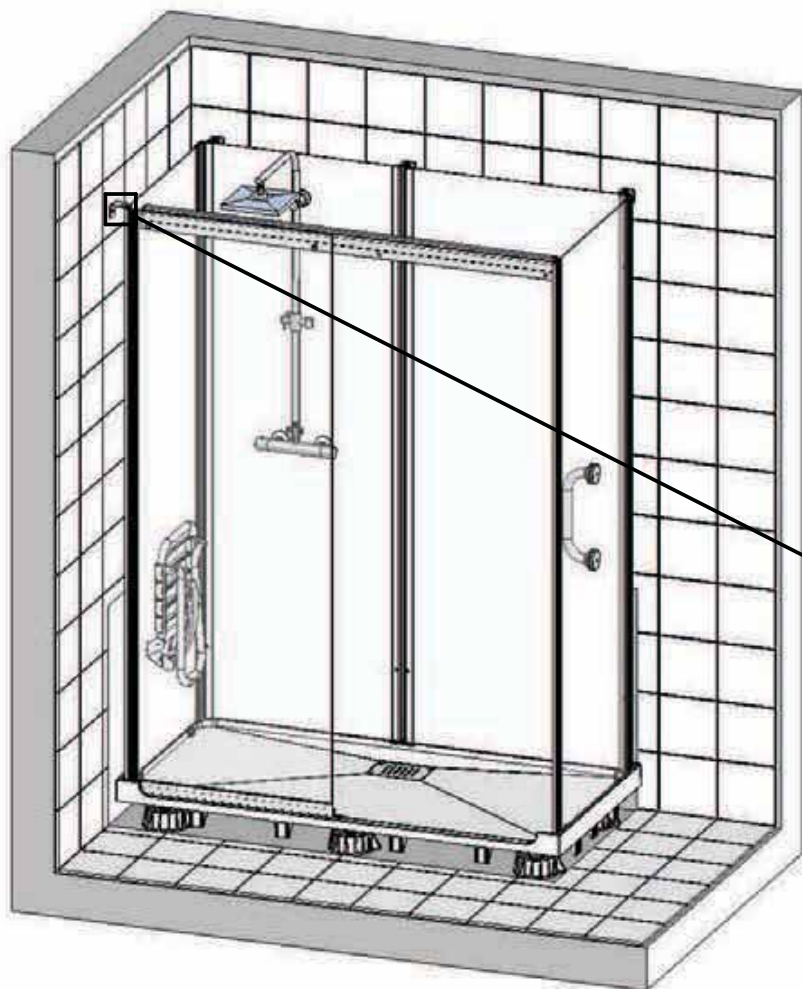


If $35\text{mm} < Y < 55\text{mm}$

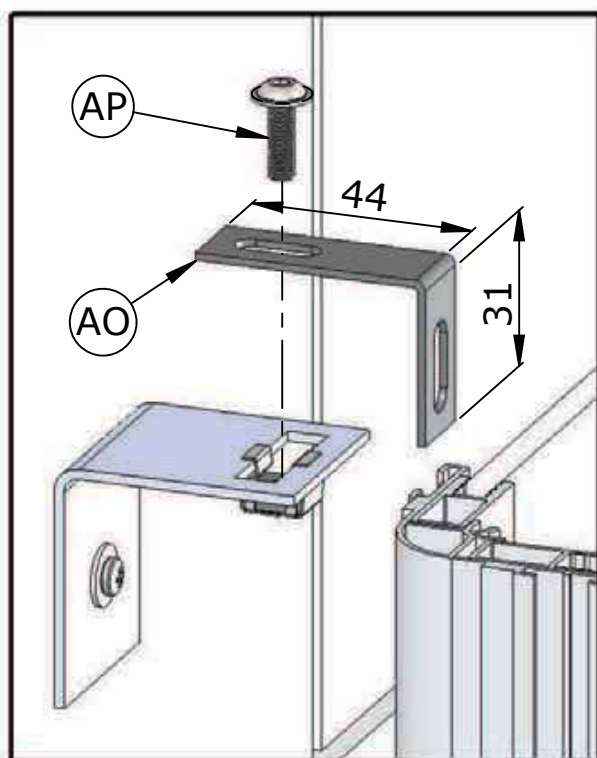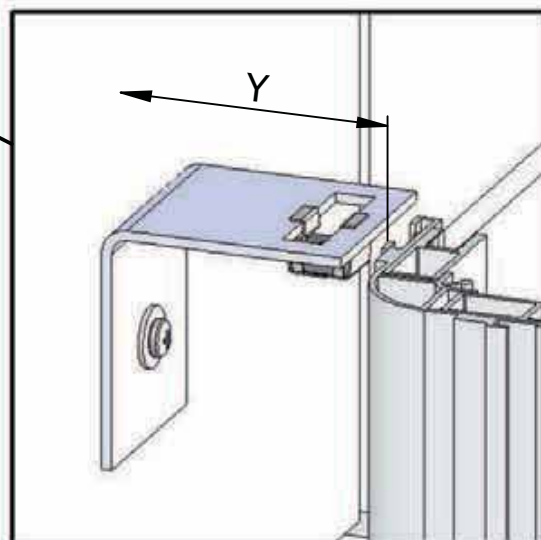


Or


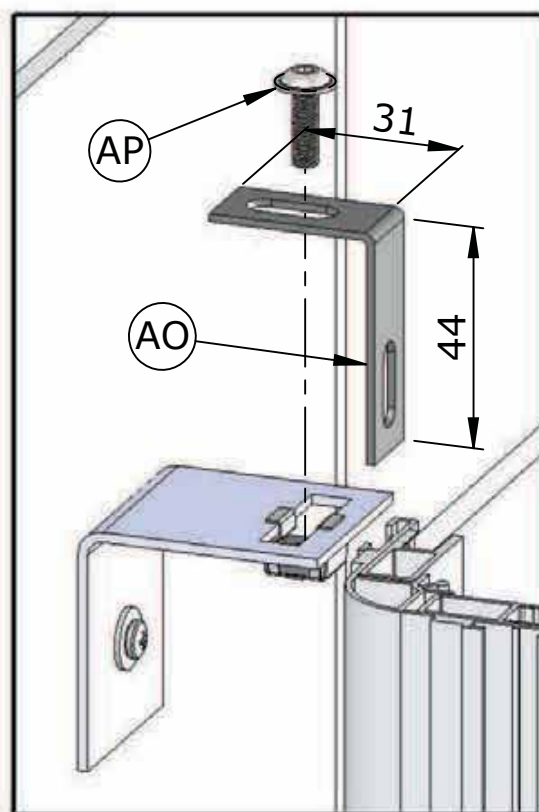


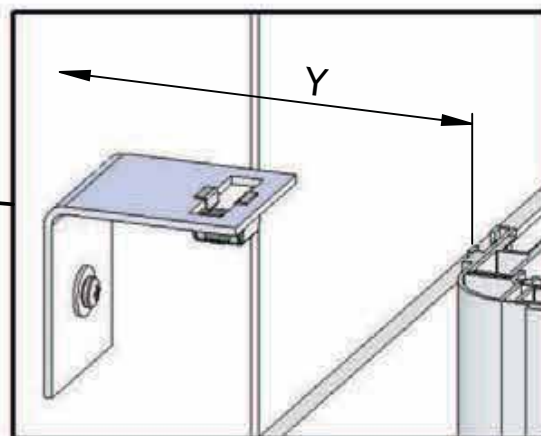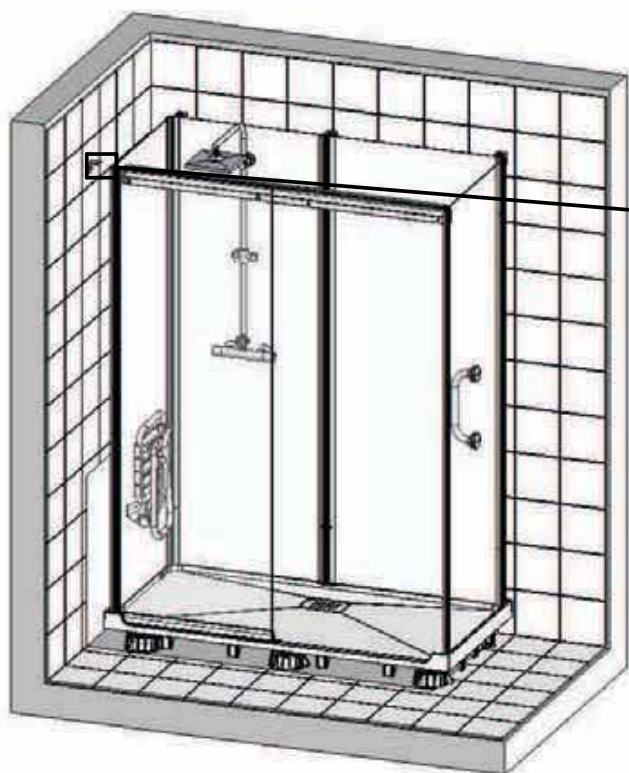


If $55\text{mm} < Y < 290\text{mm}$


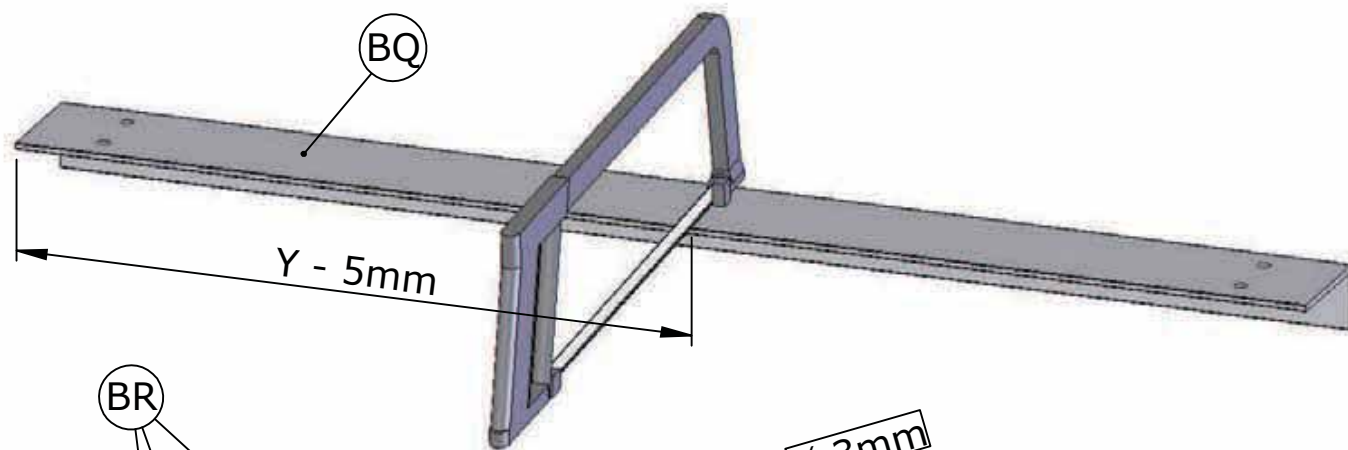







Ø 3mm





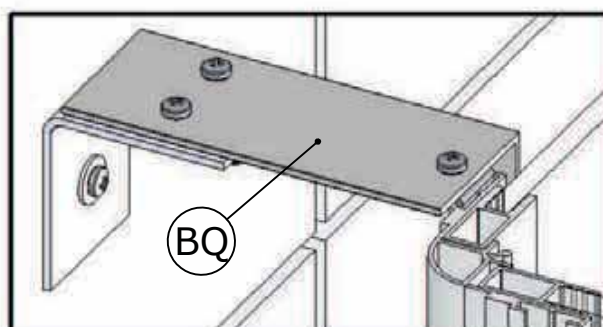
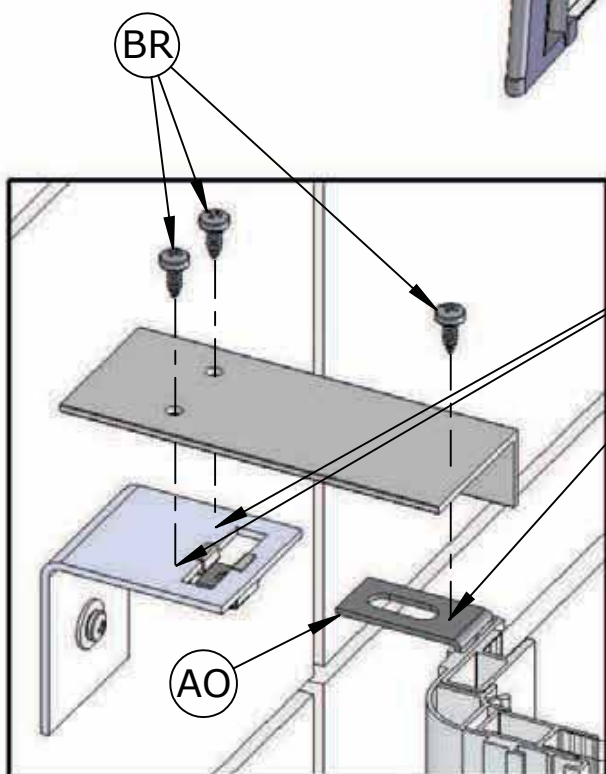






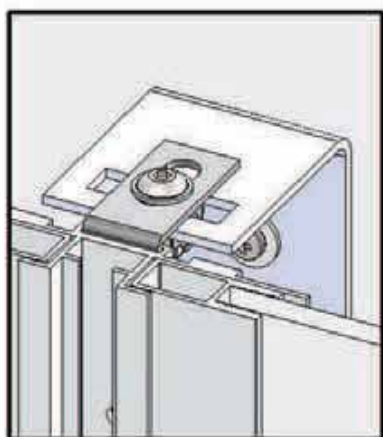


Ensure all is level and plumb then tighten all screws.

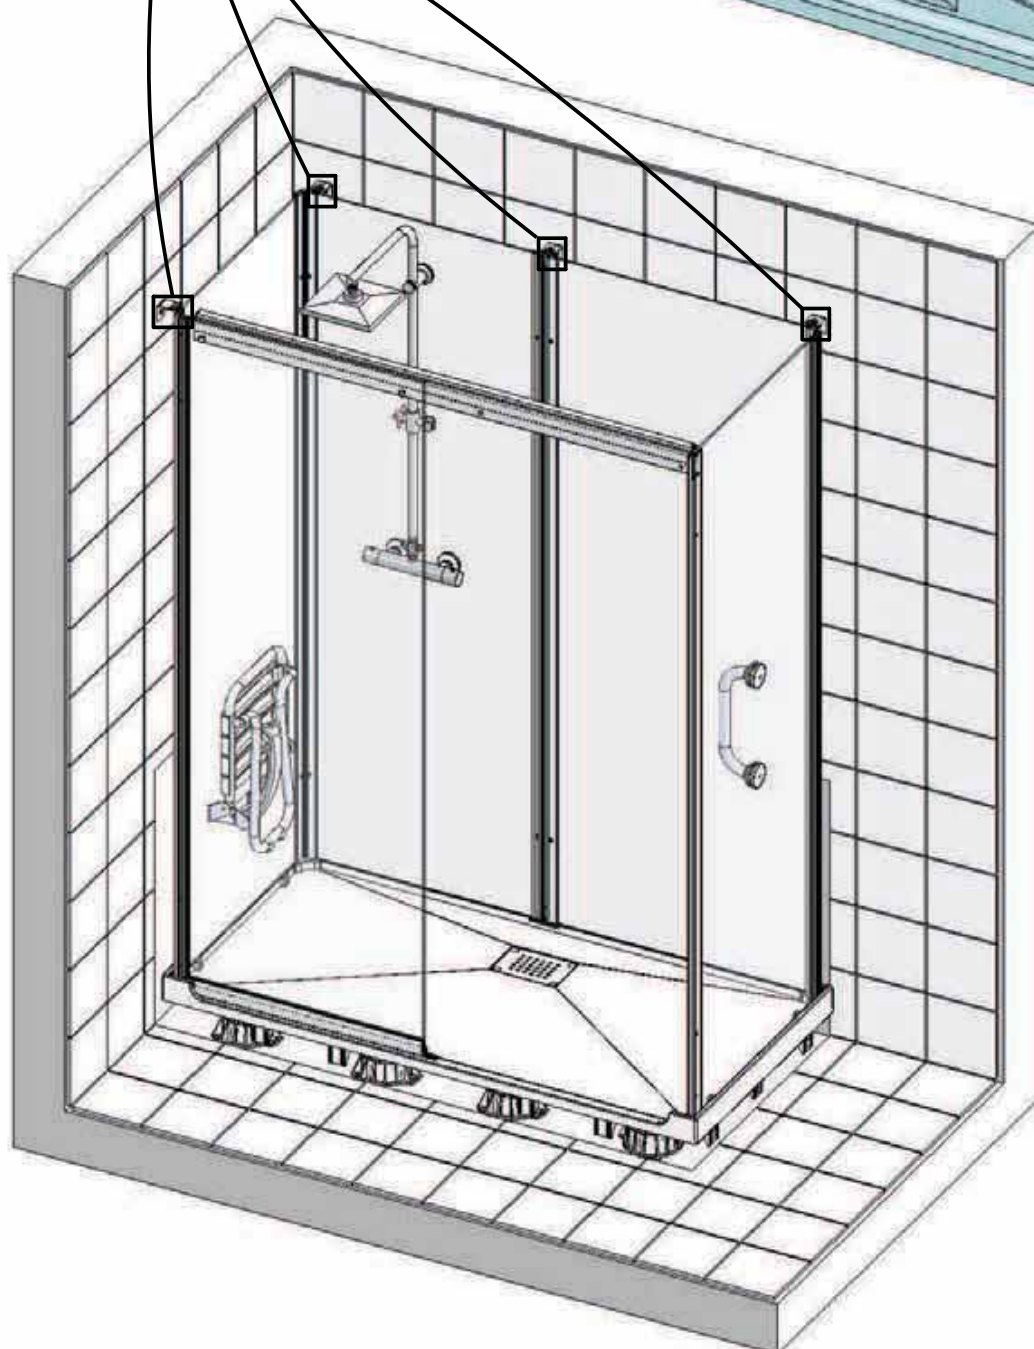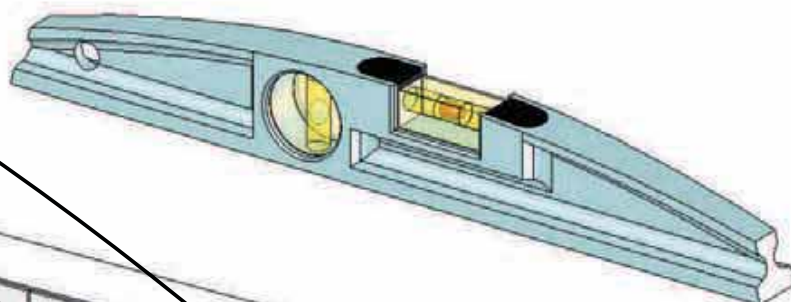

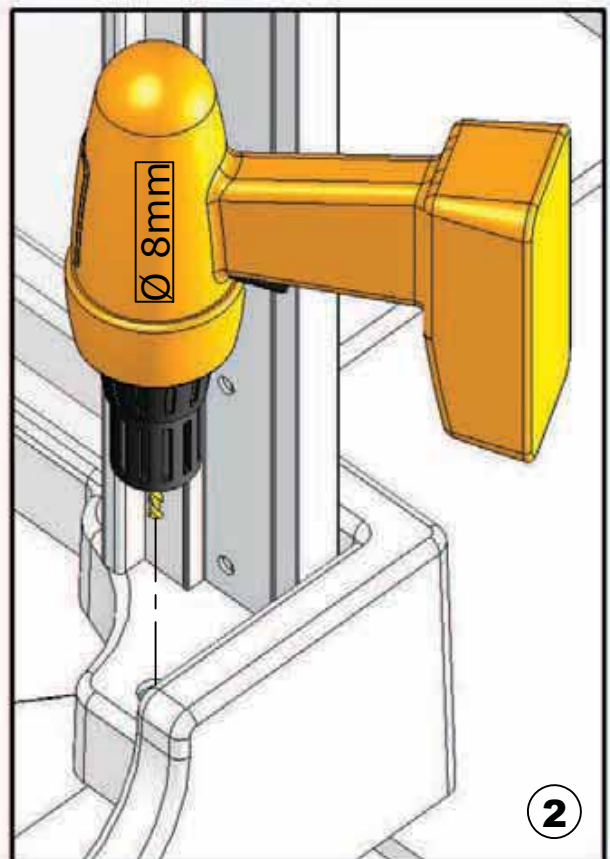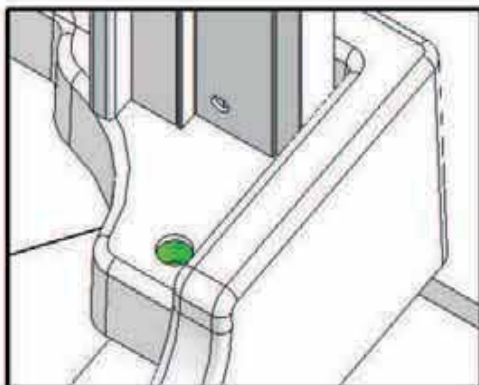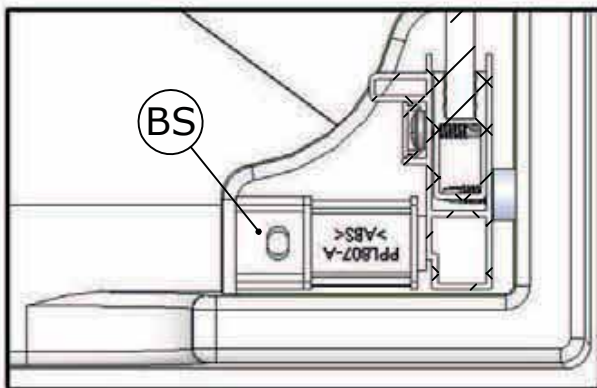
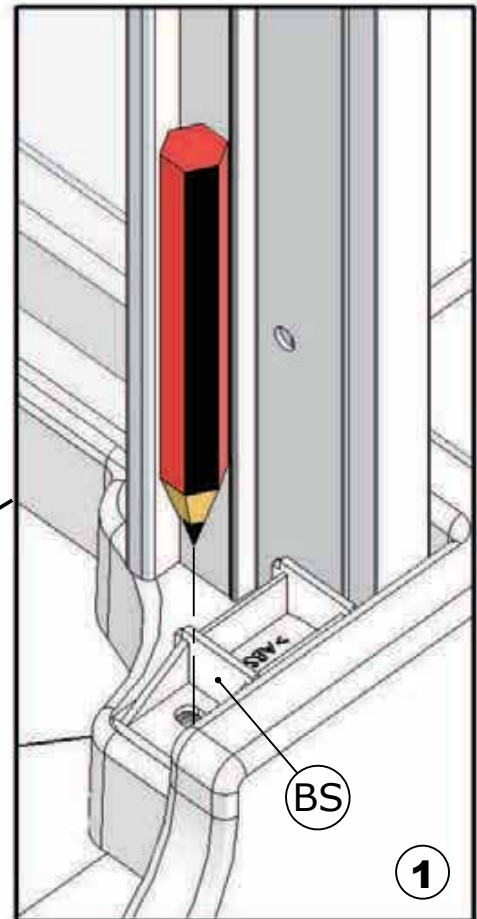
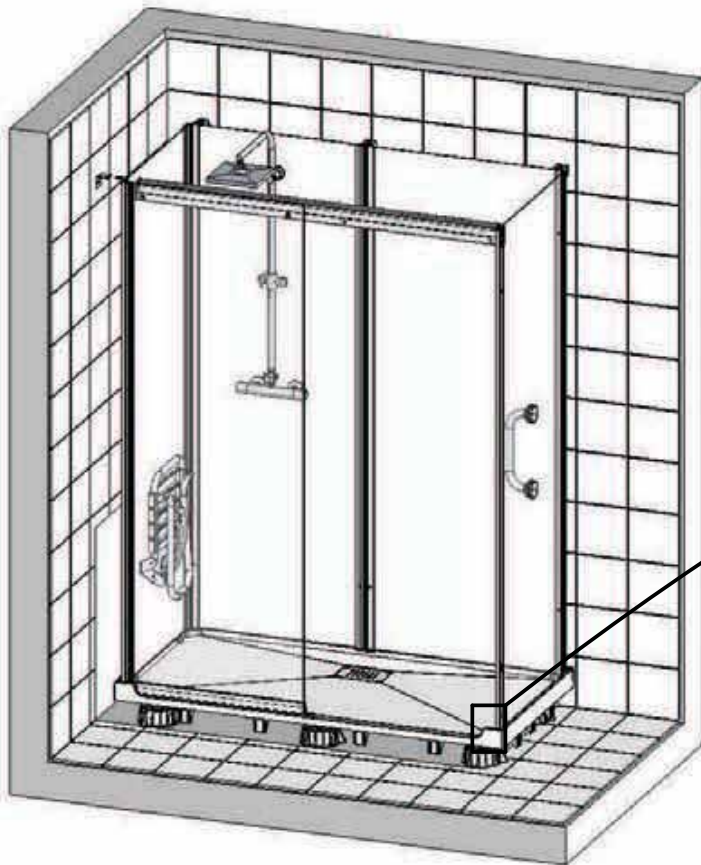


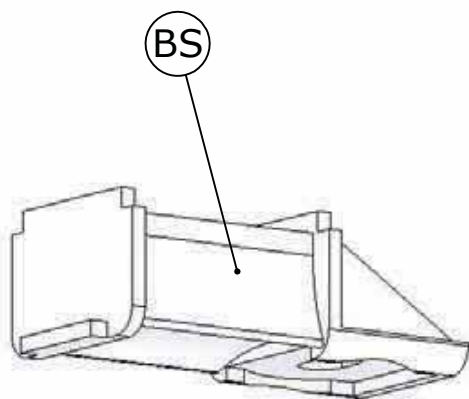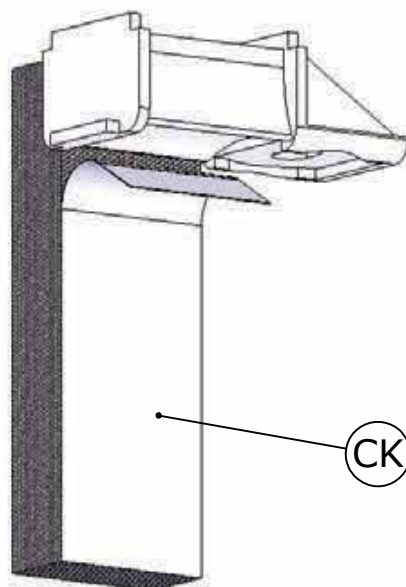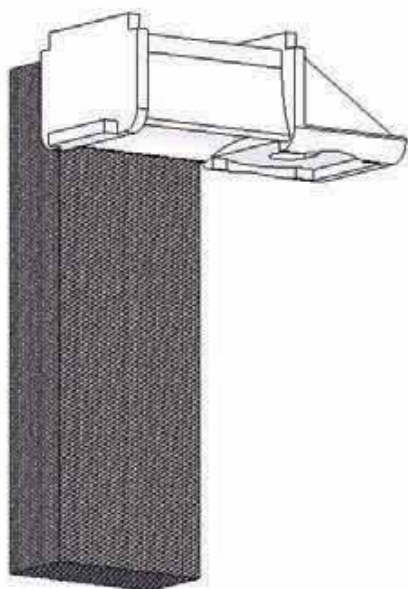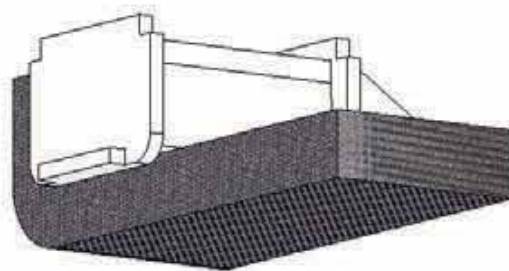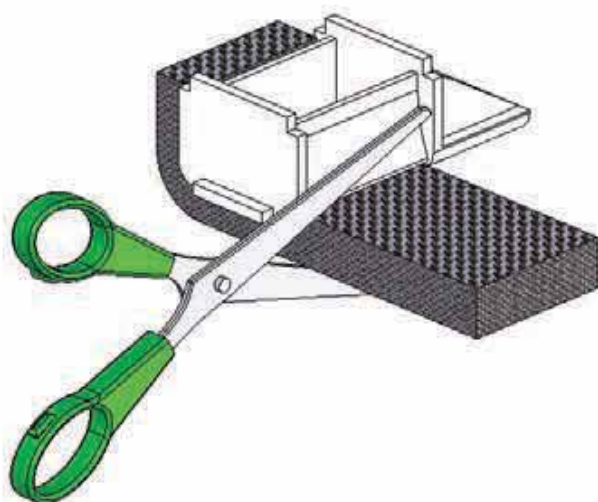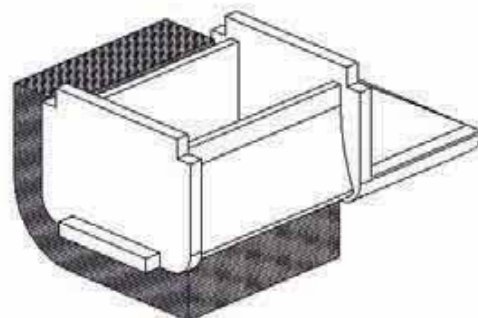
**1****2****3****4****5****6**

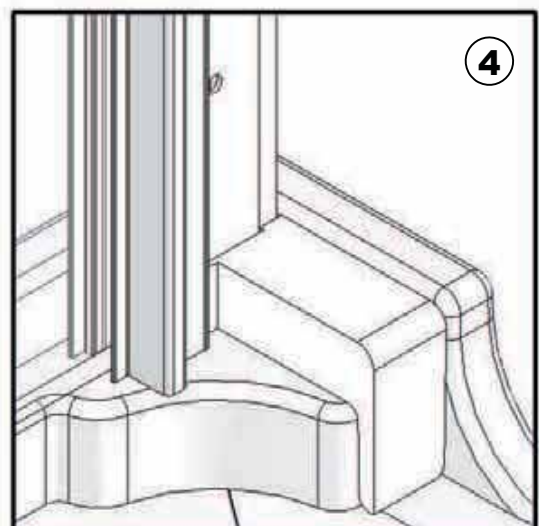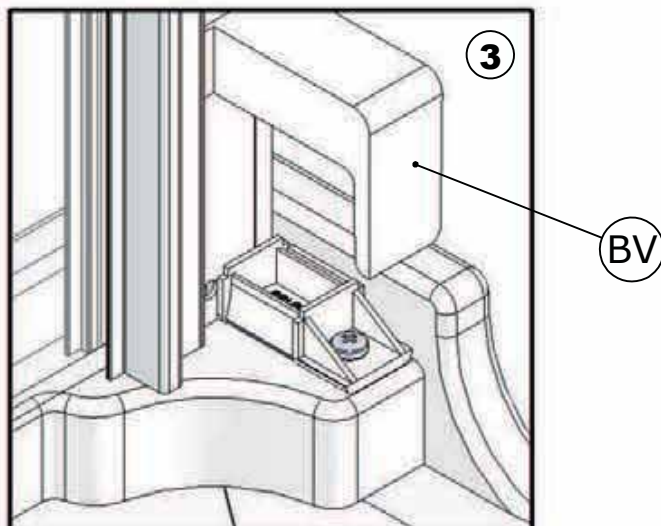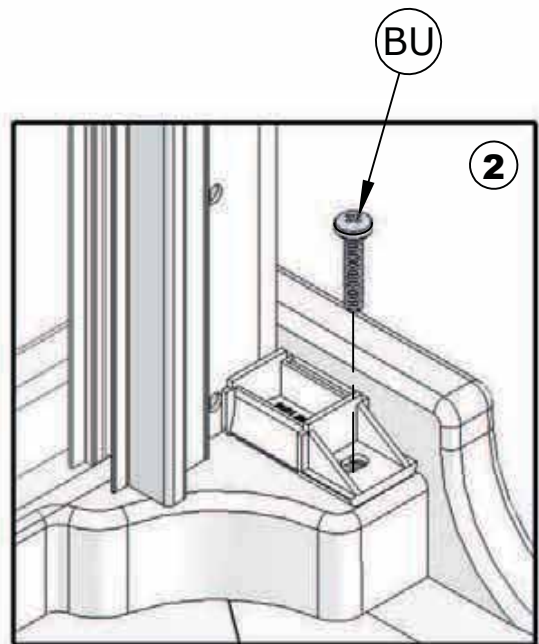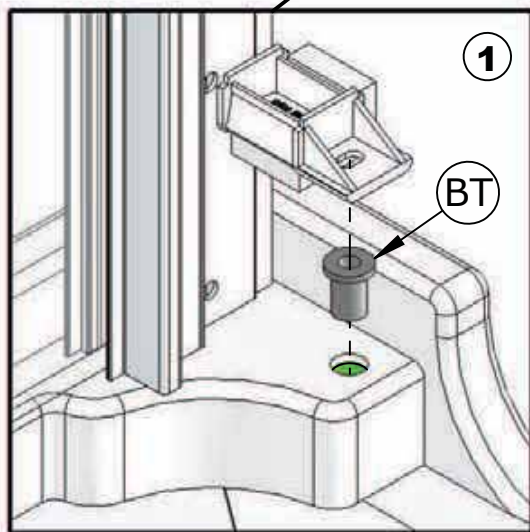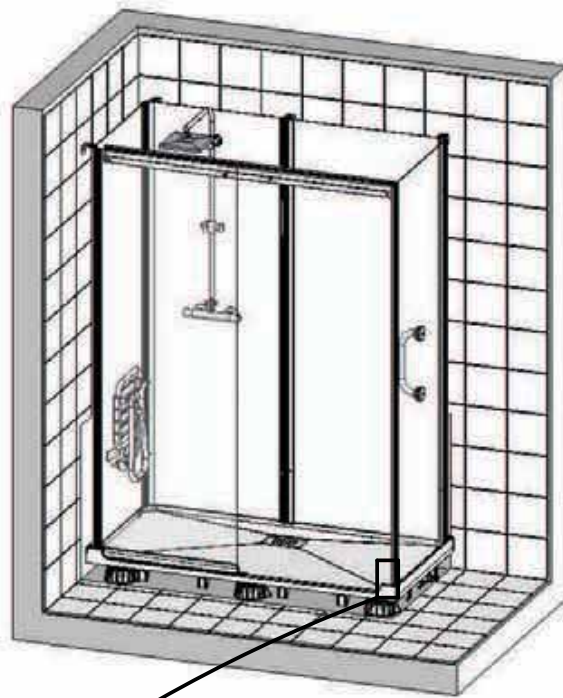


Without door

Version SOLO

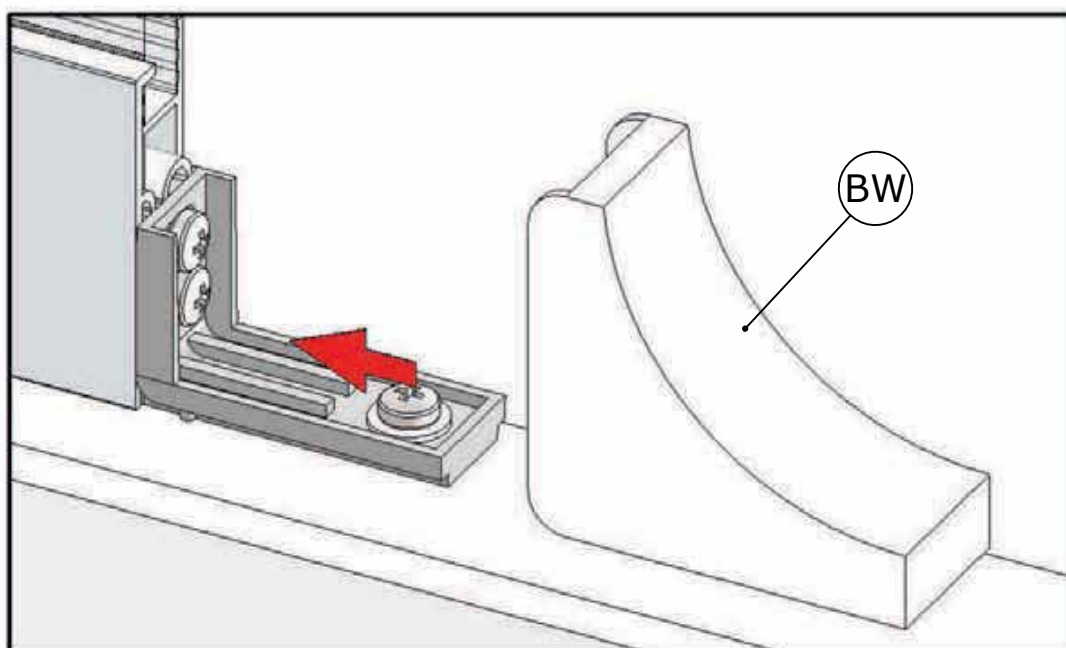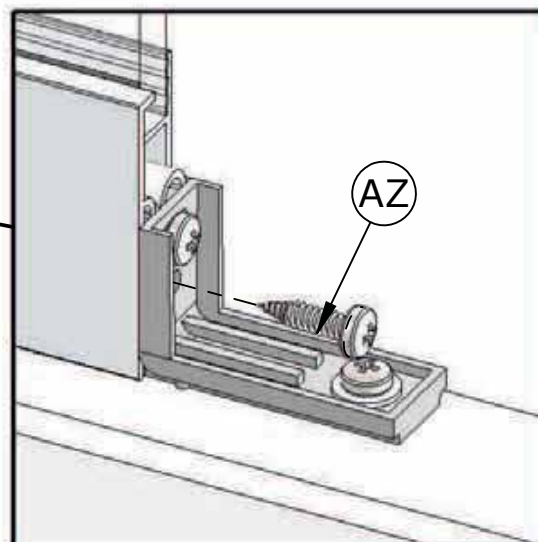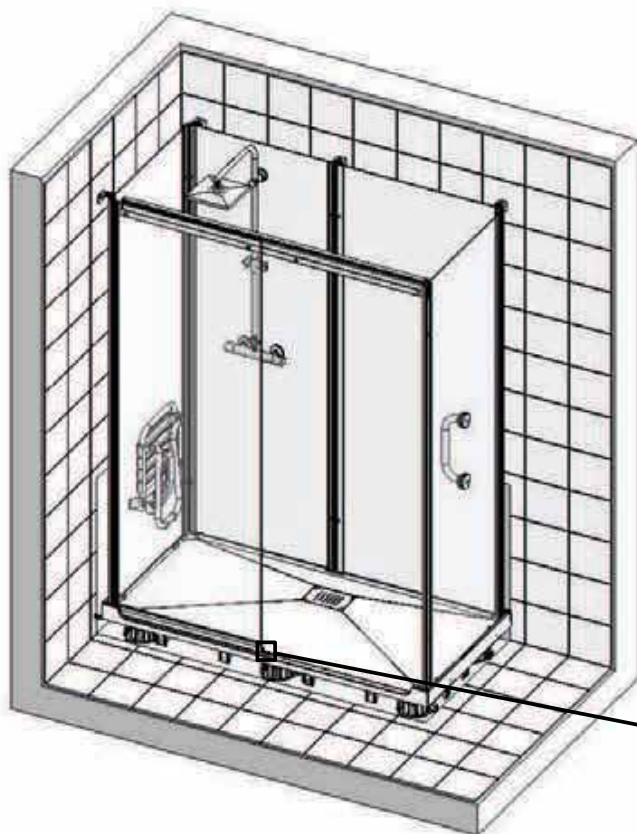





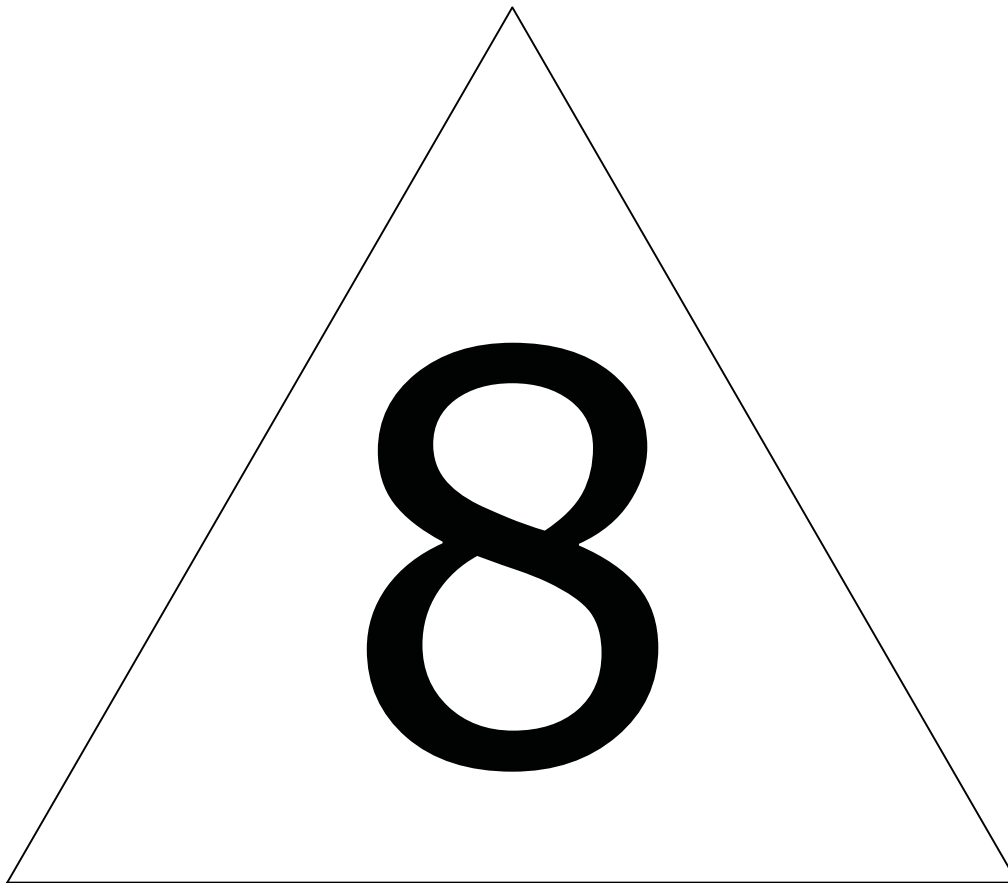





Sliding door version

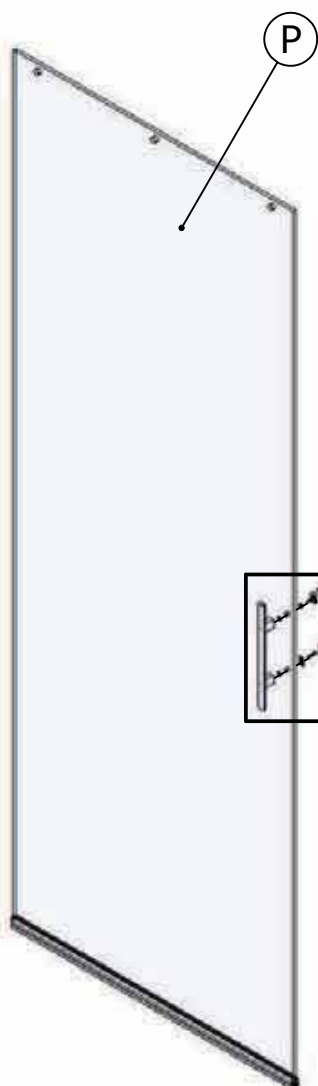


See separate handle installation instructions if required.

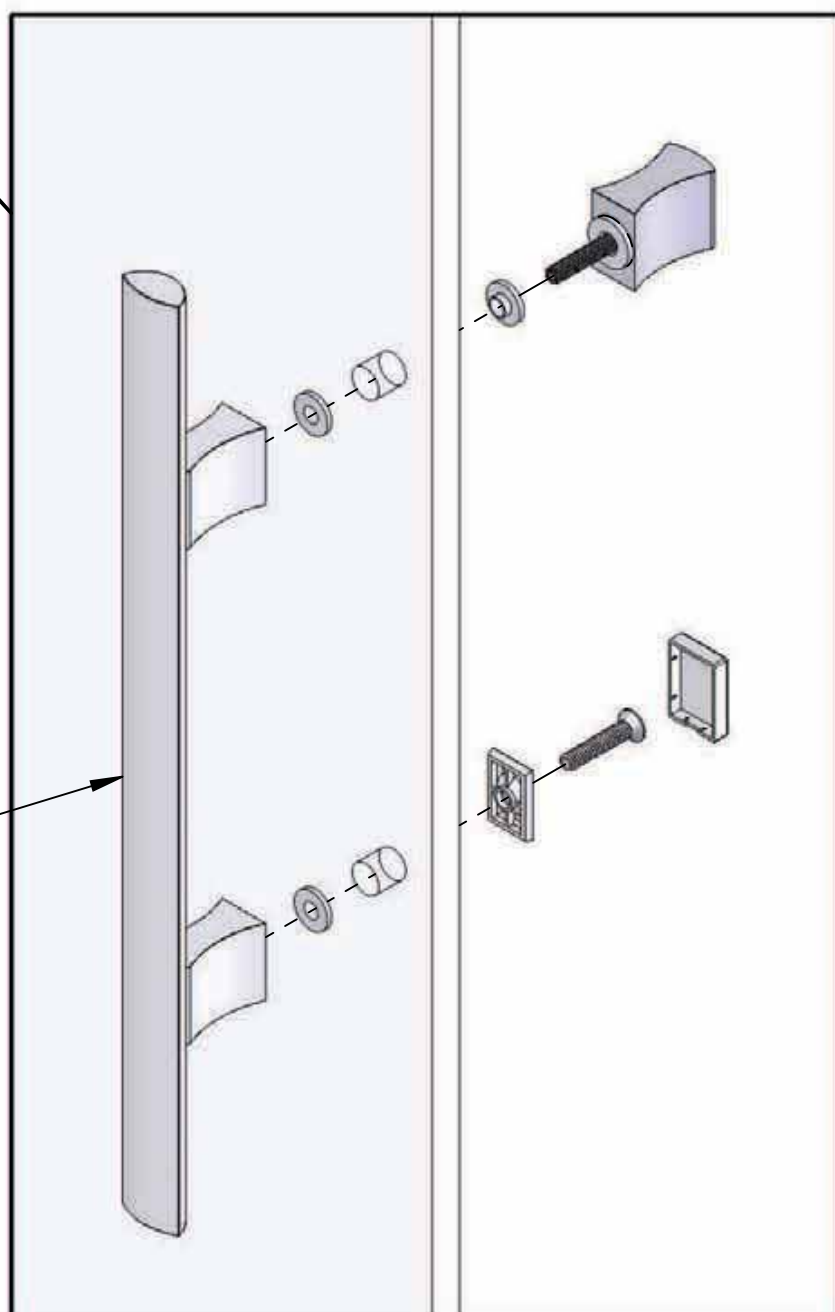

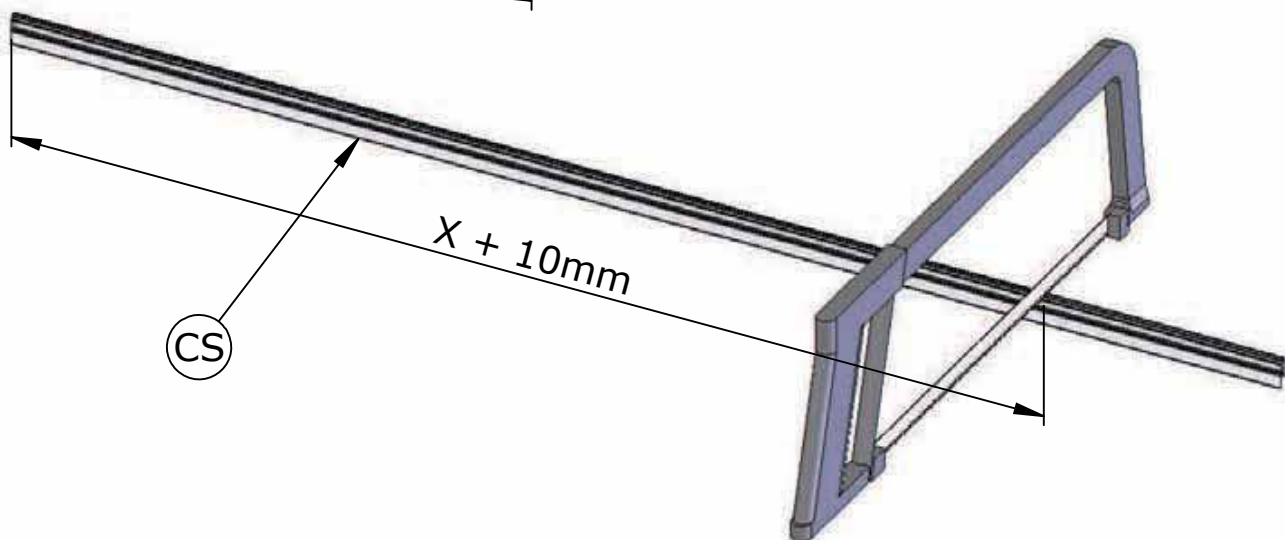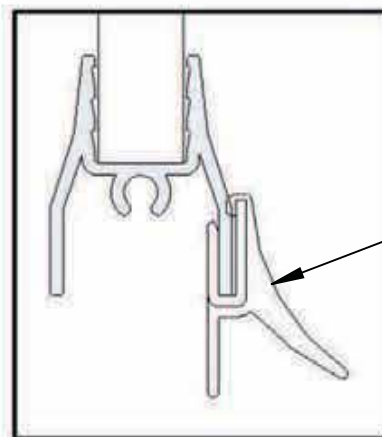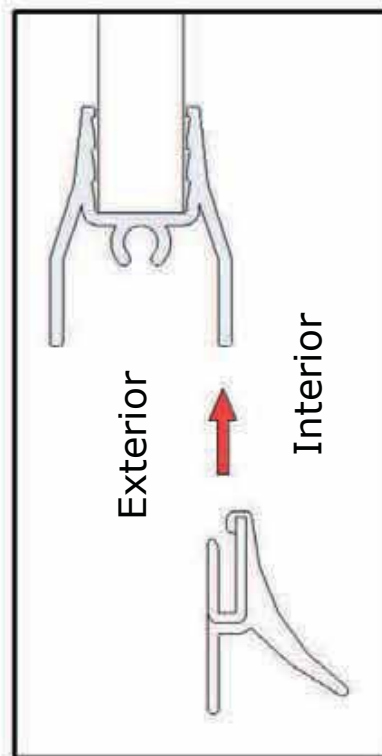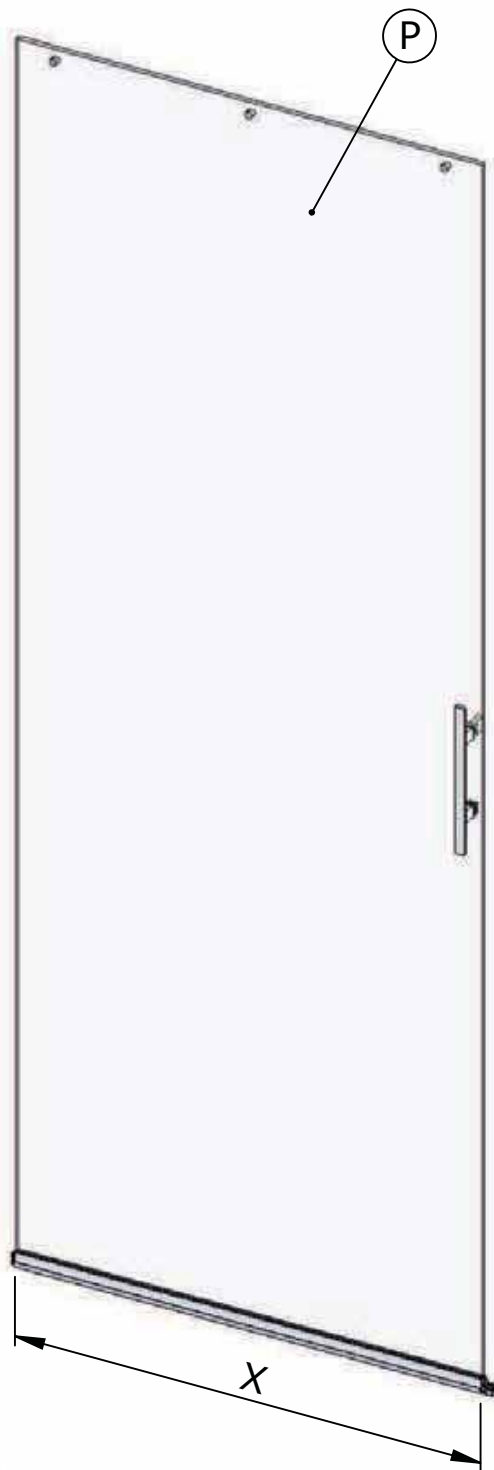

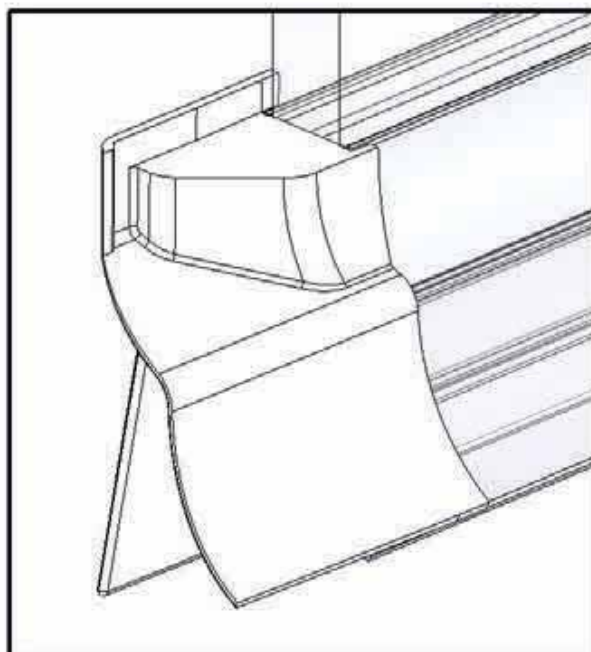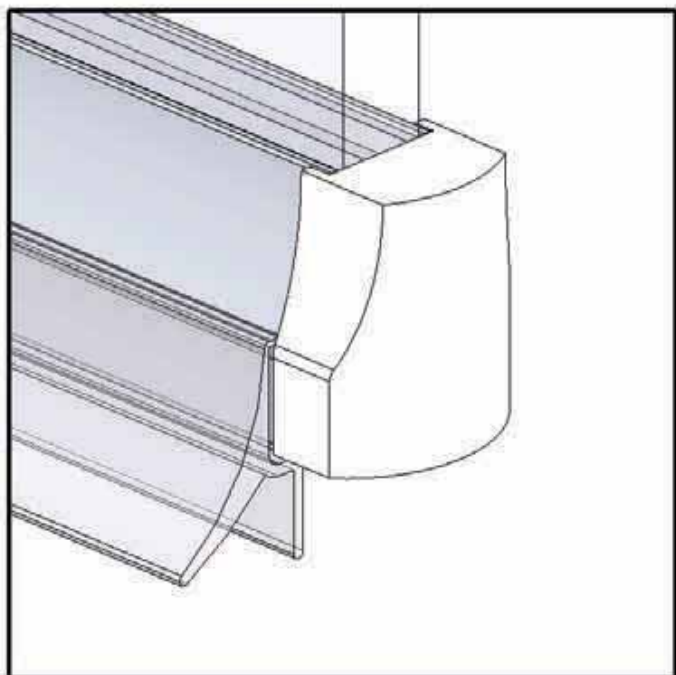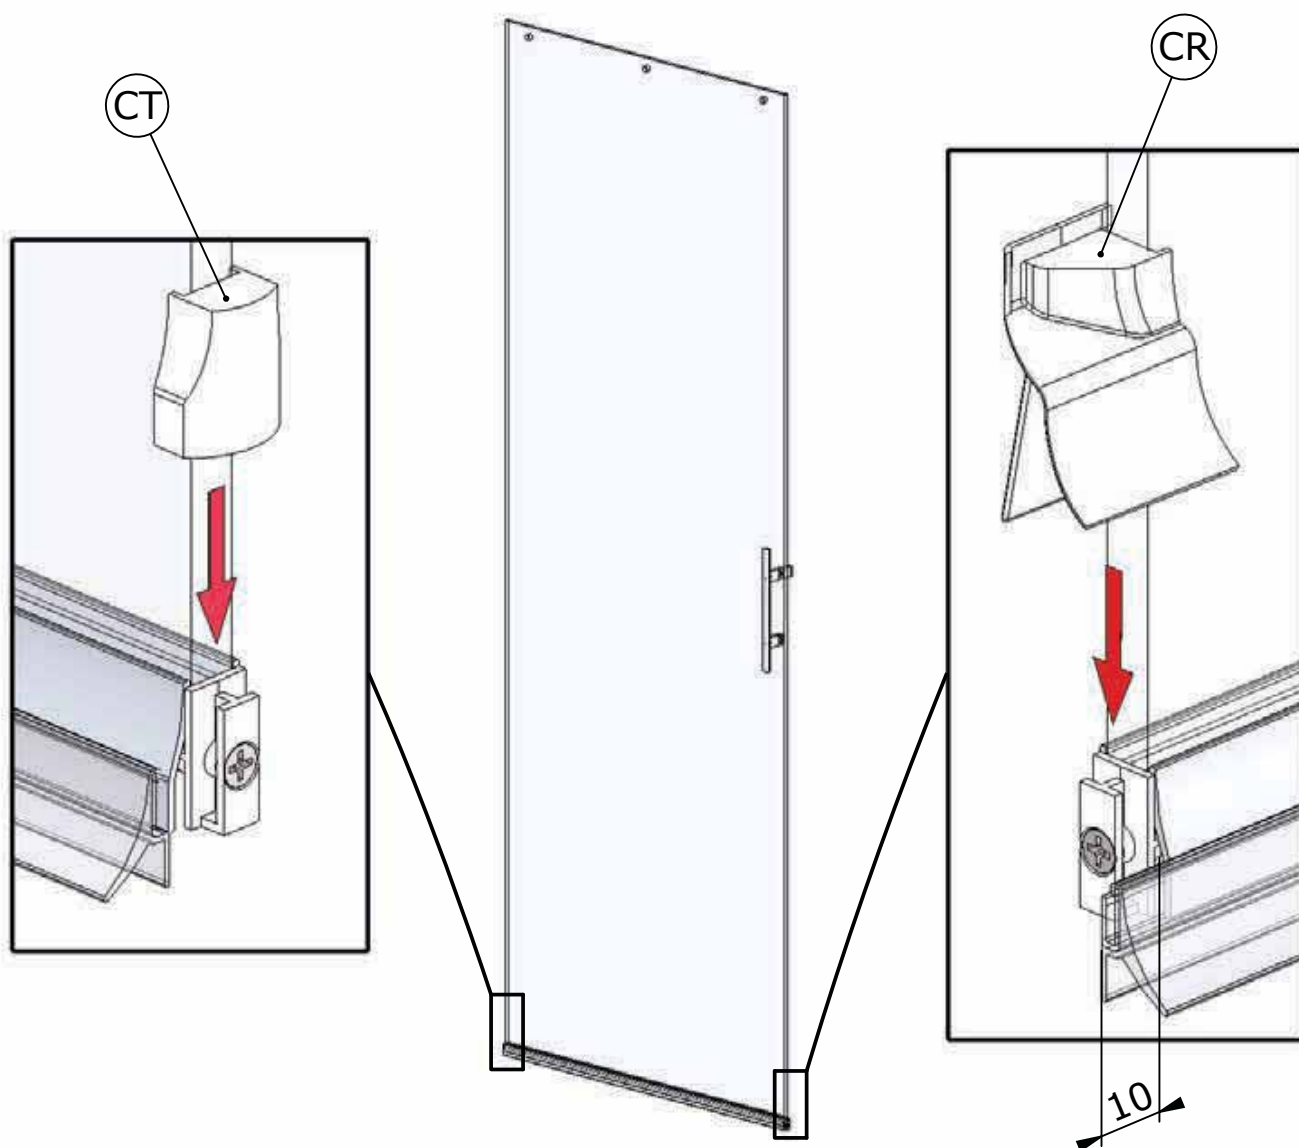


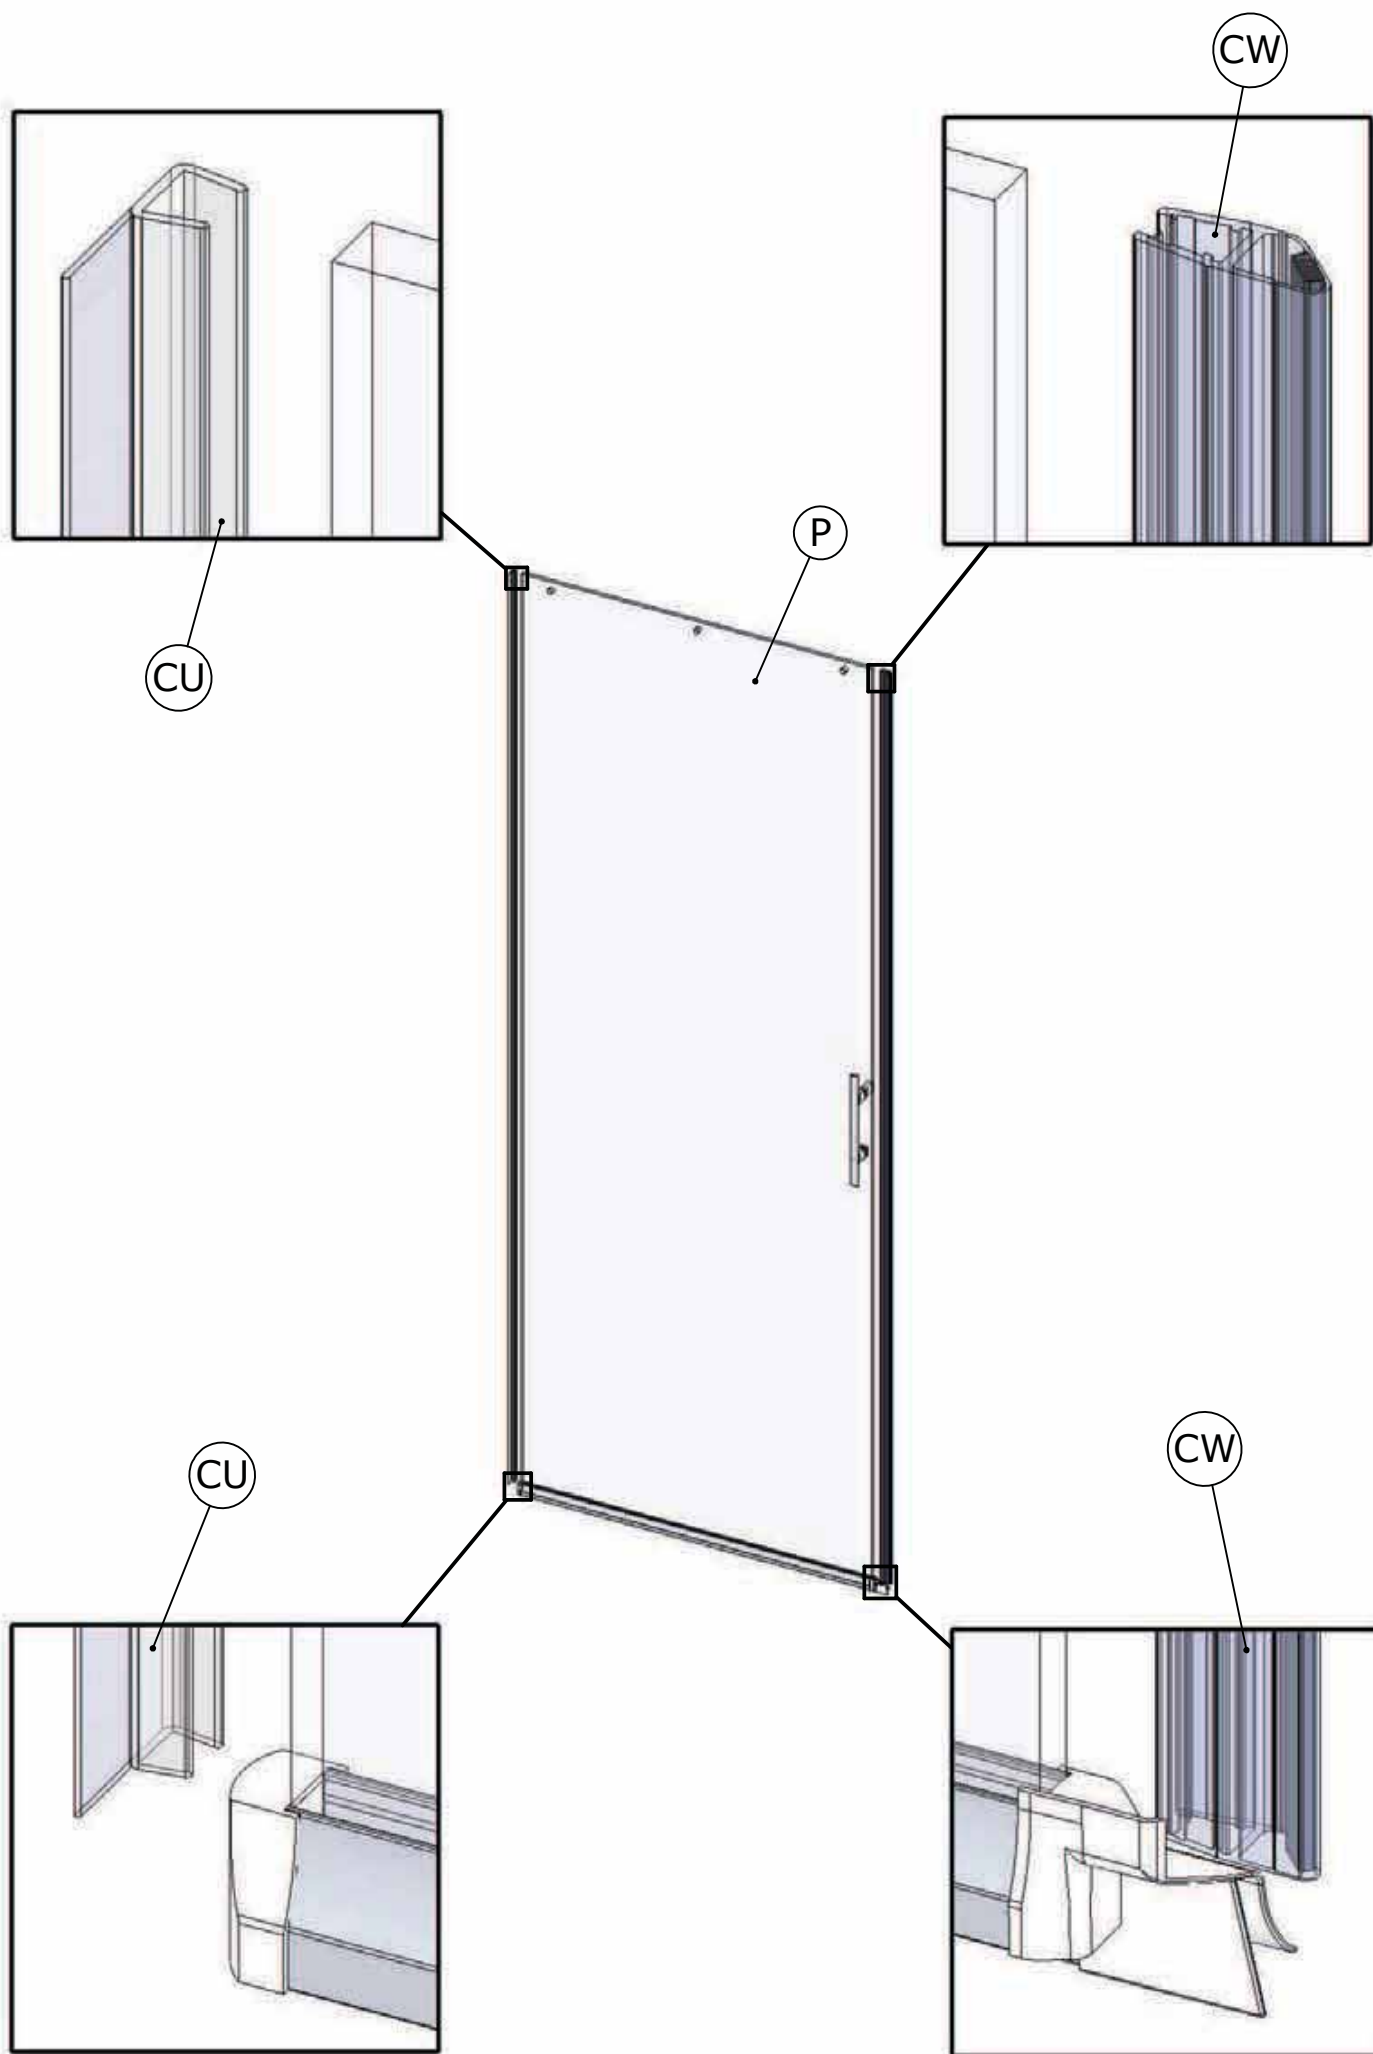






Only for cubicle widths 670 - 700mm




- ① Insert rollers in to top profile






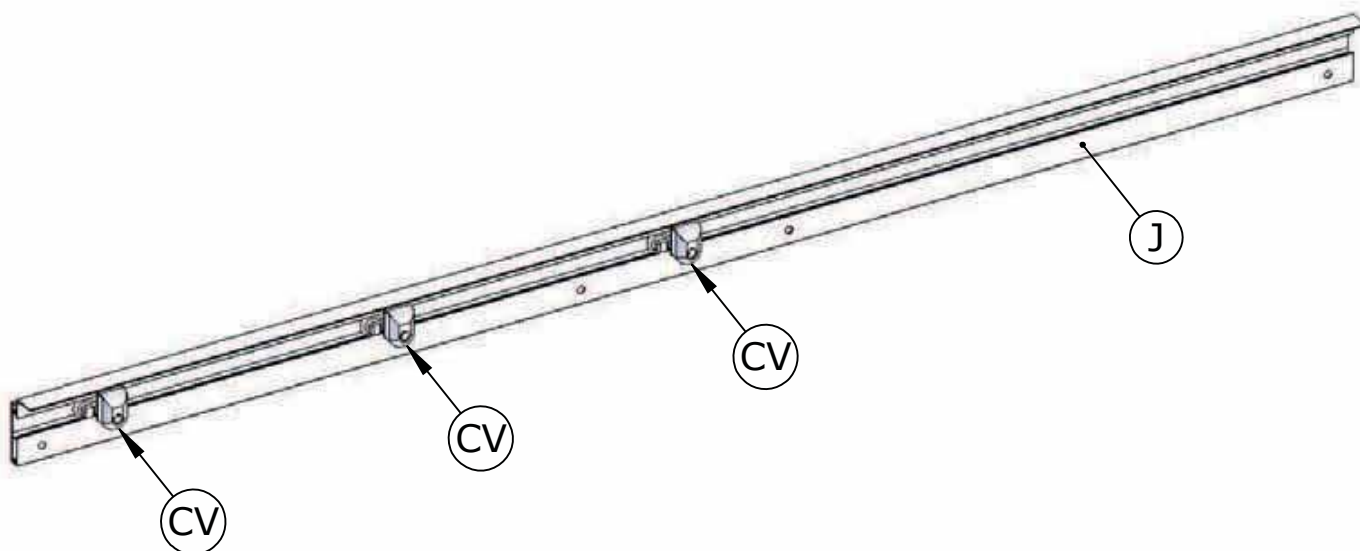




- ② Attach door to rollers

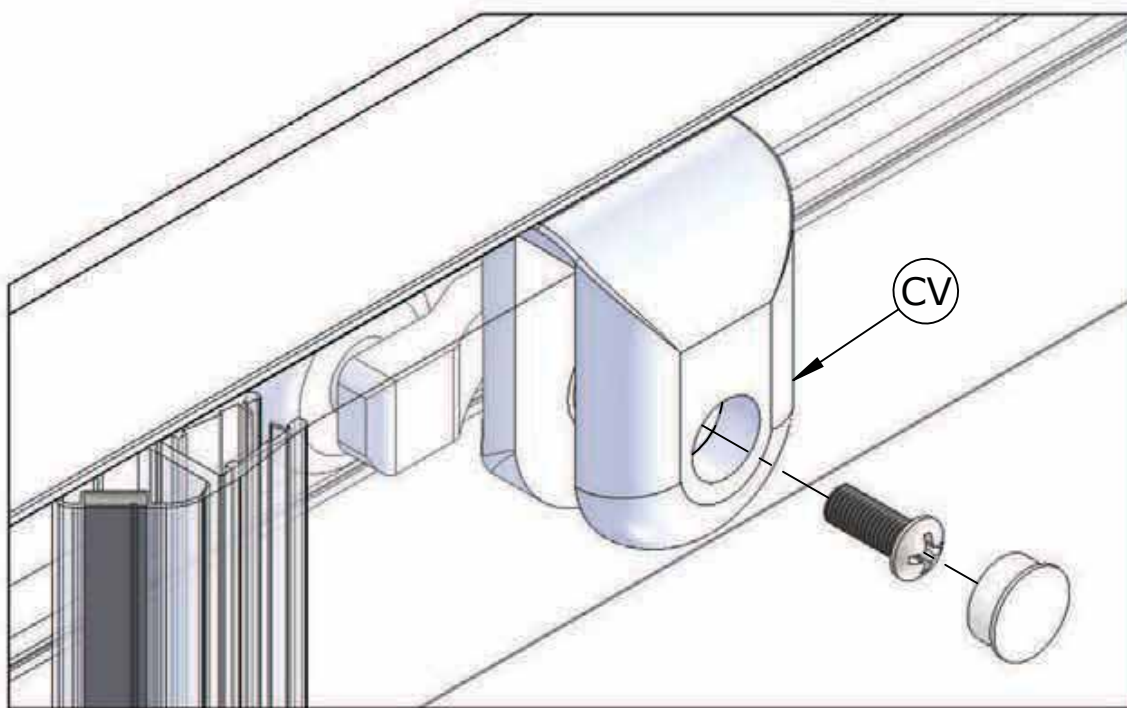

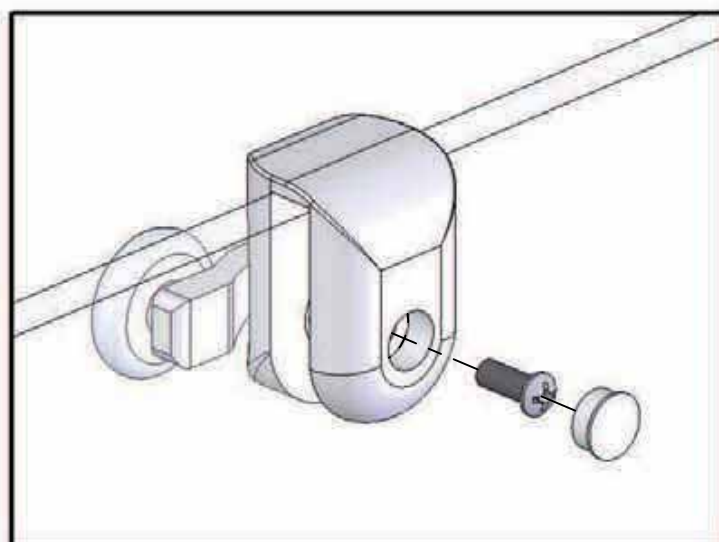
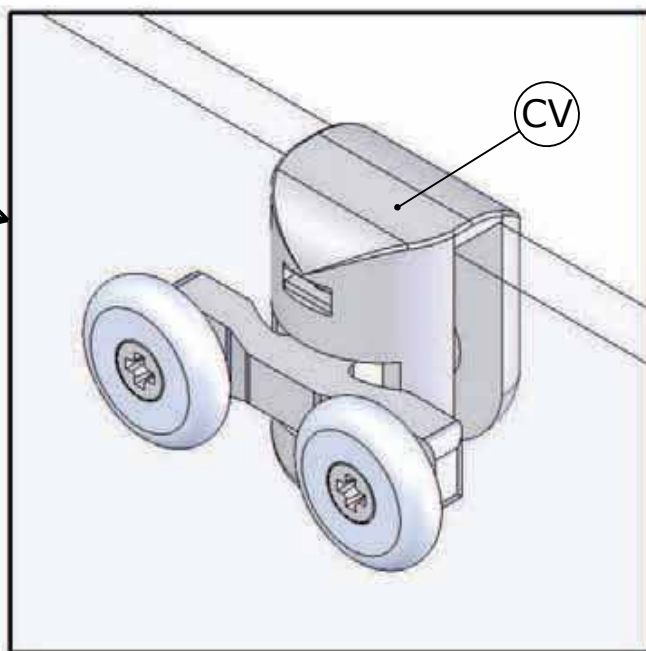


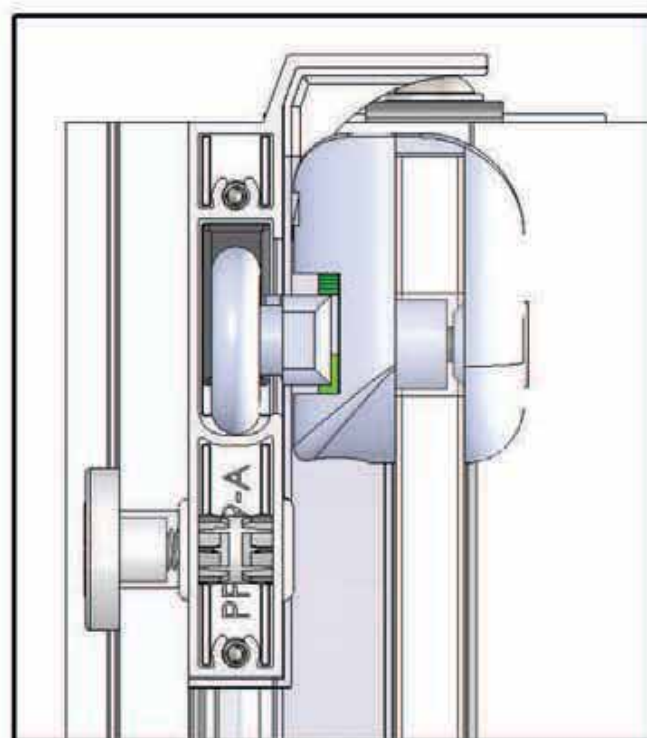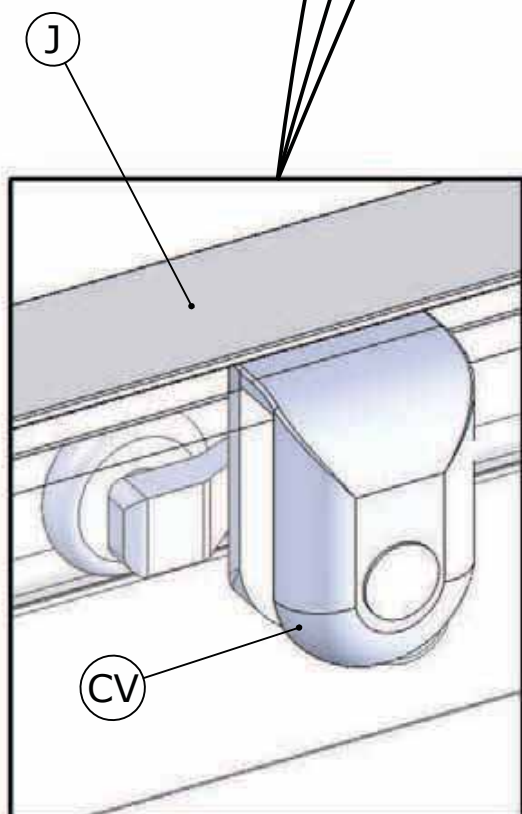
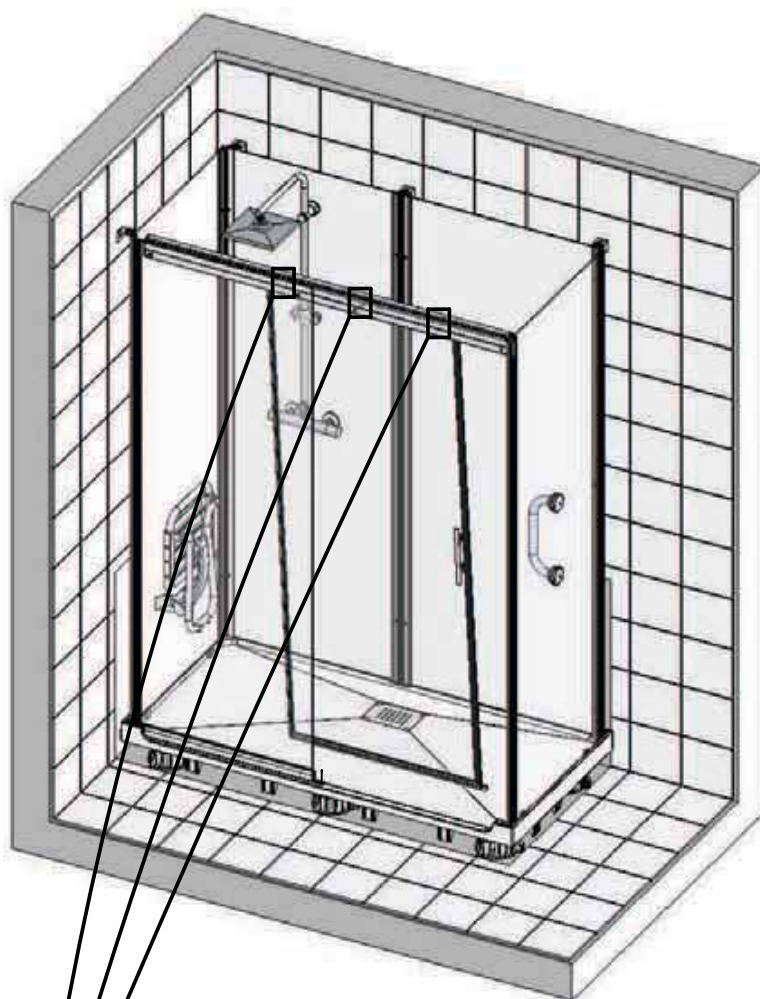


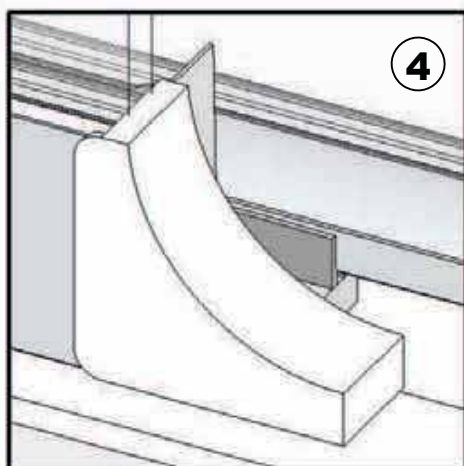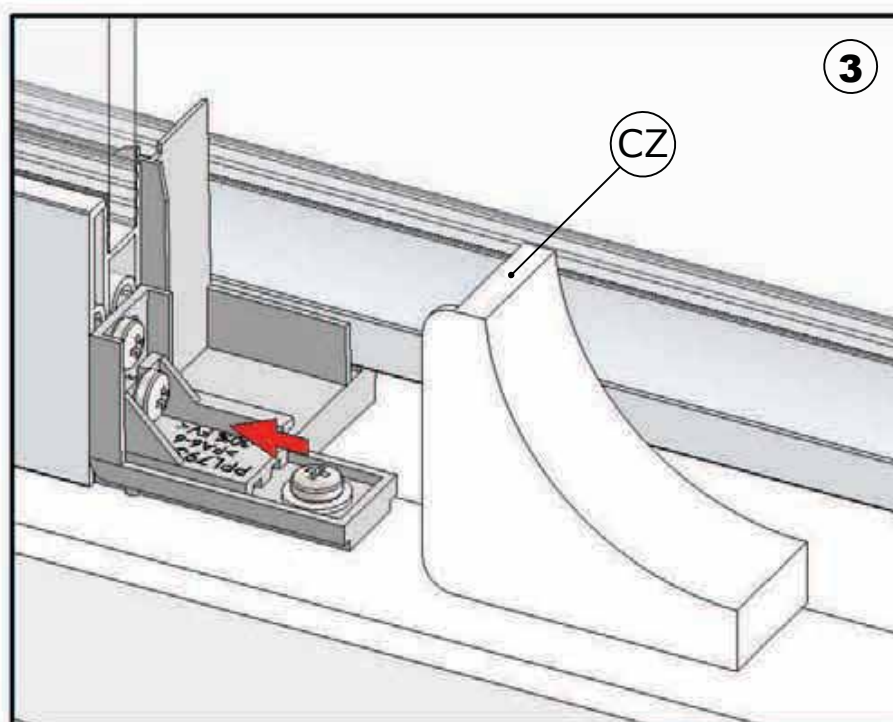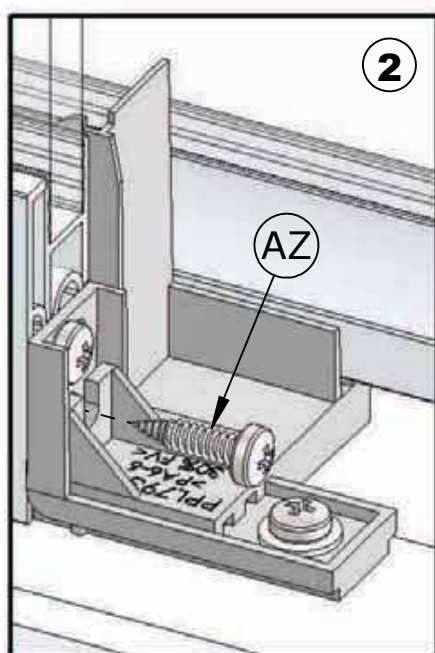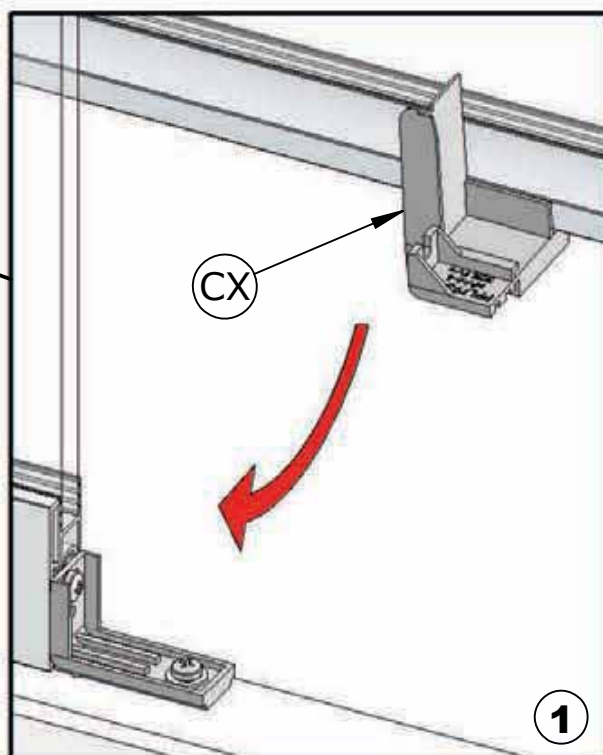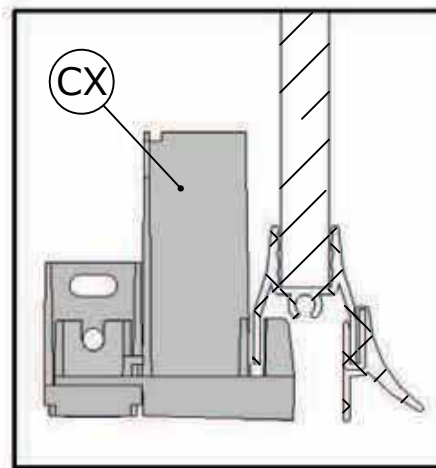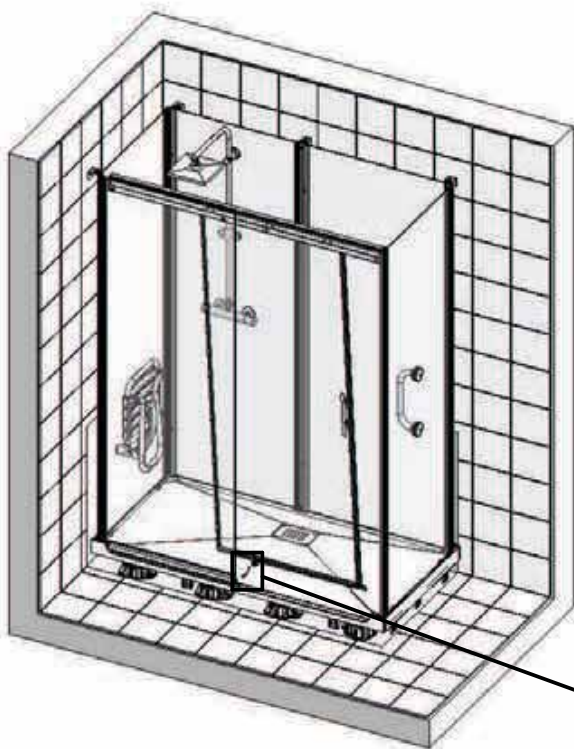

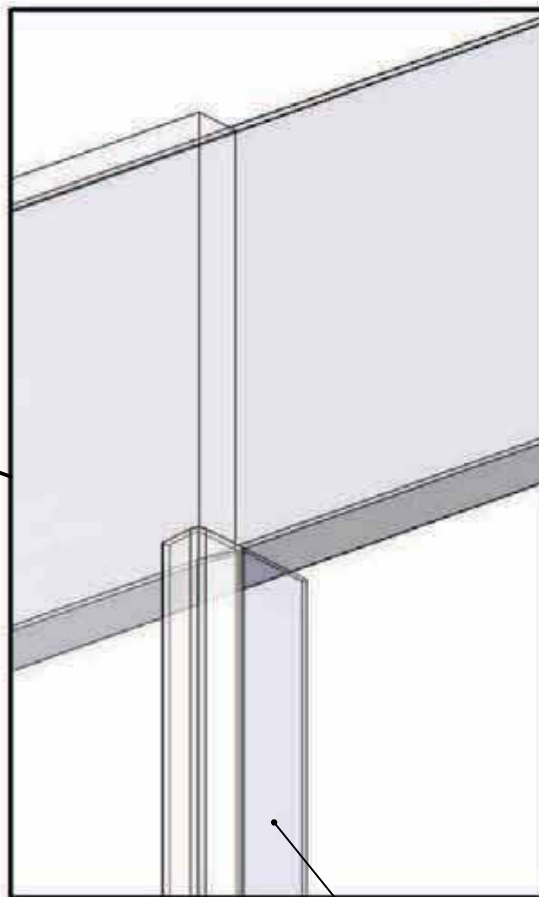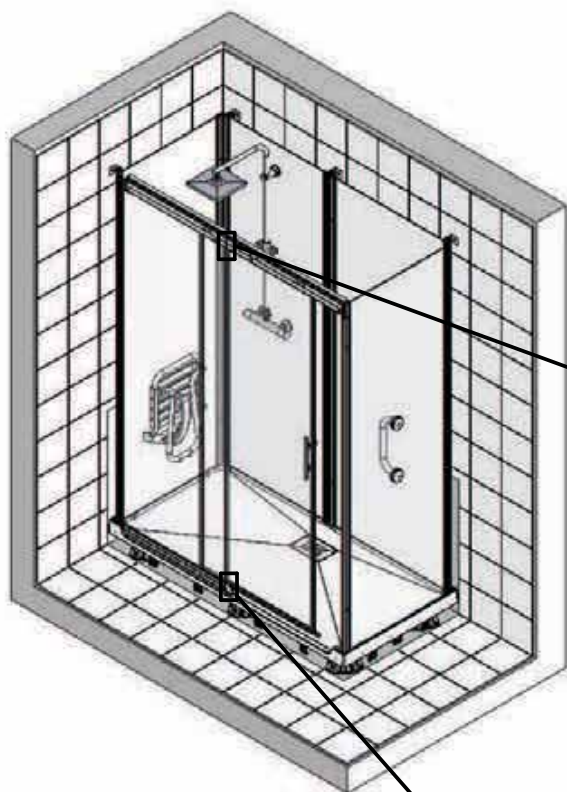


CU

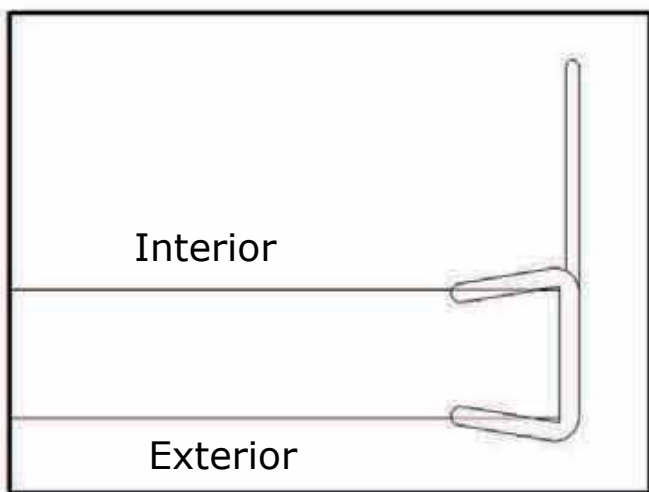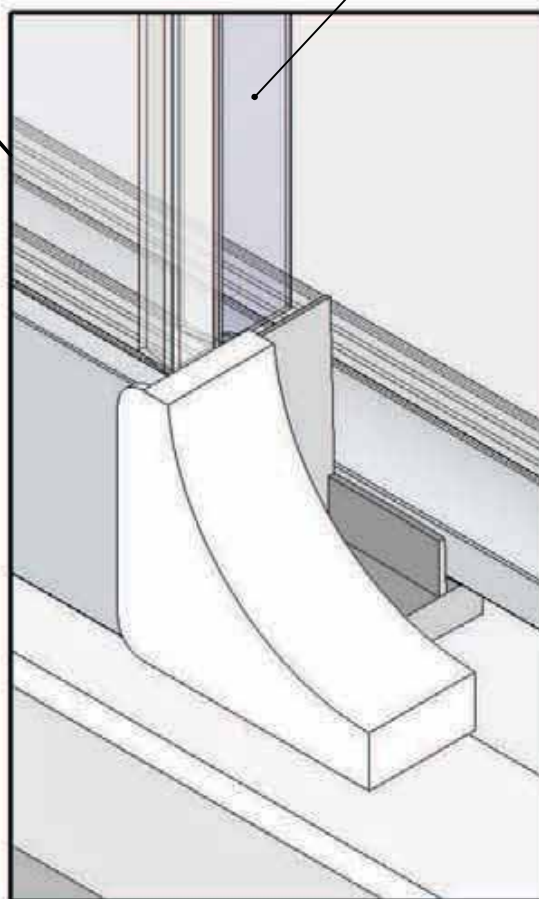


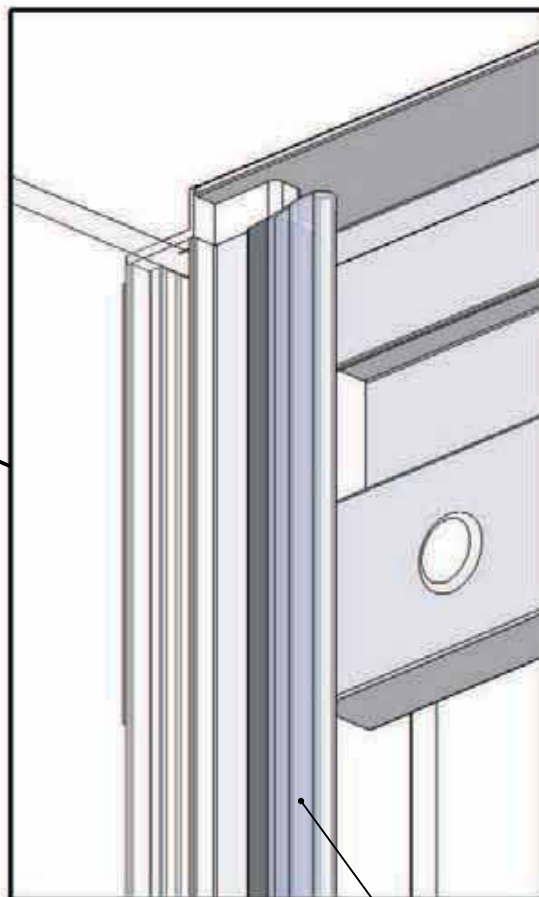
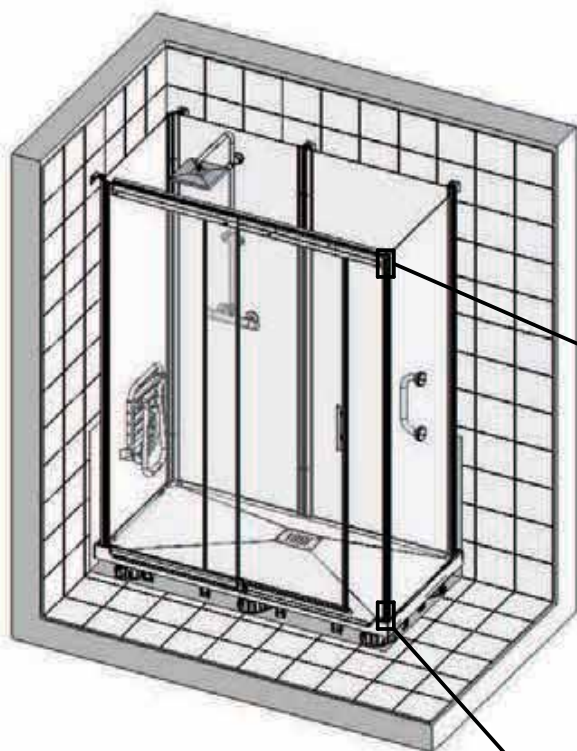


CY

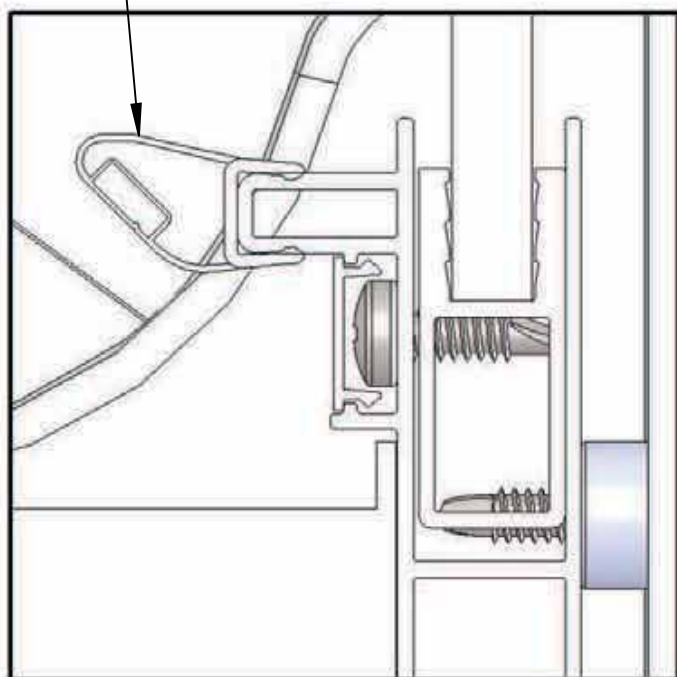


CY

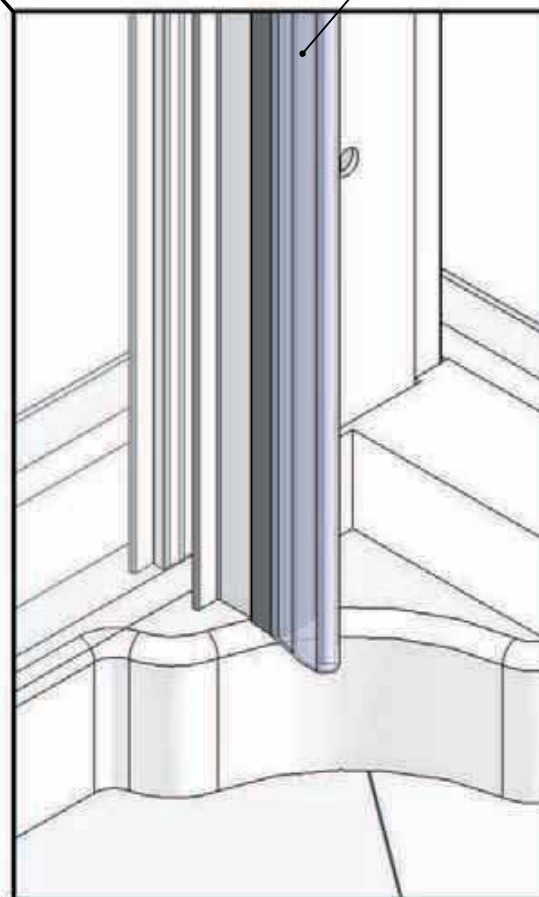

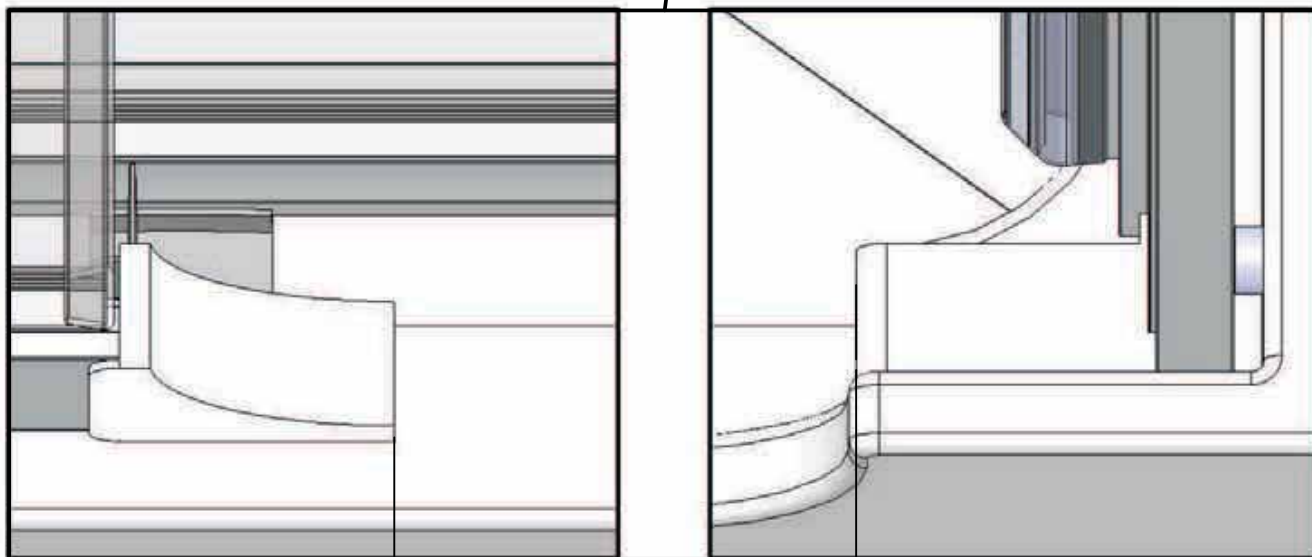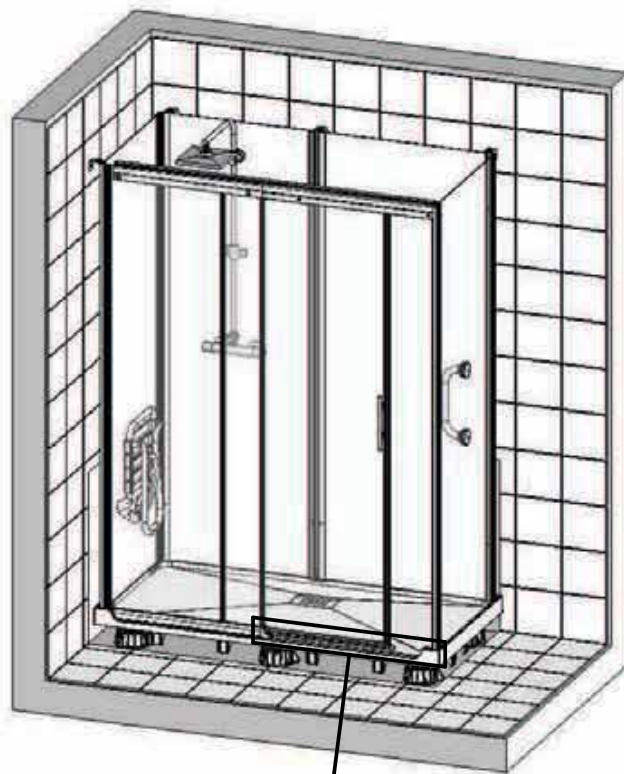



X

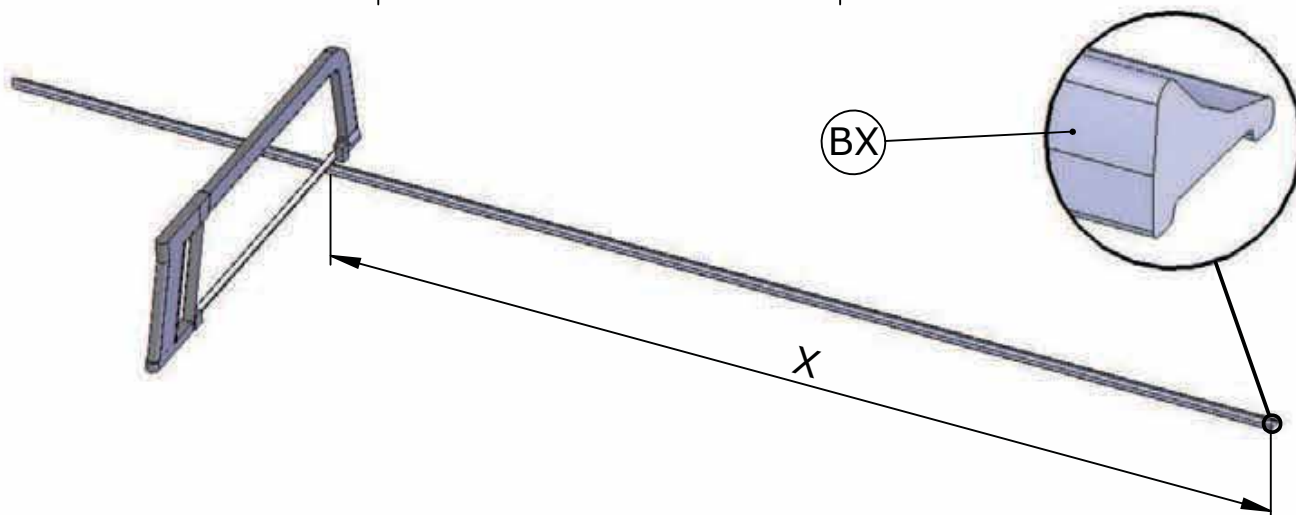




BX






X






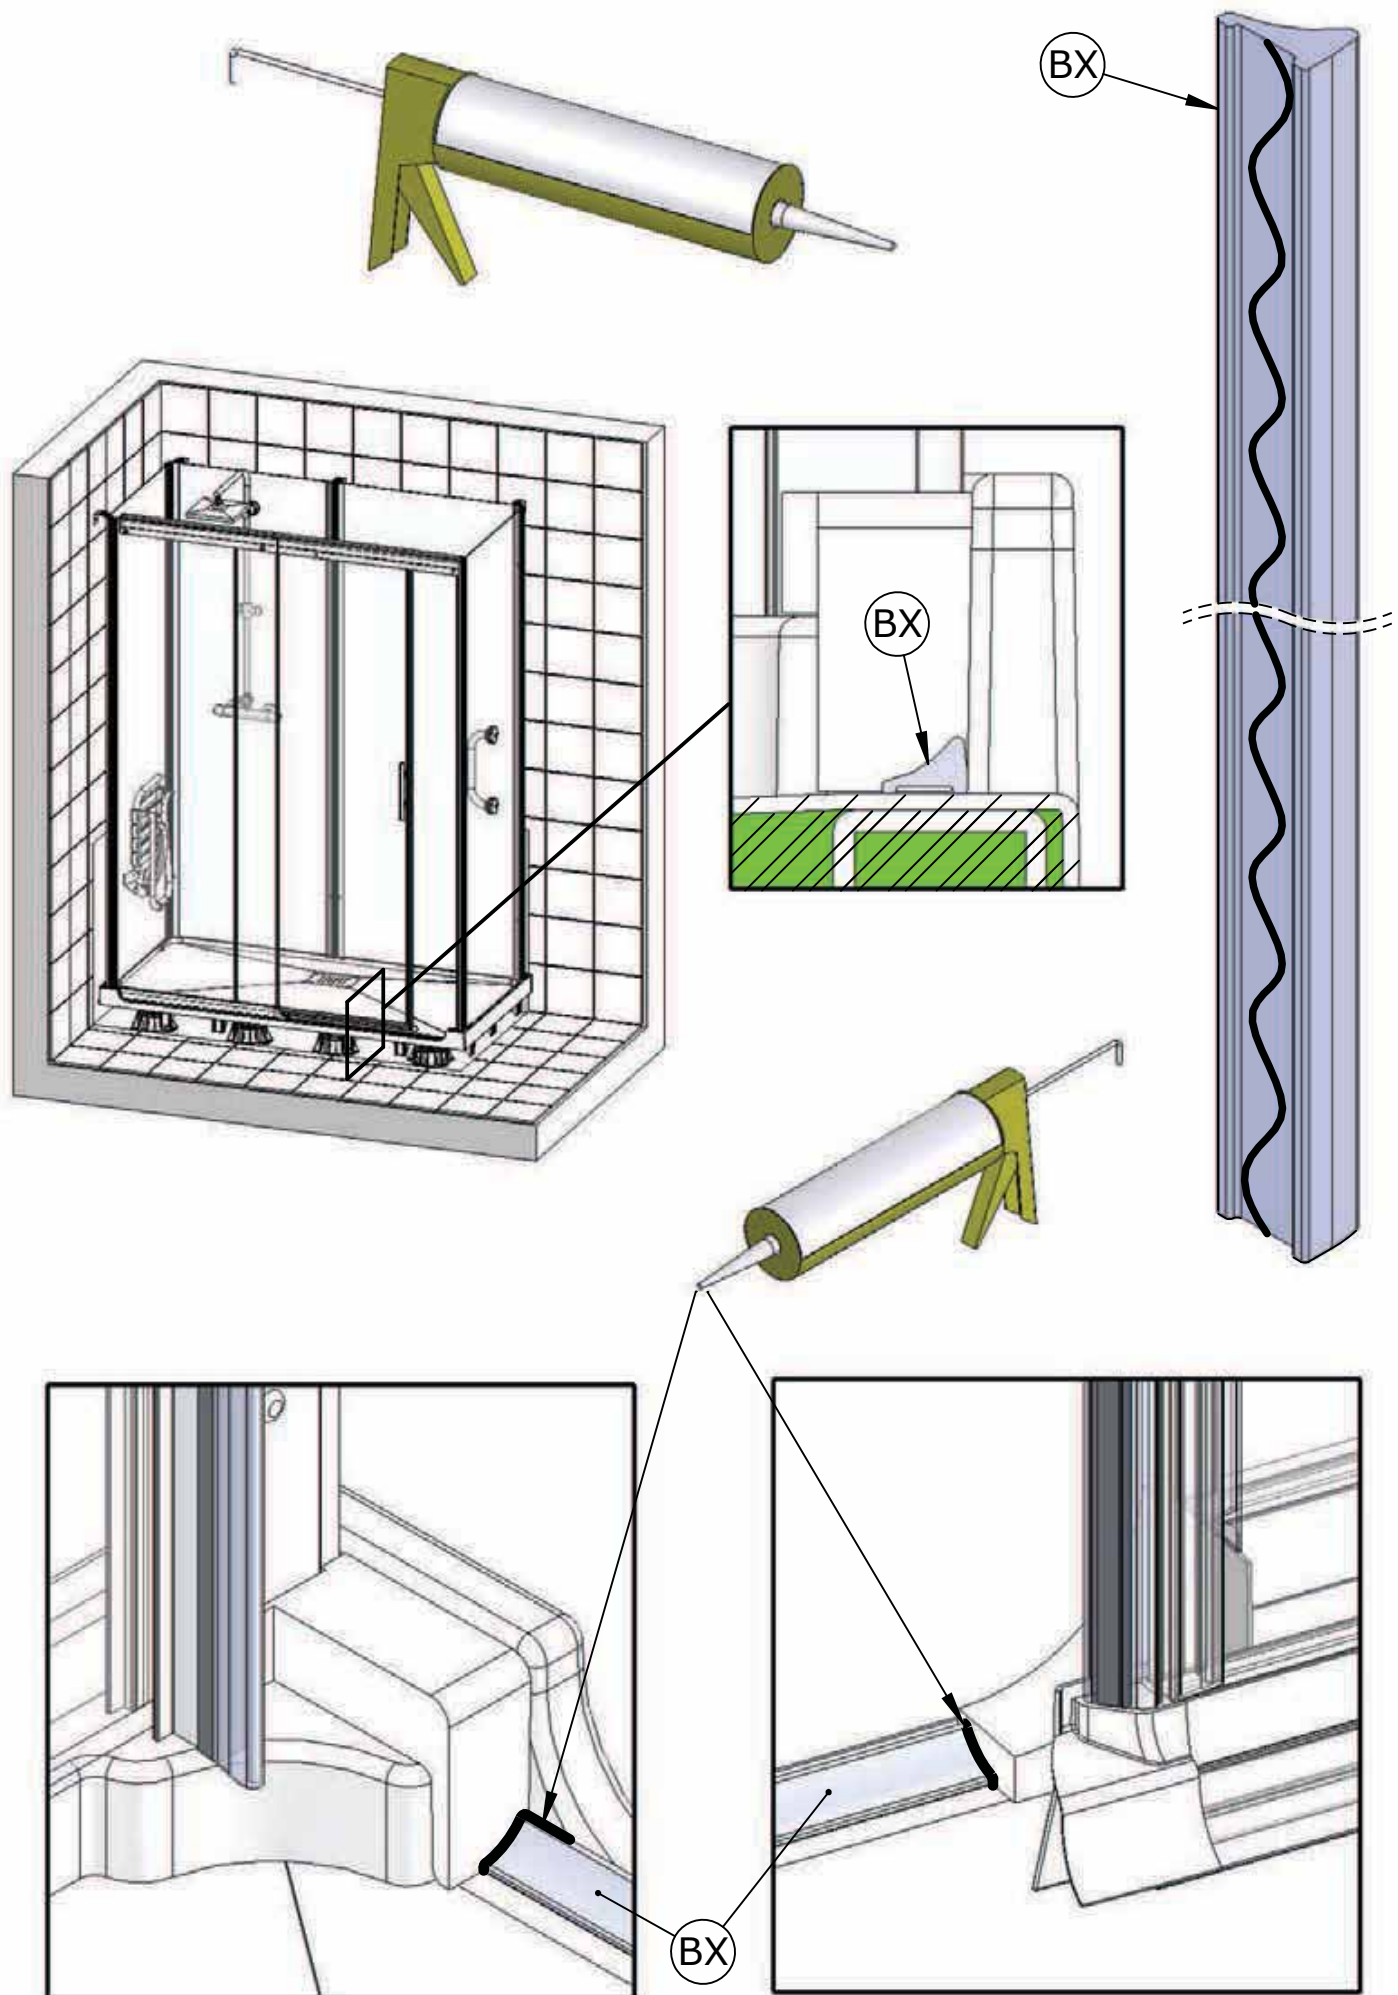




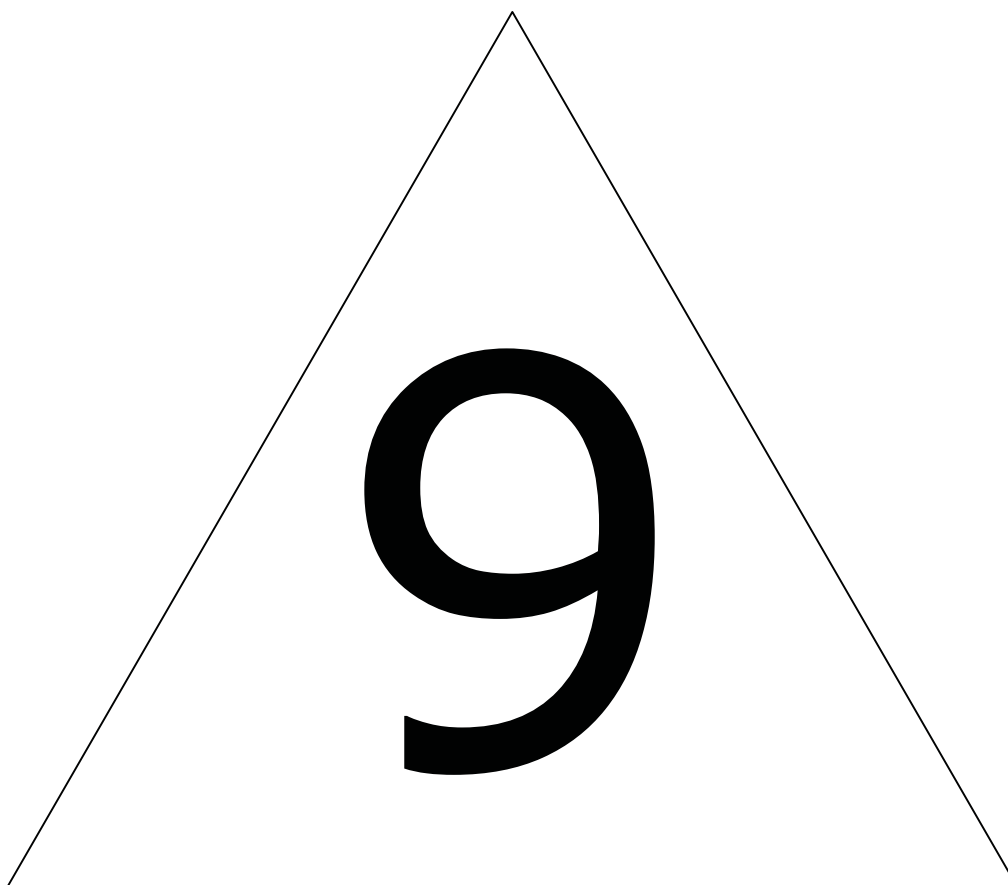


Corner version

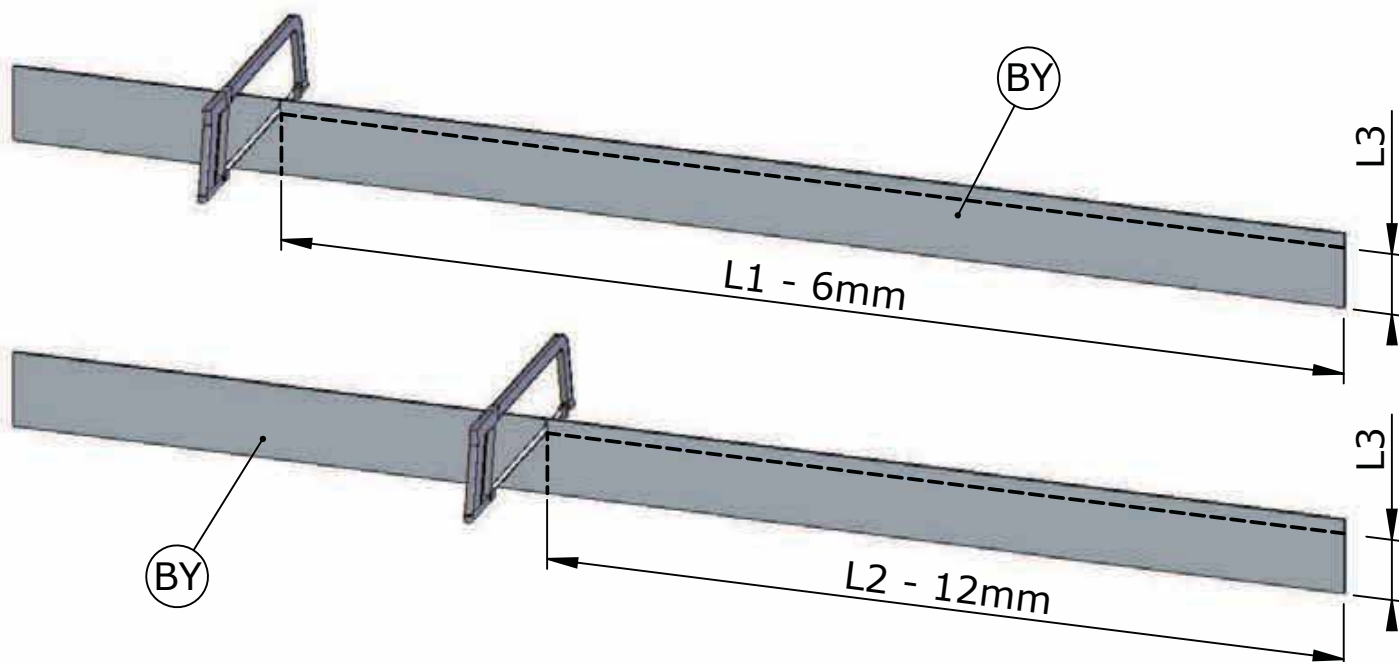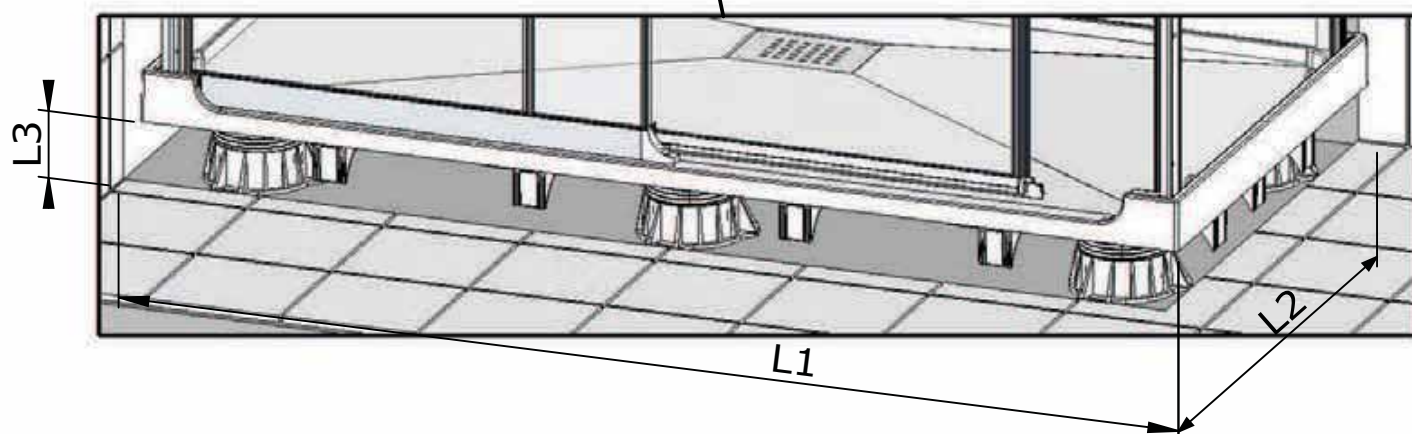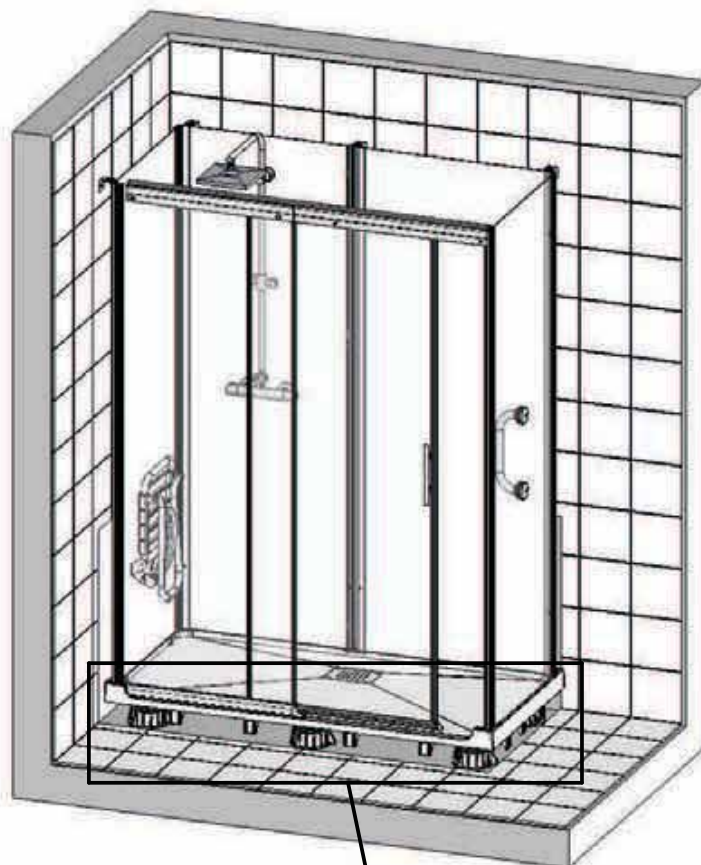


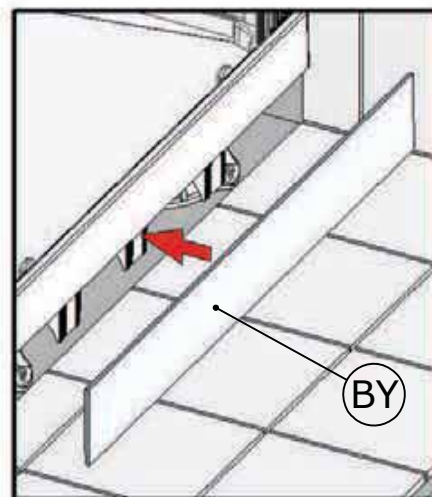
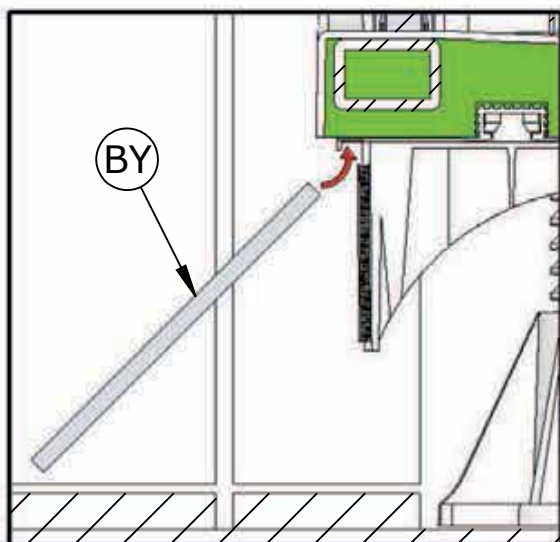
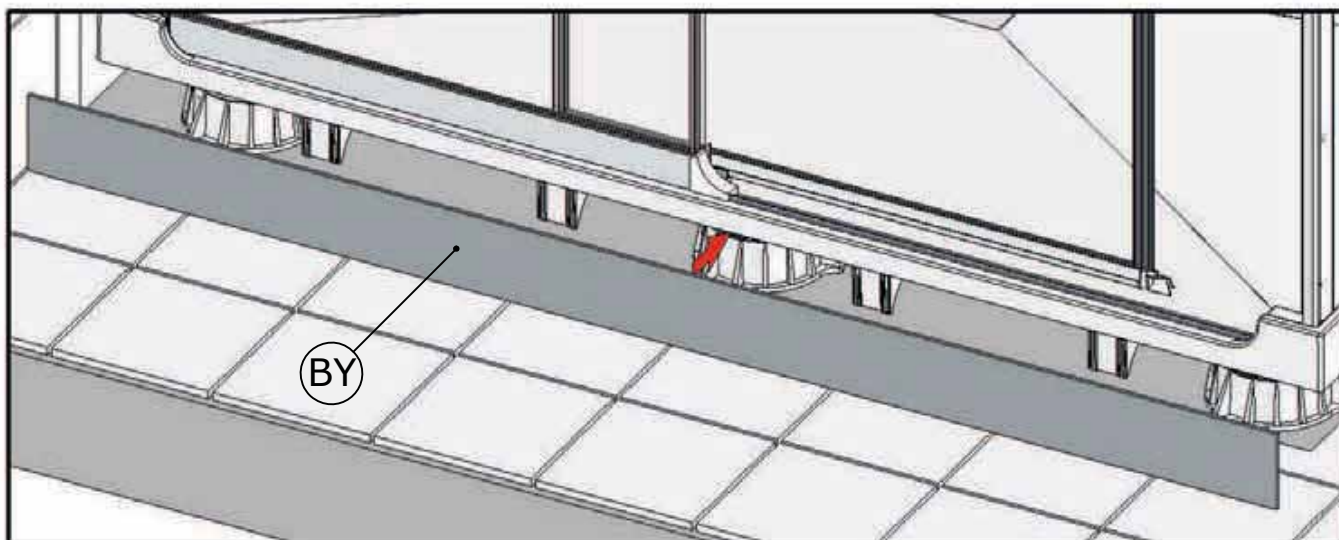
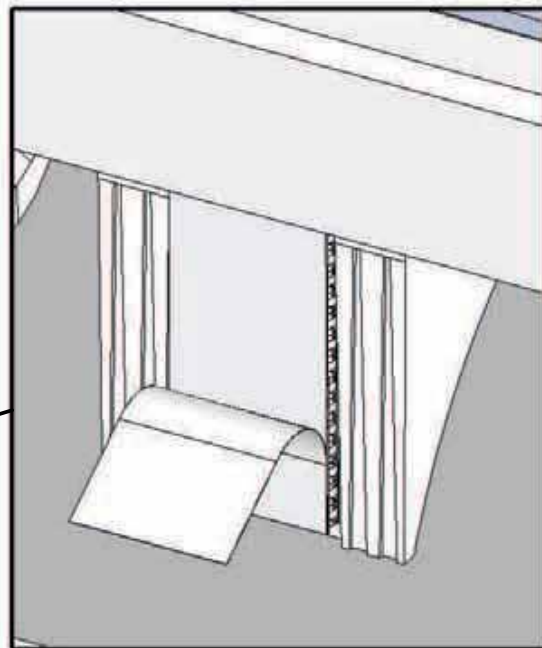
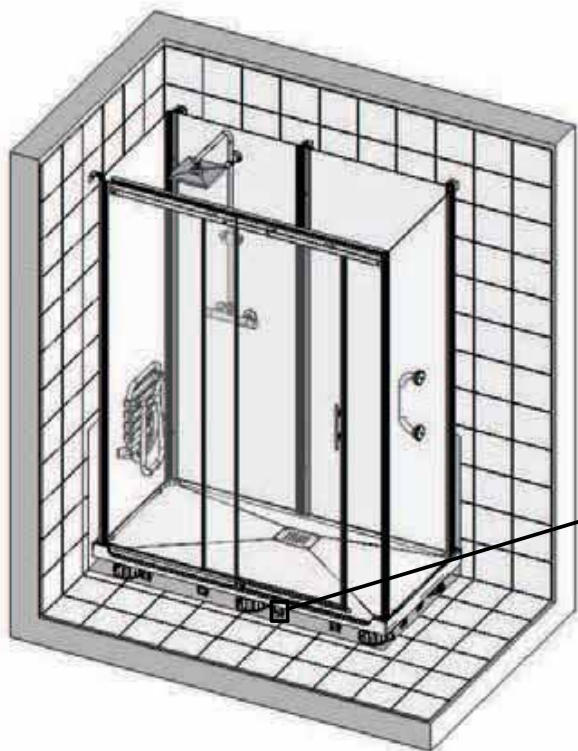


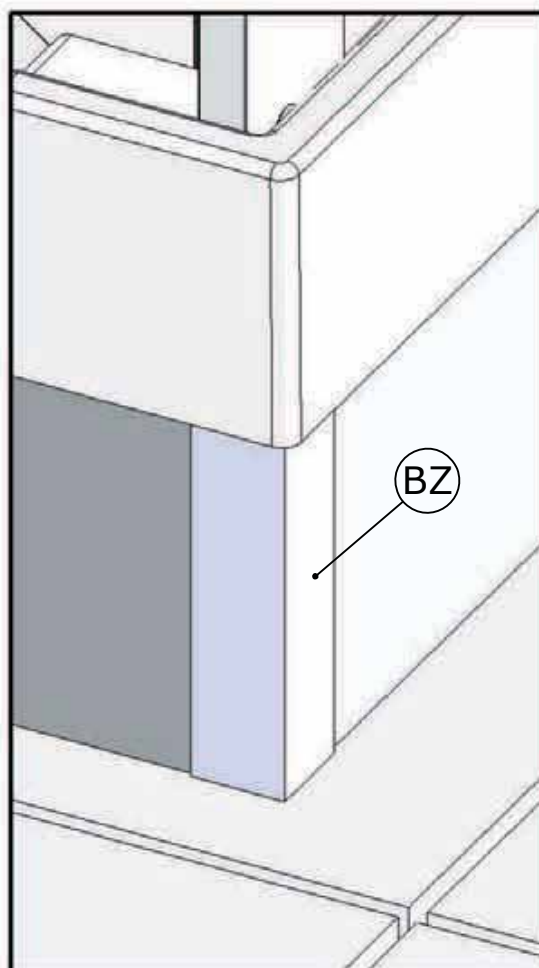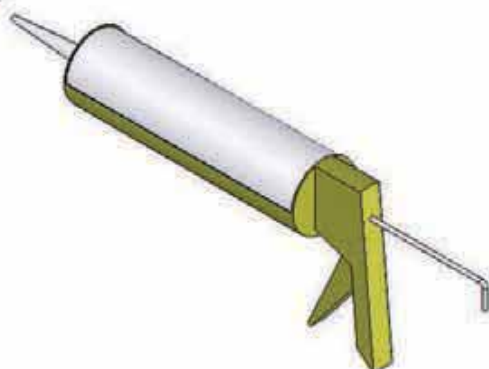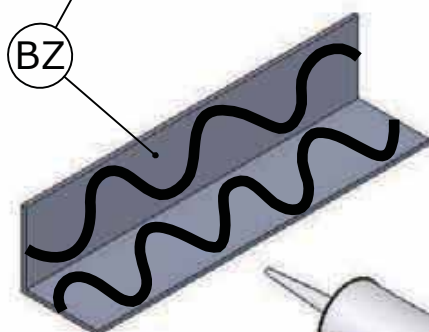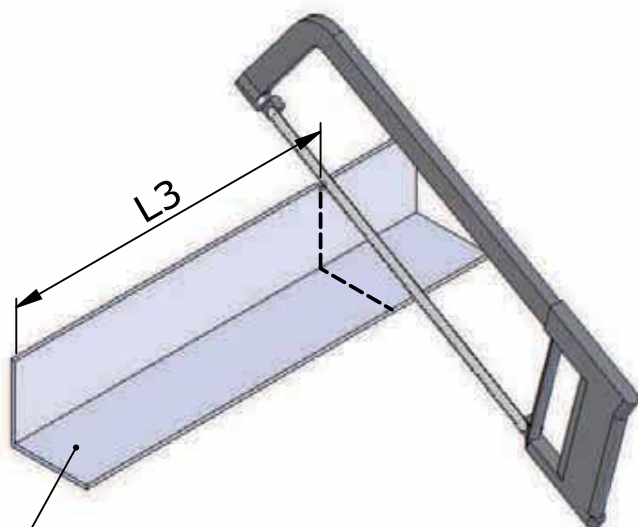
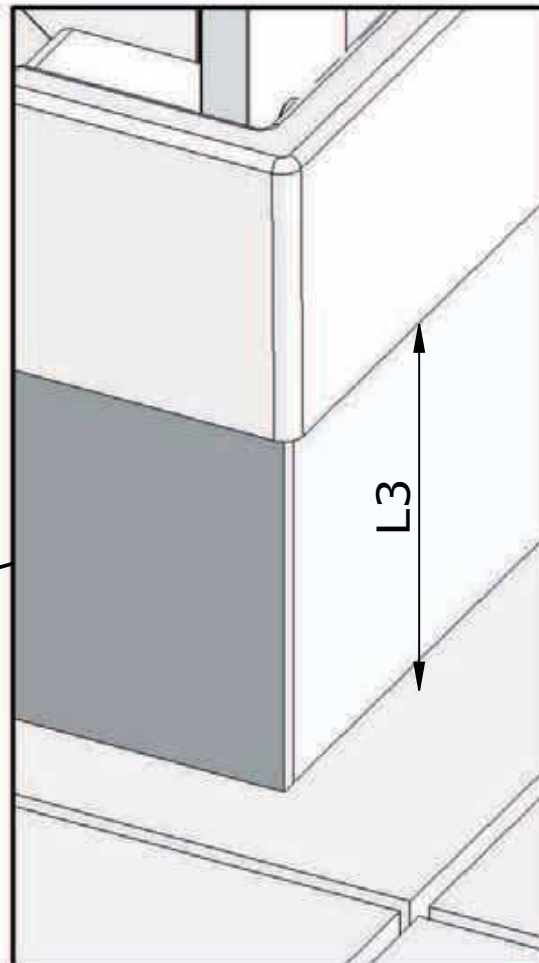
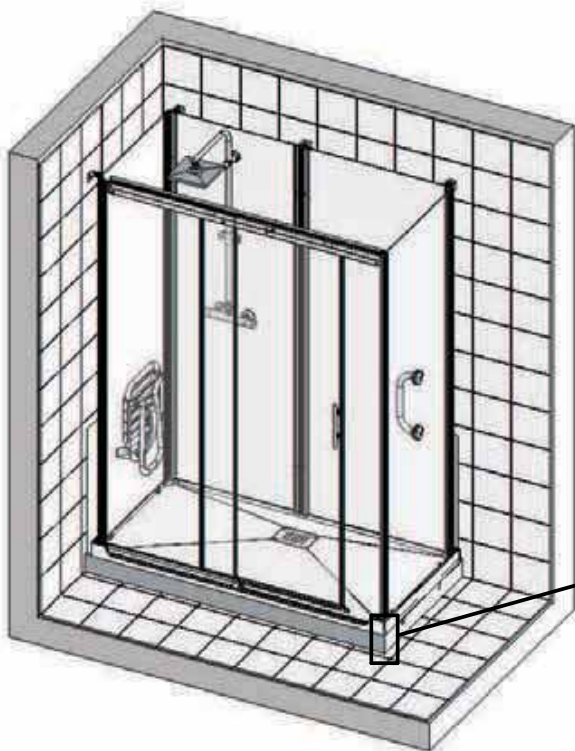





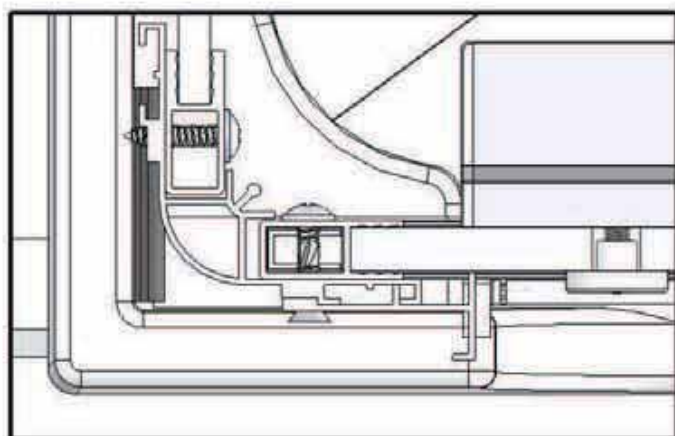
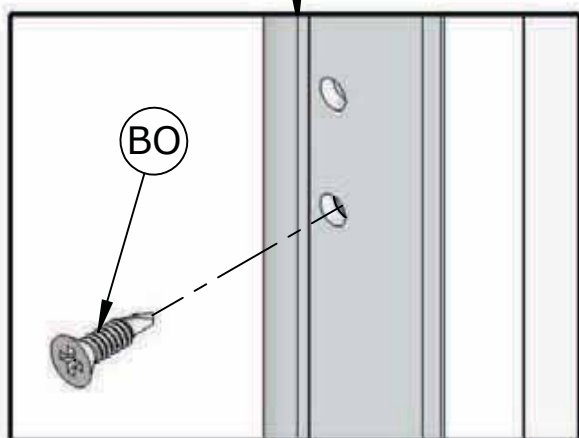
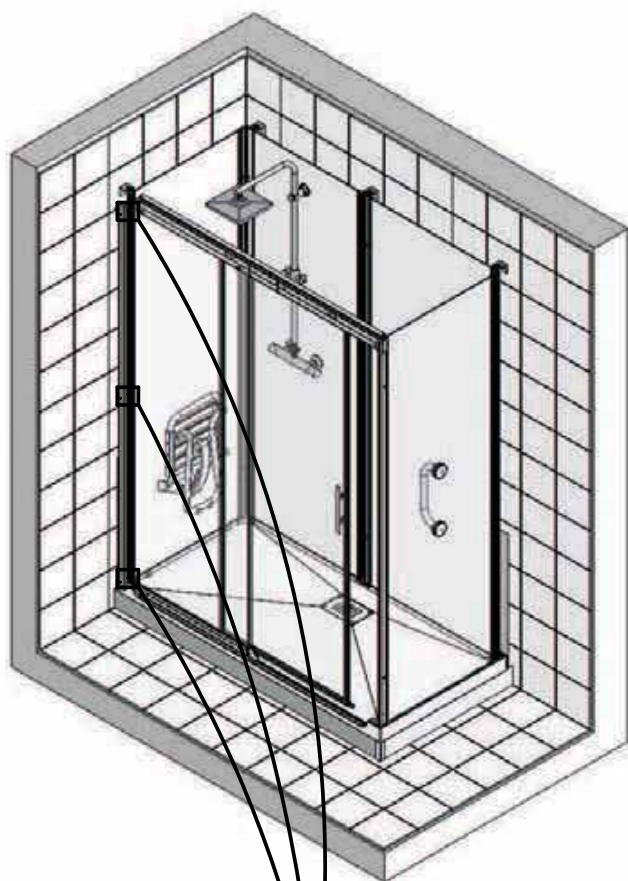






L




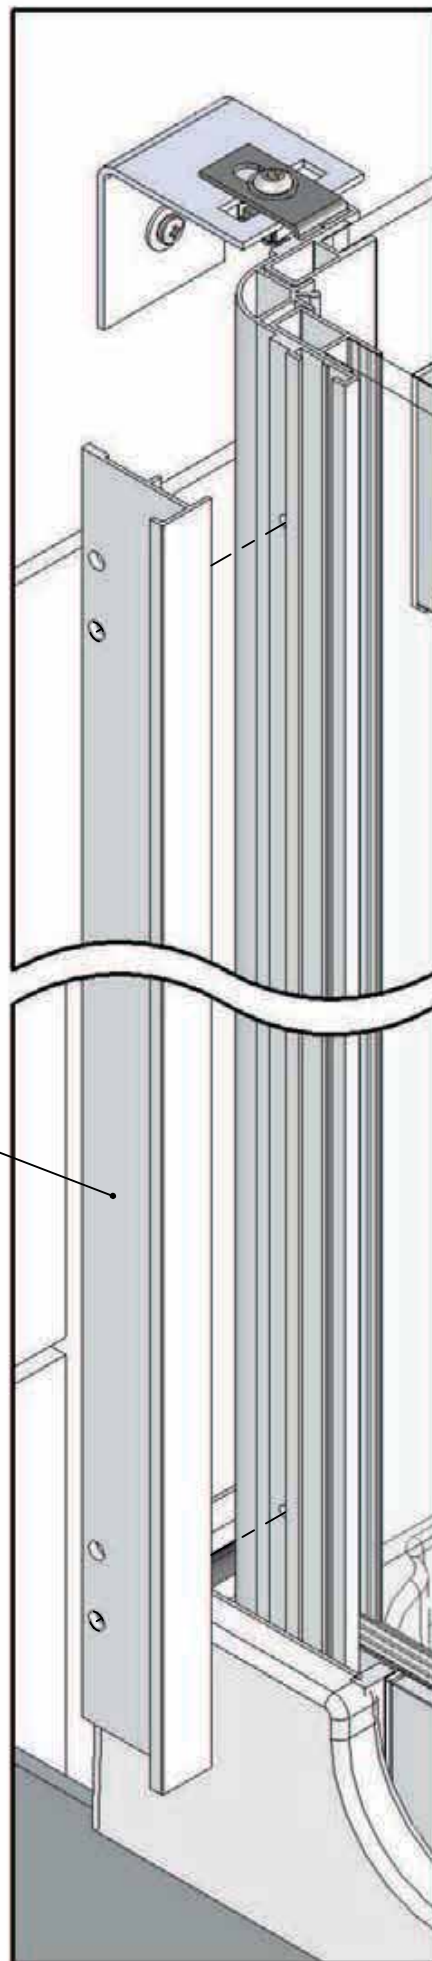


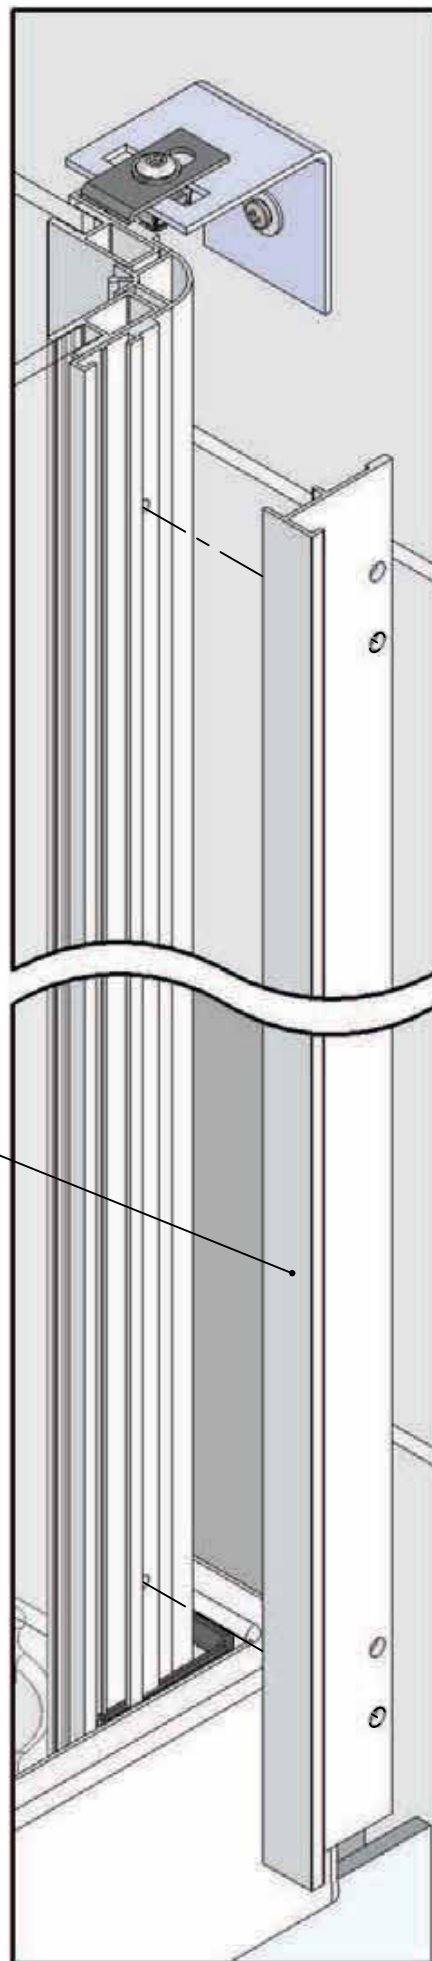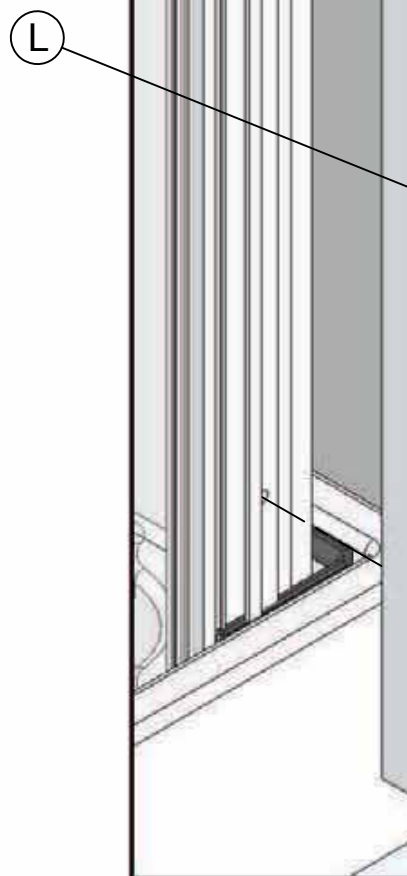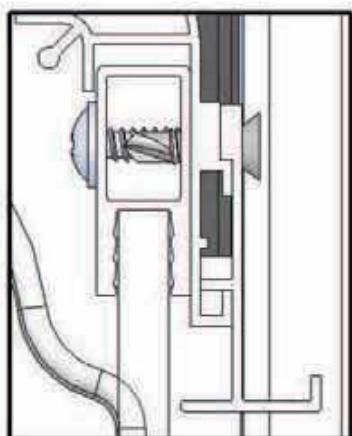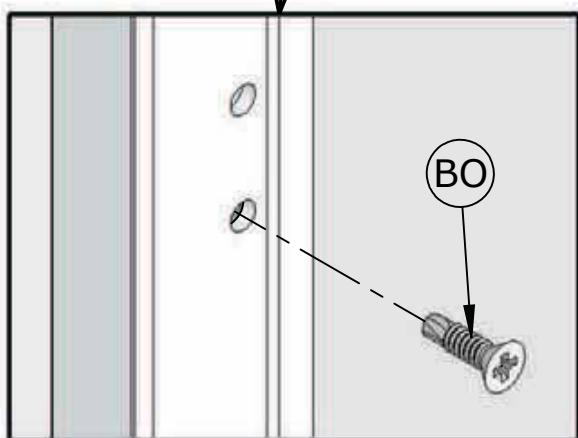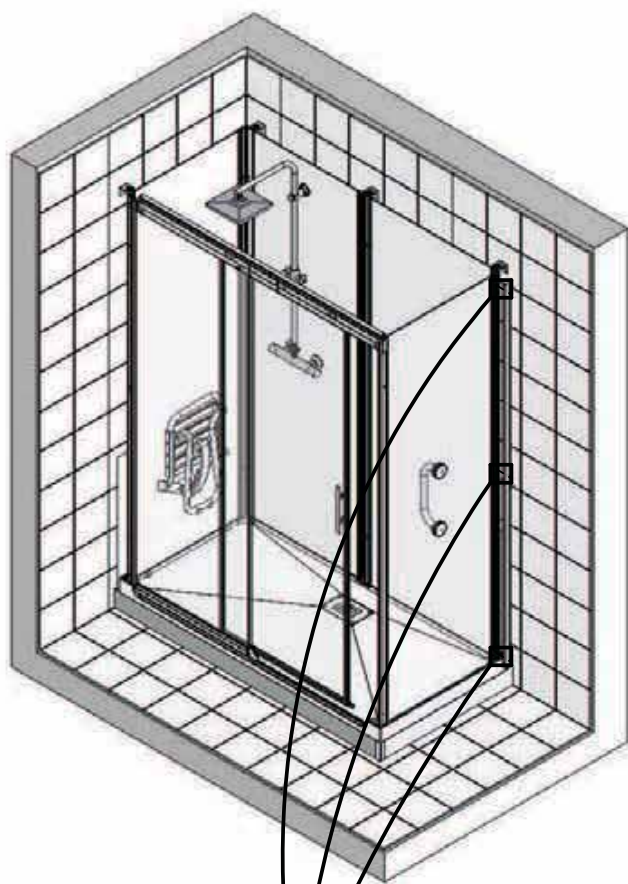


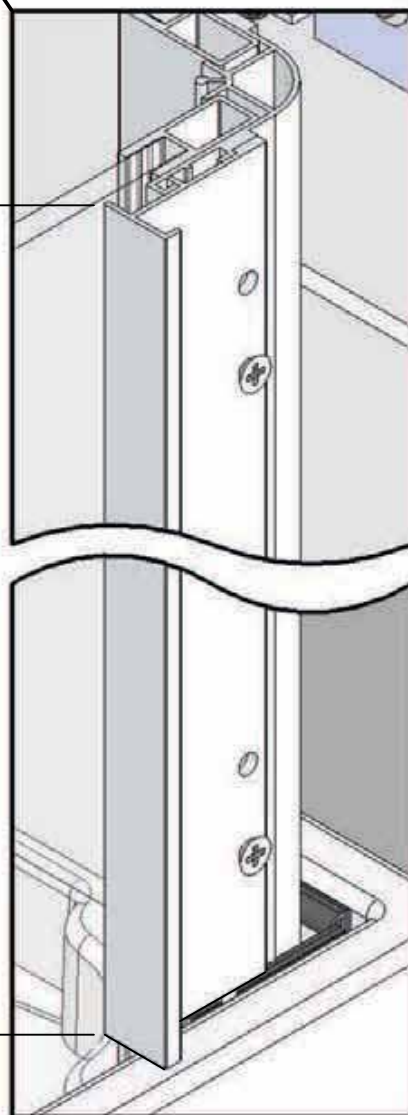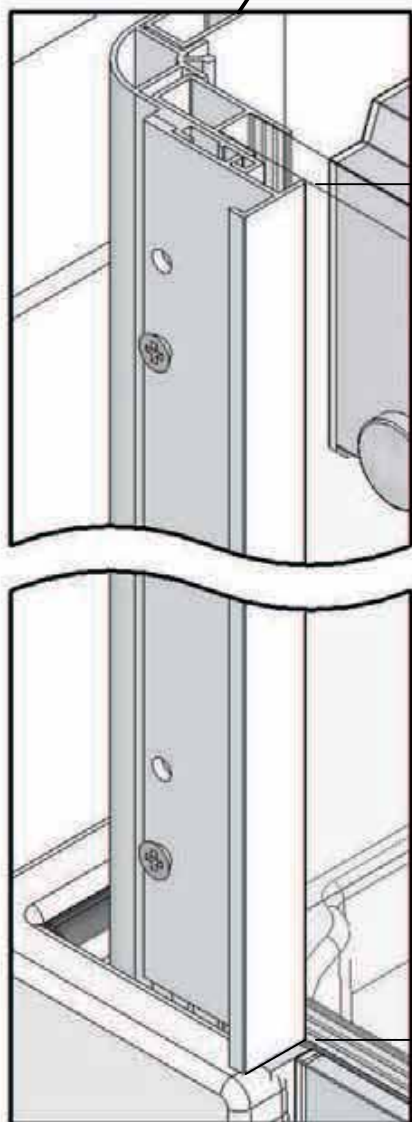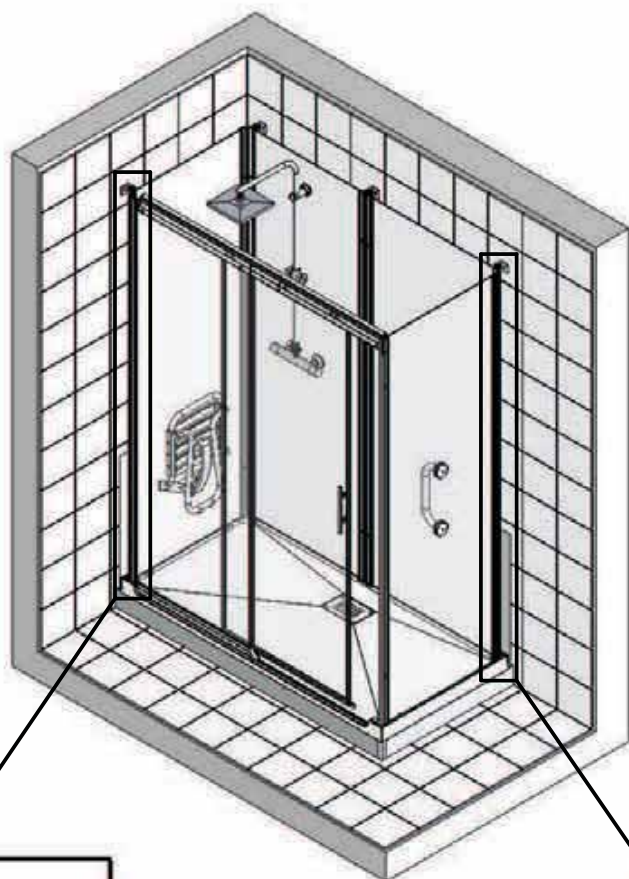


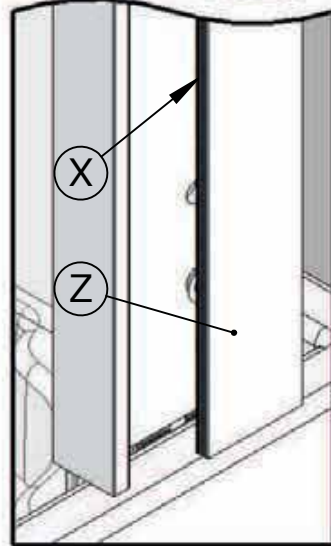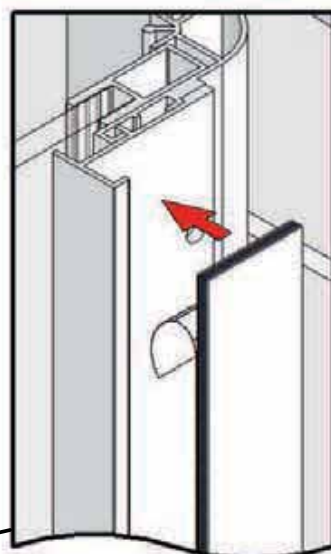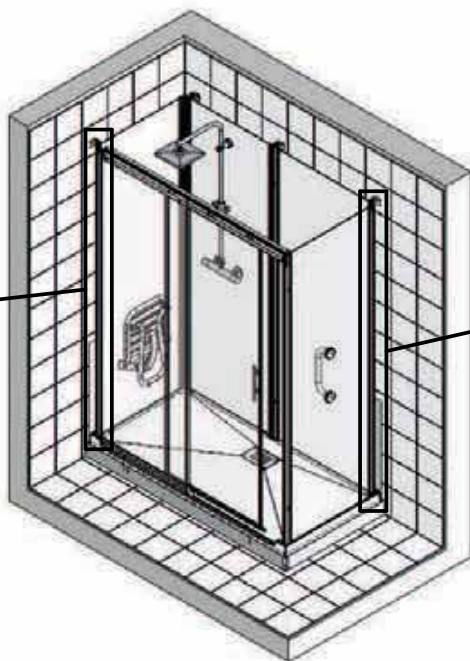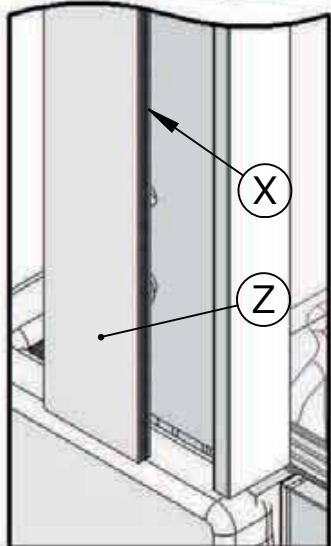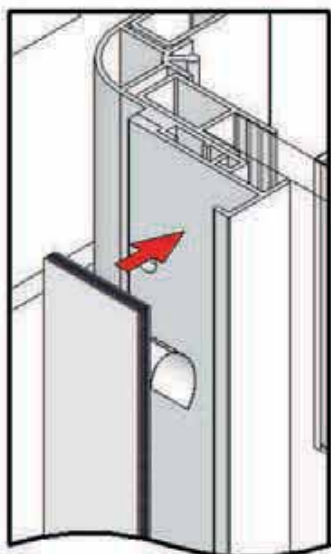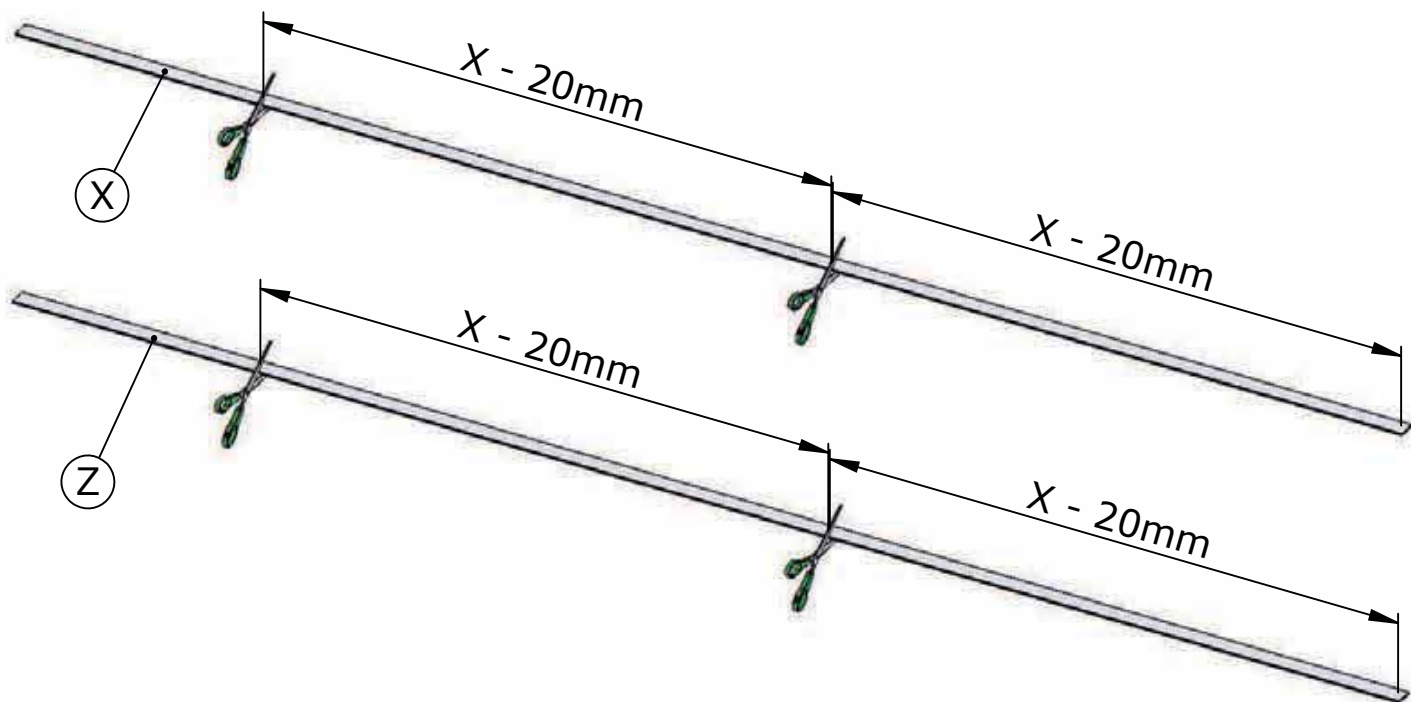

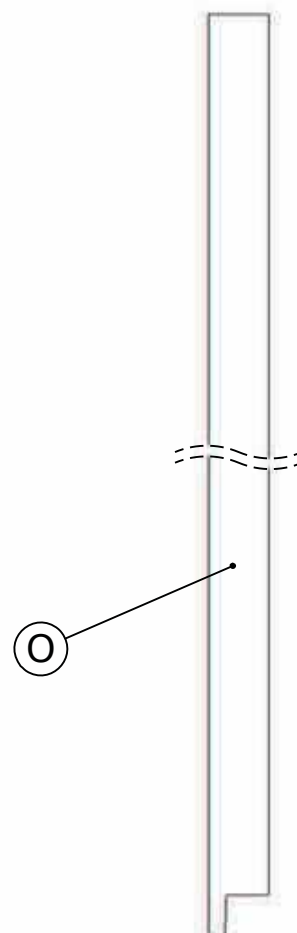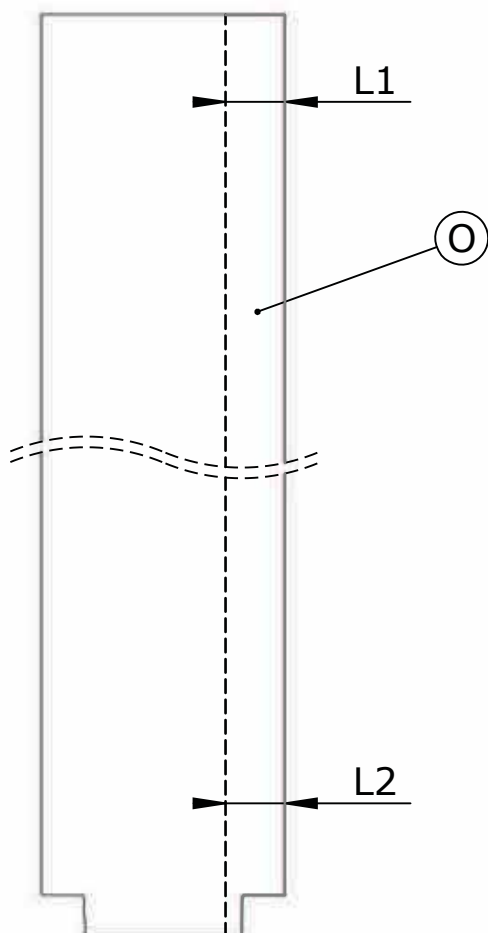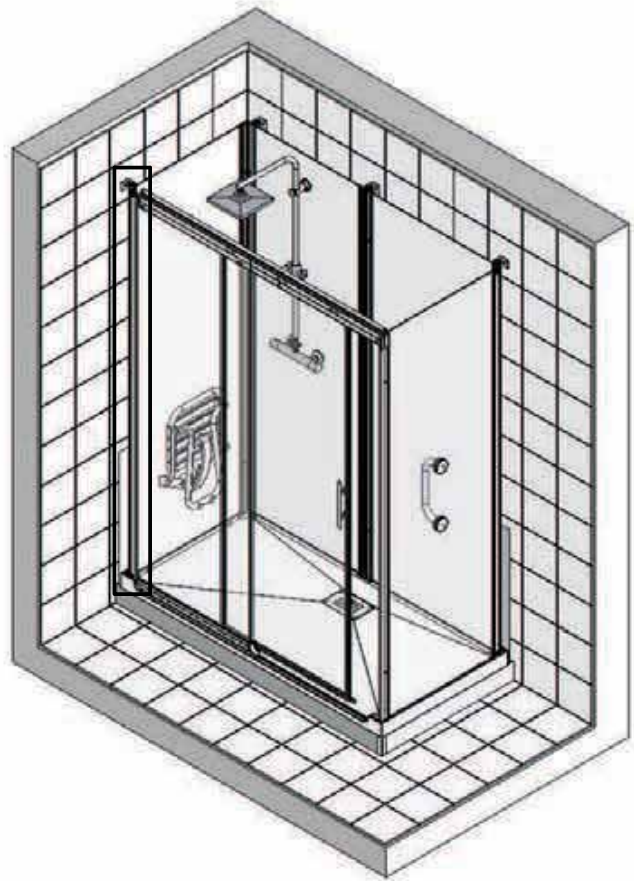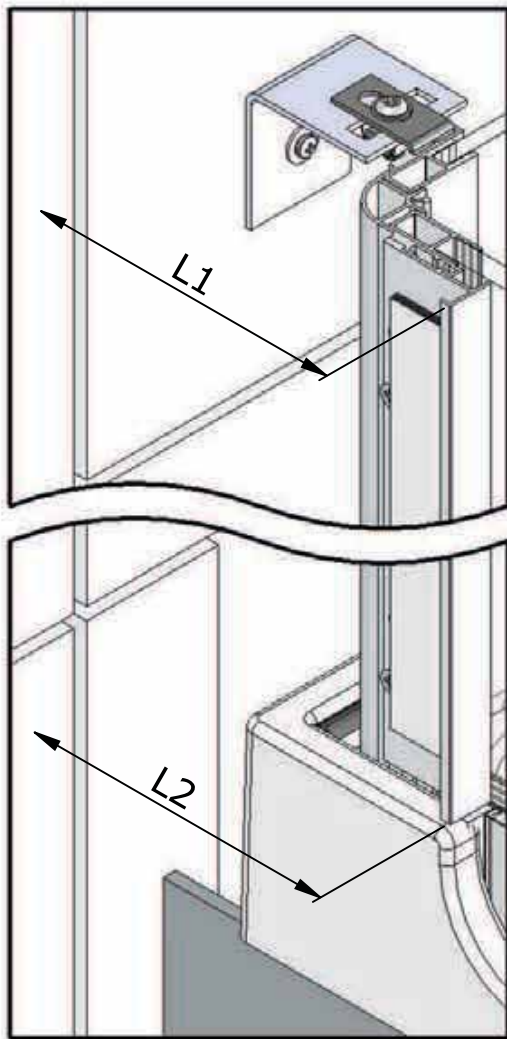


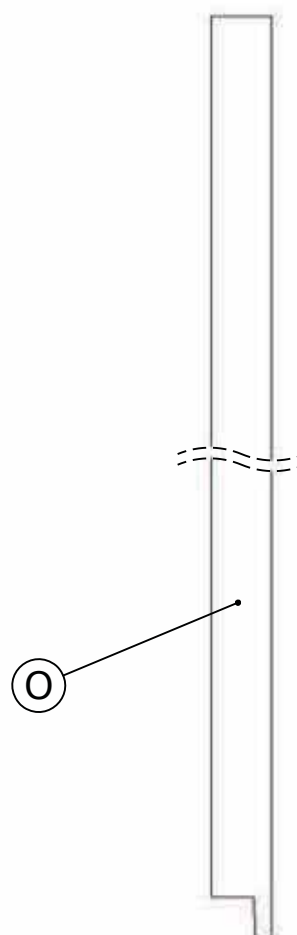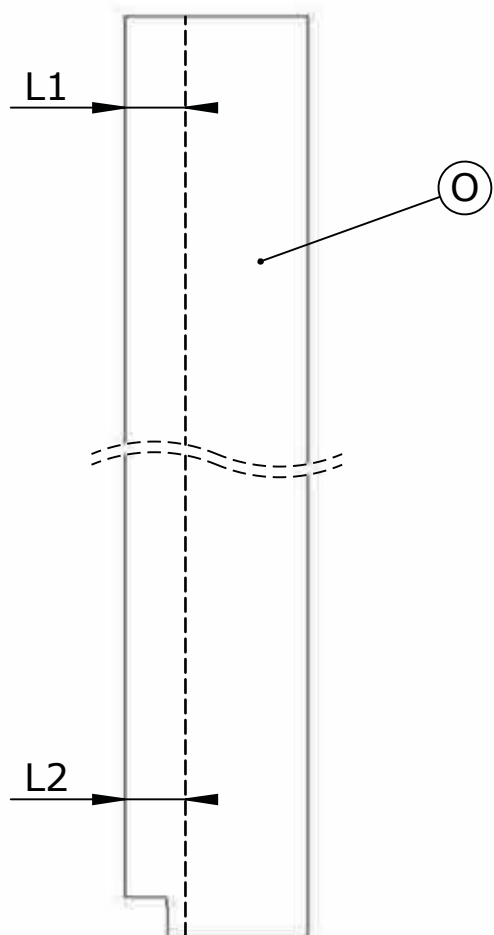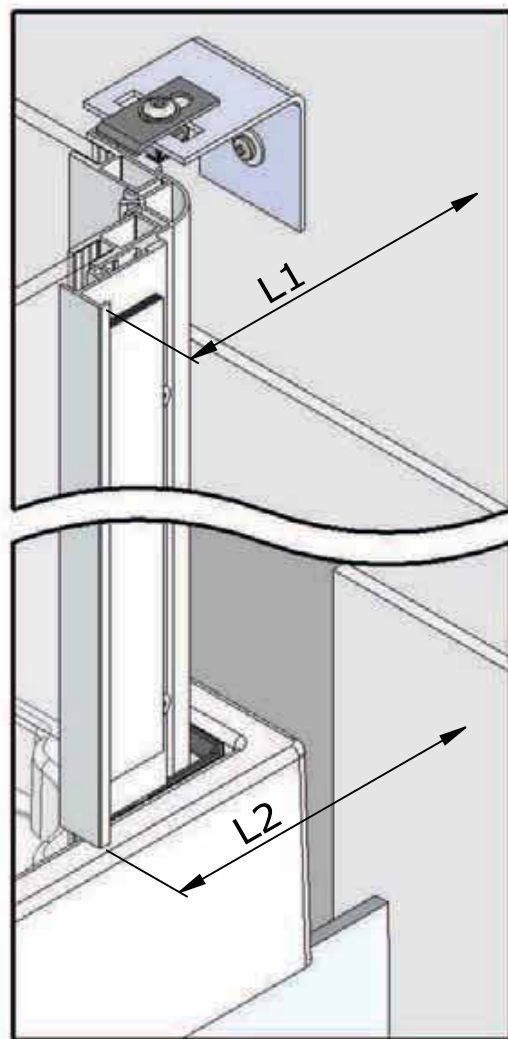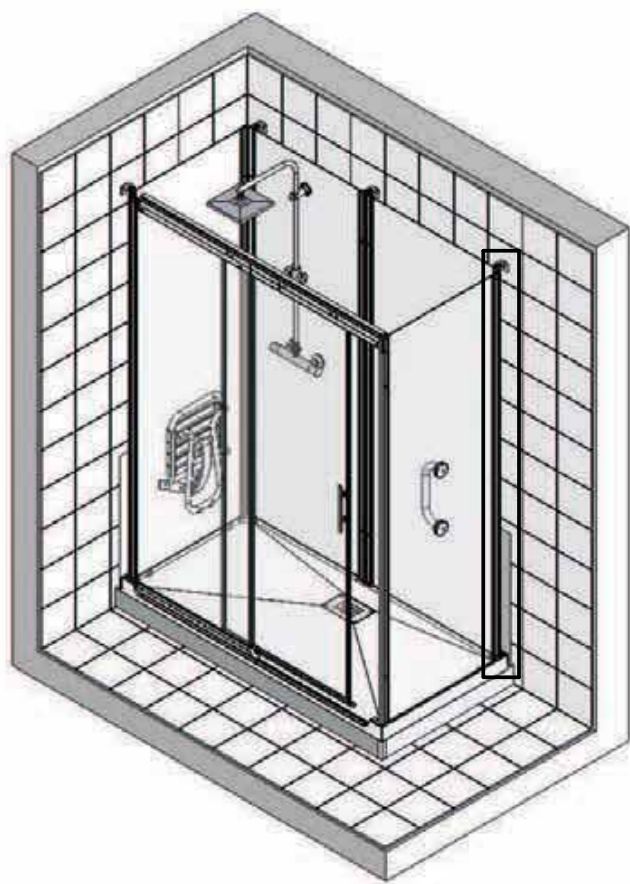

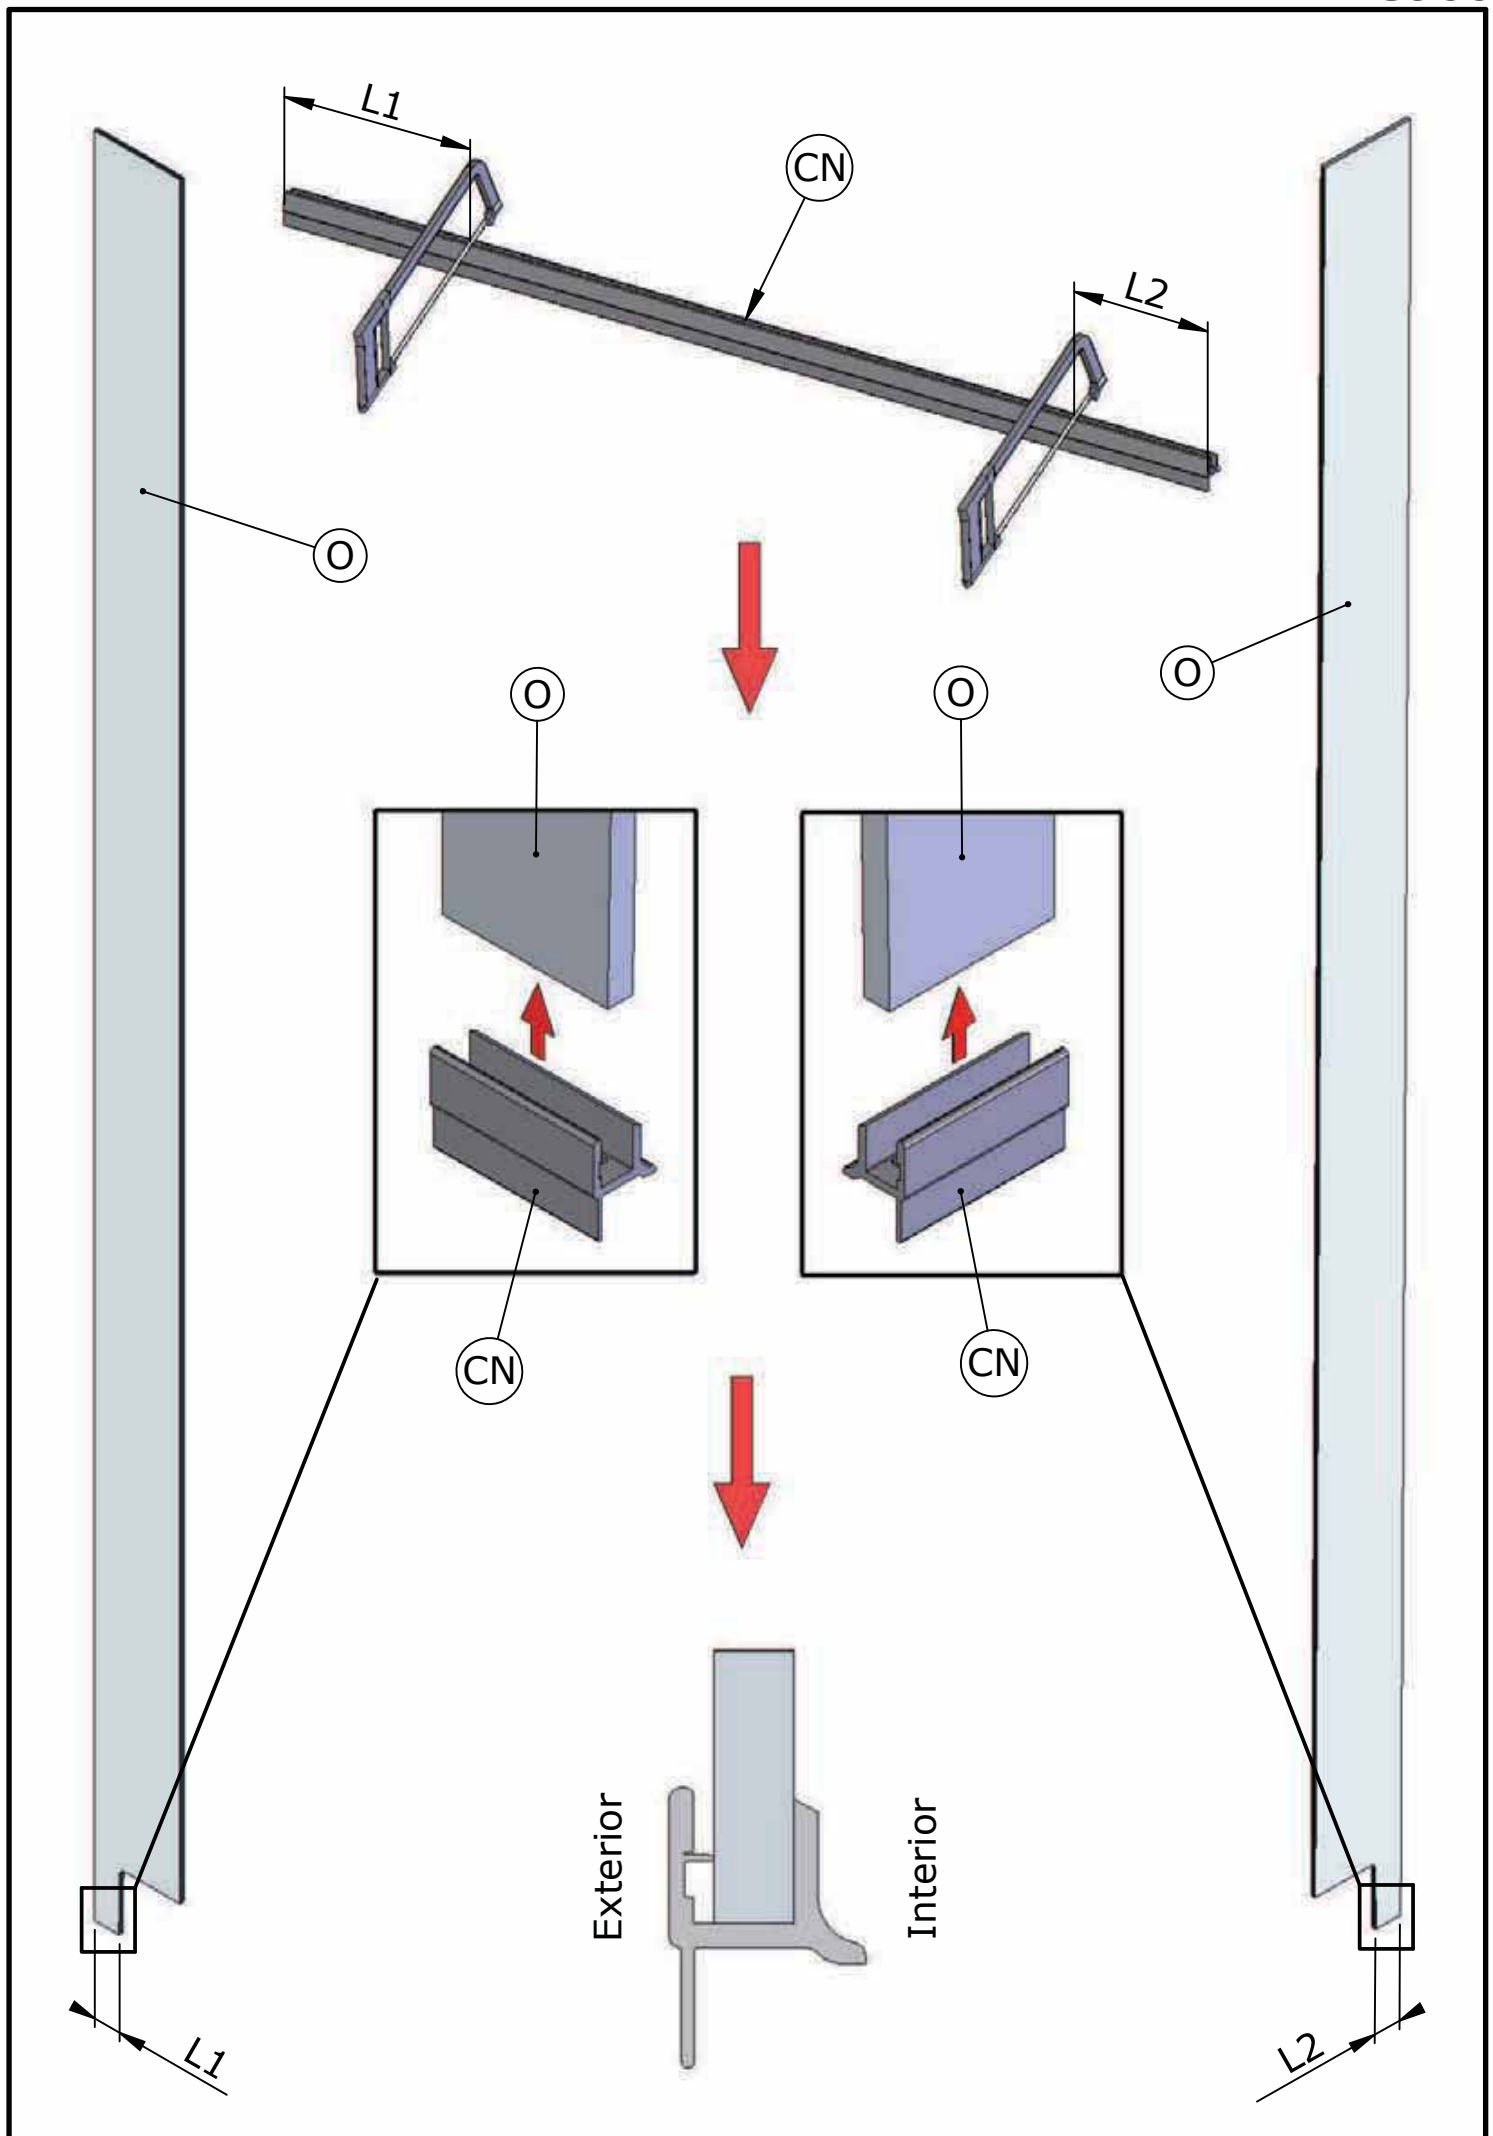


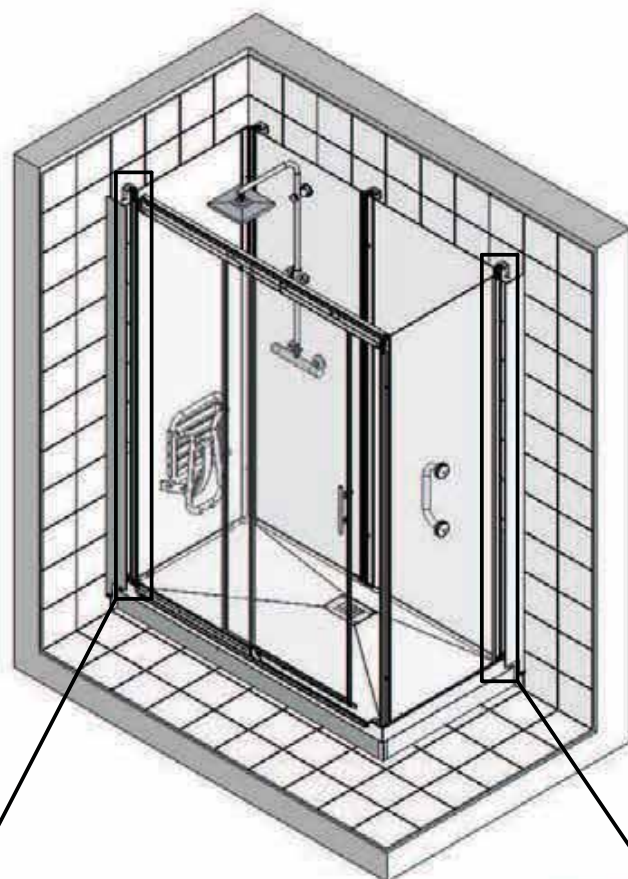



○




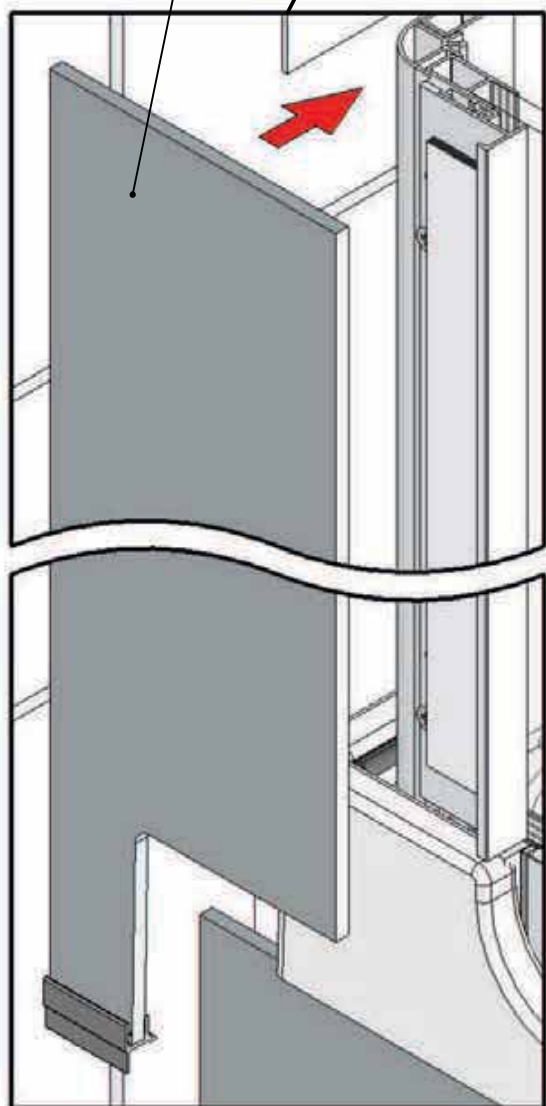





○

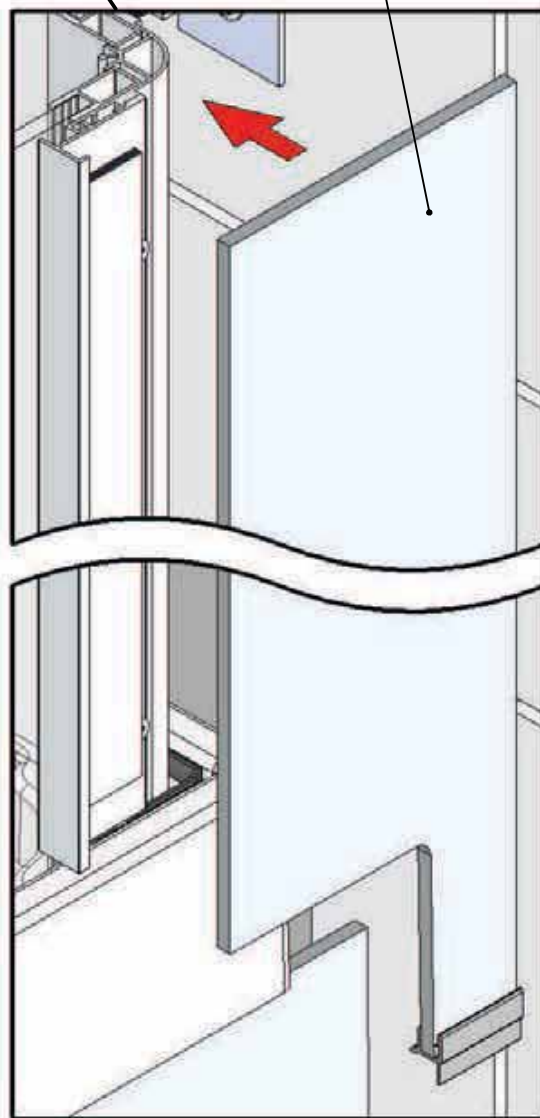


Recess version


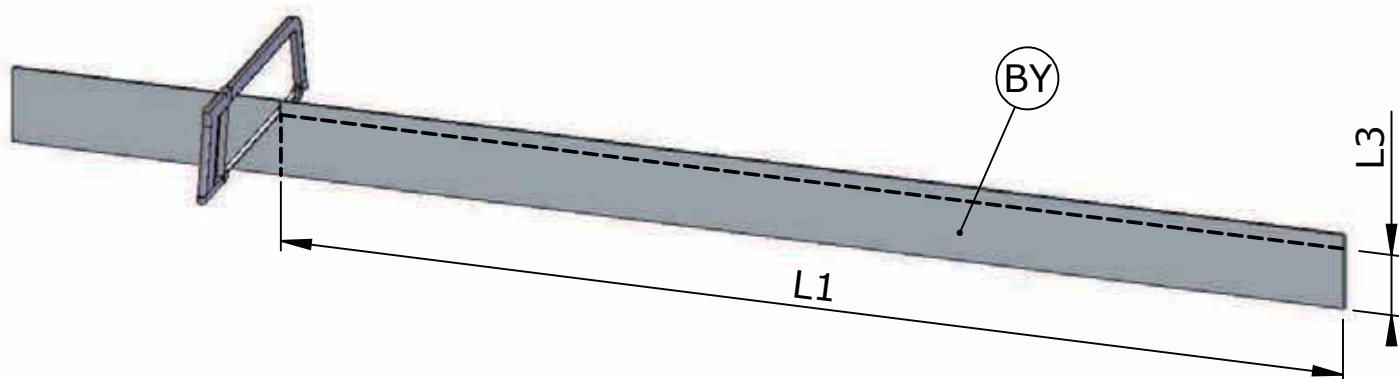
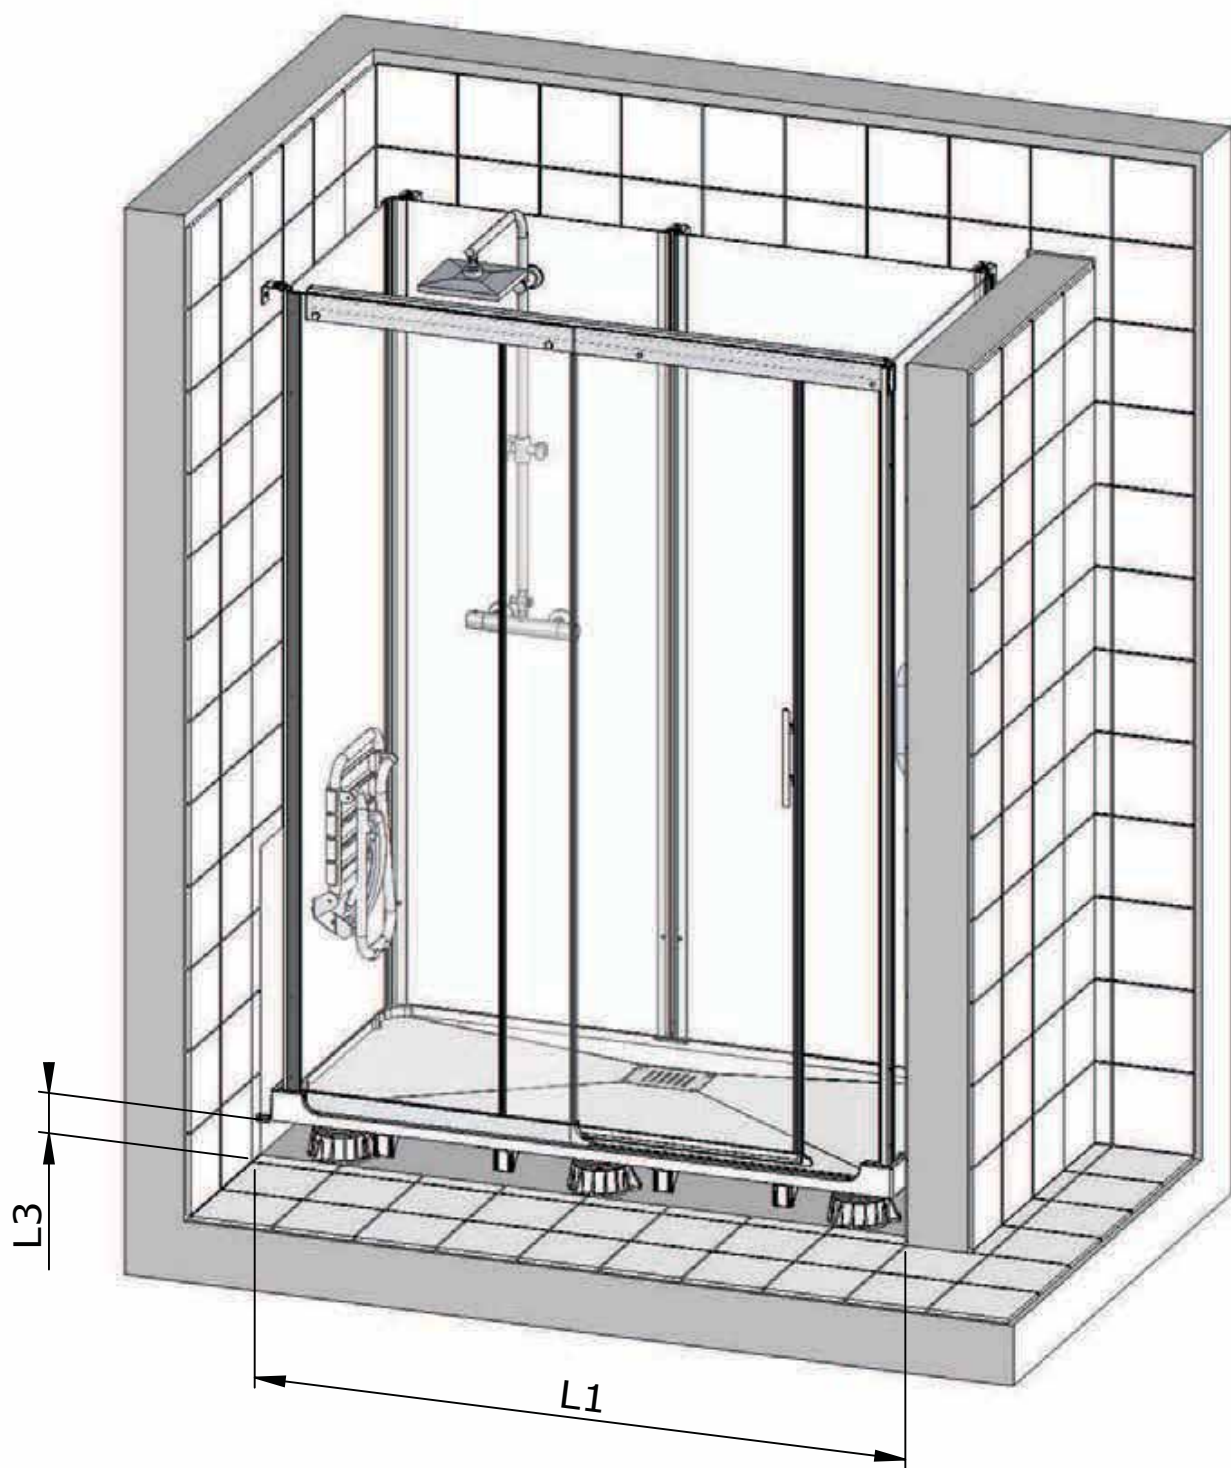


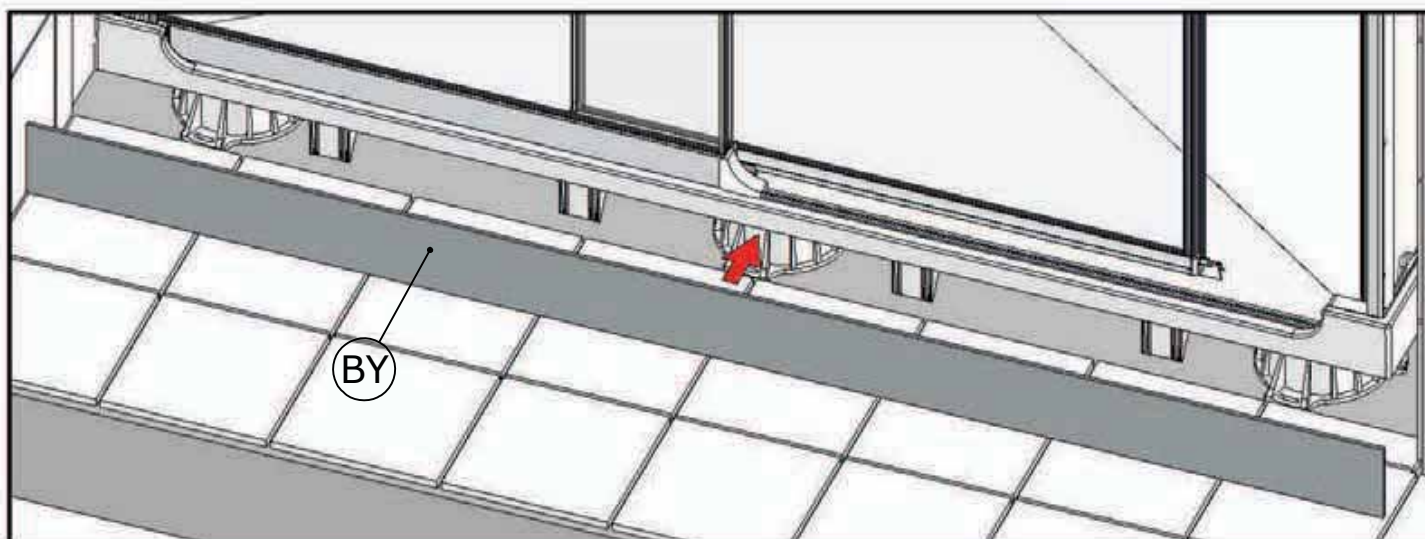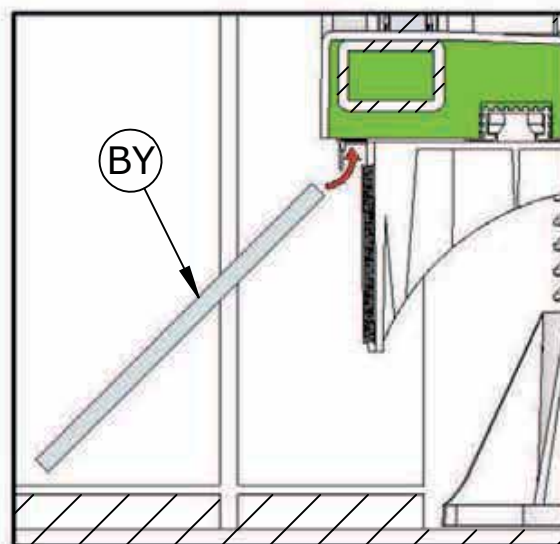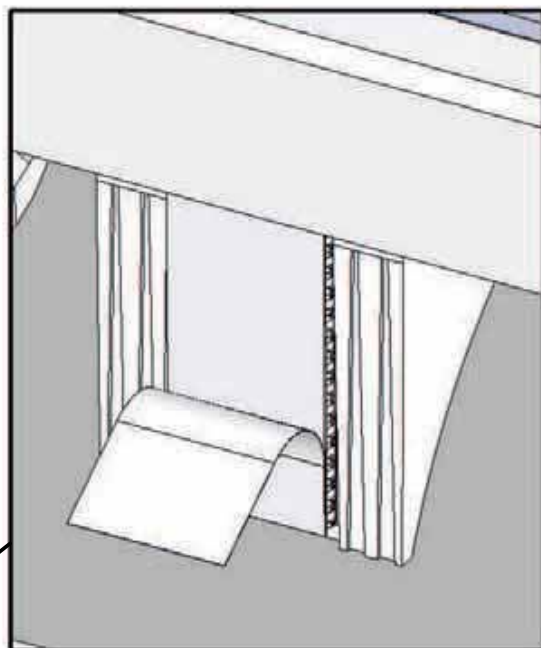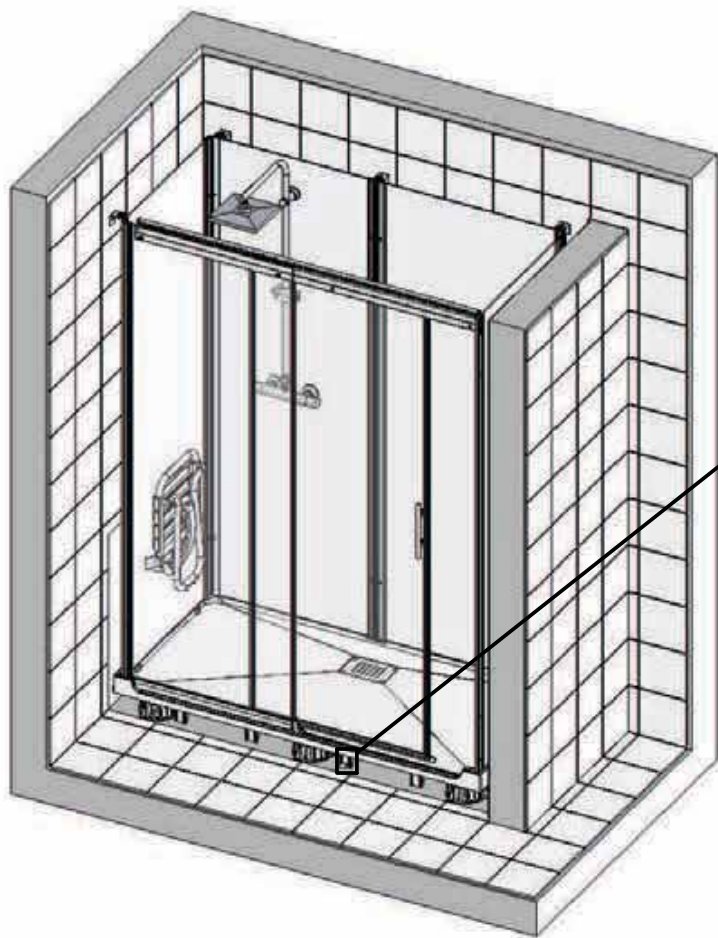

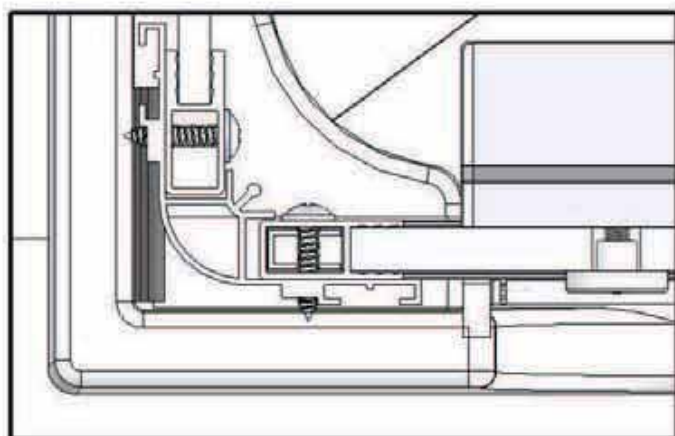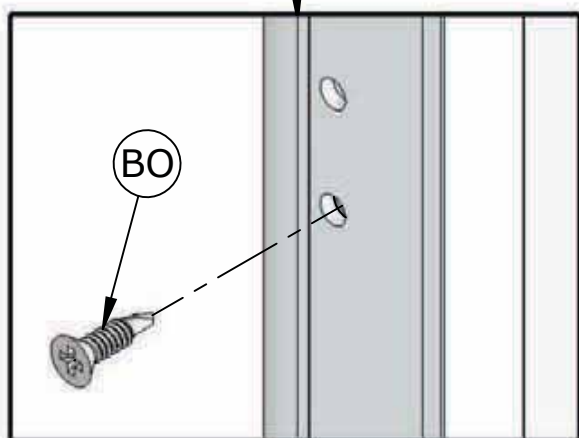
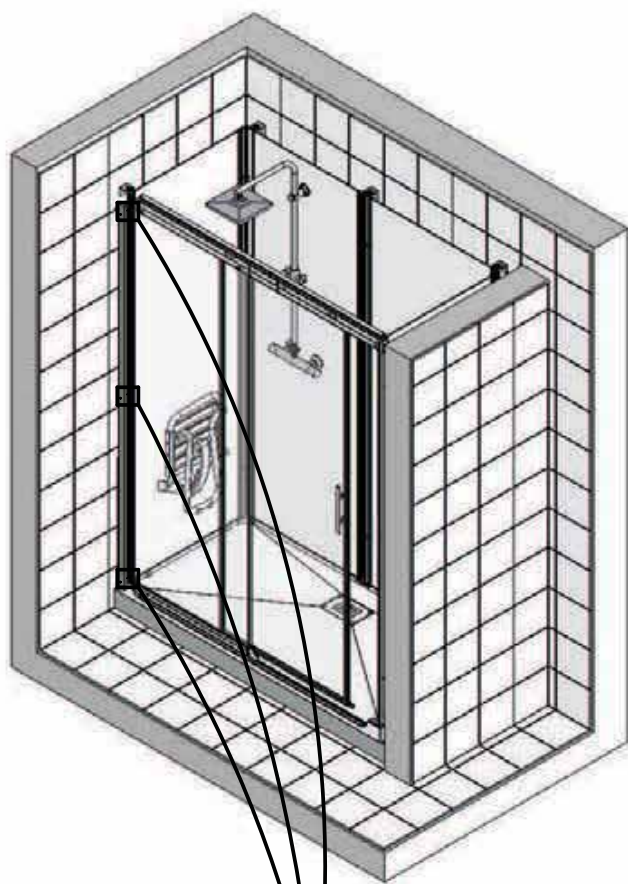





(L)

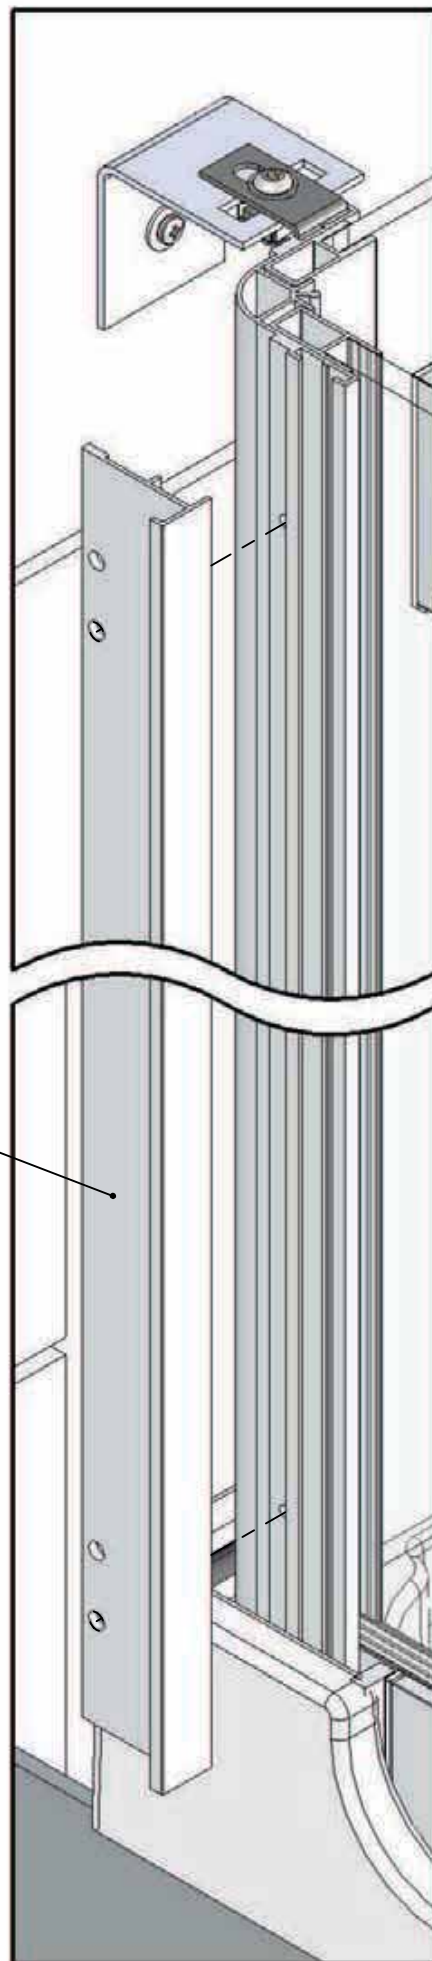

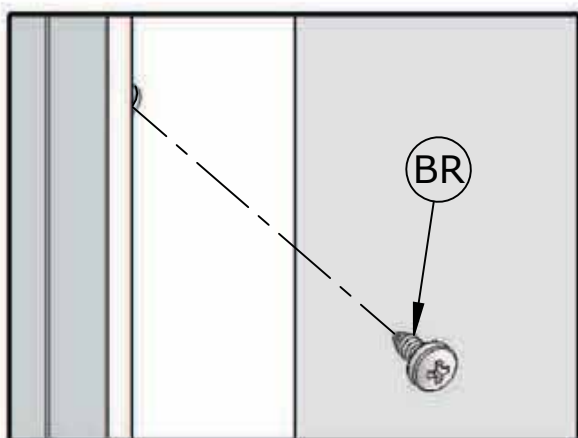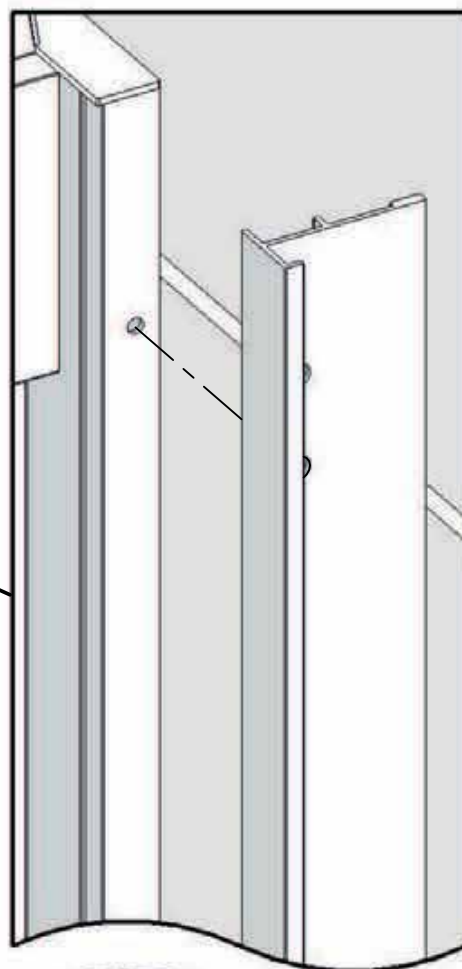
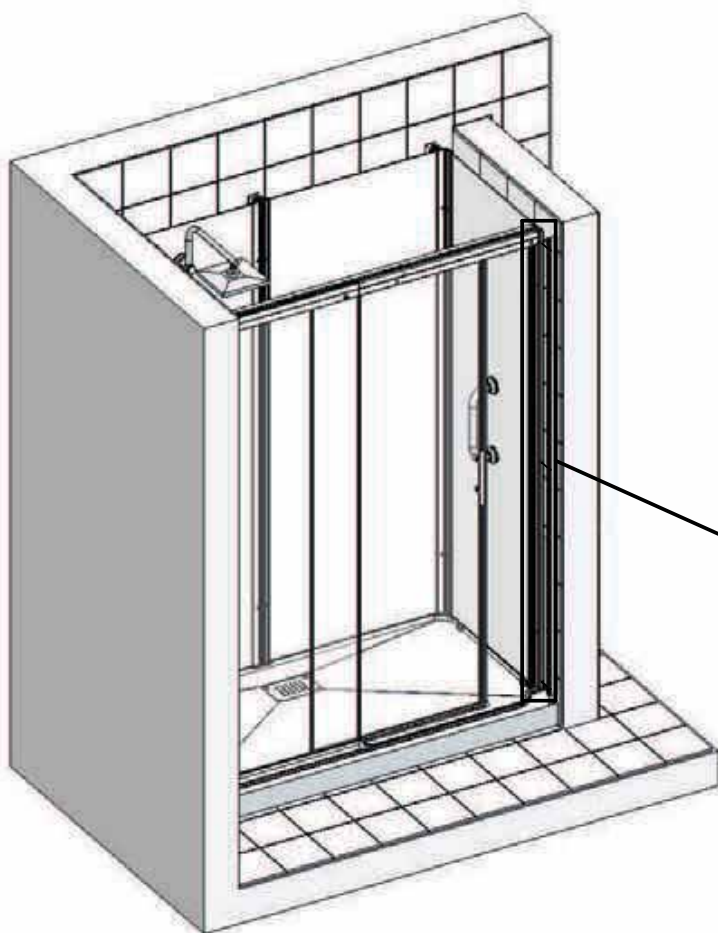


LL





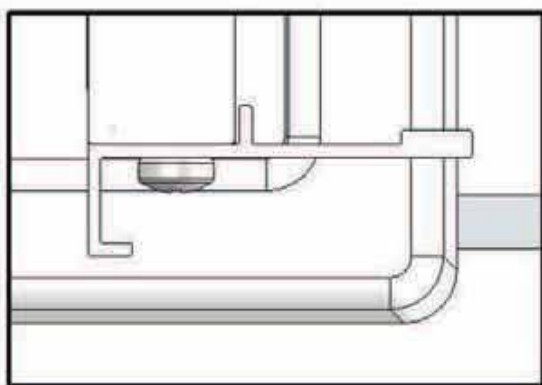
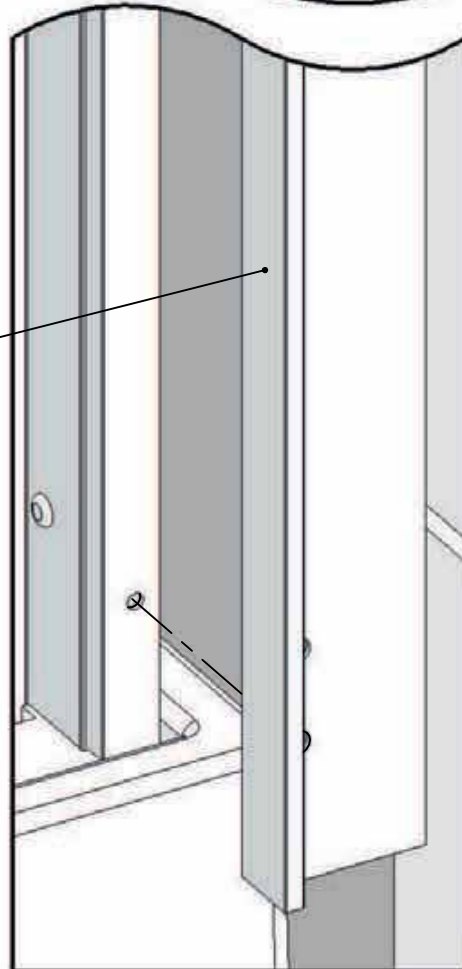



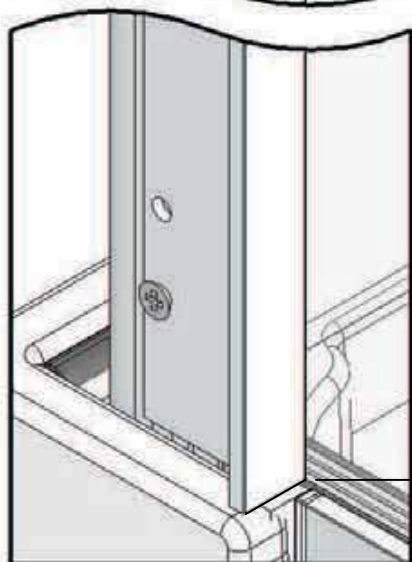
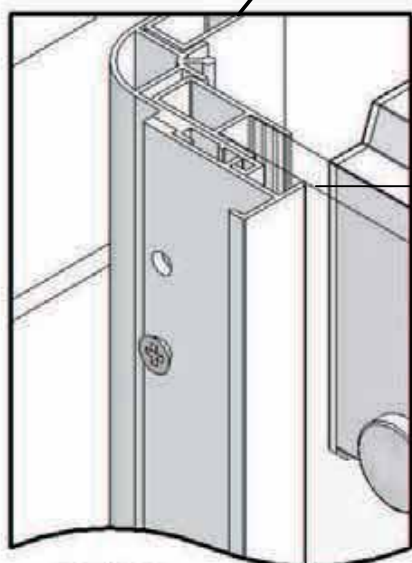
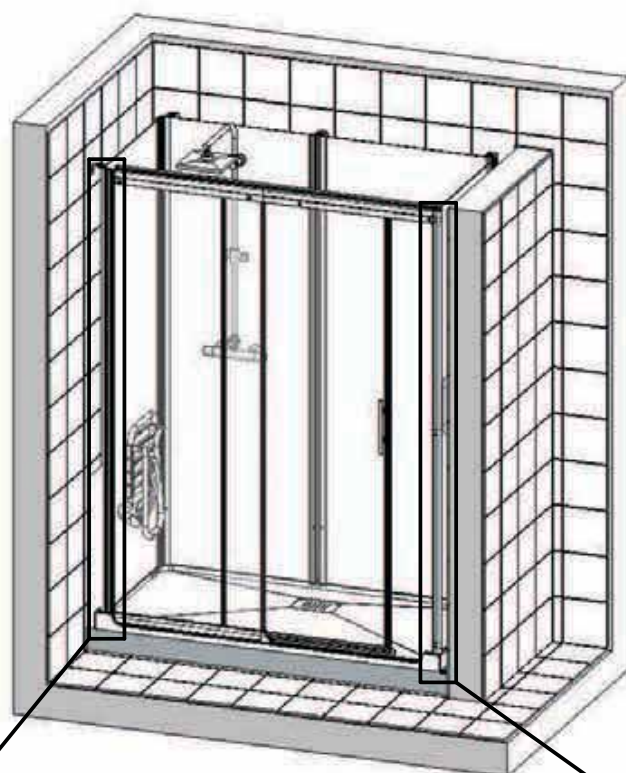






X

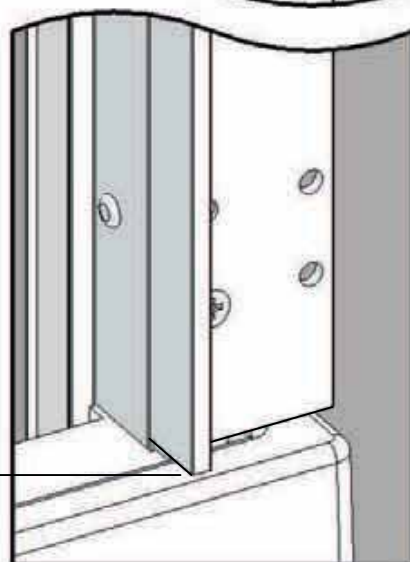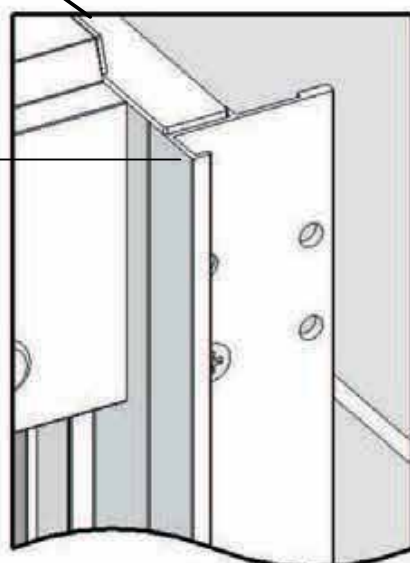





X

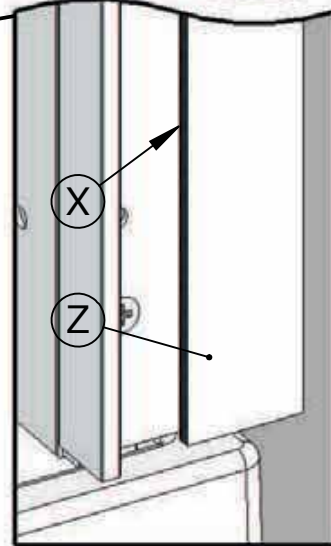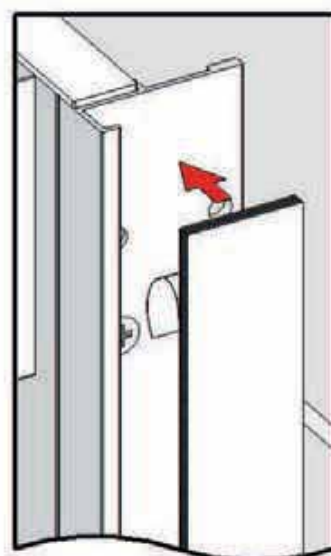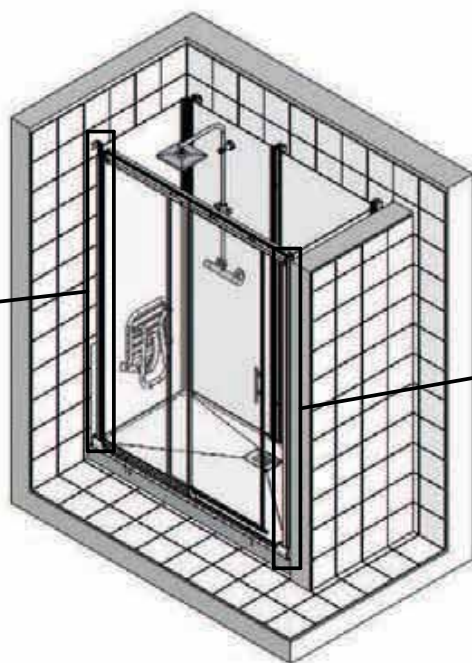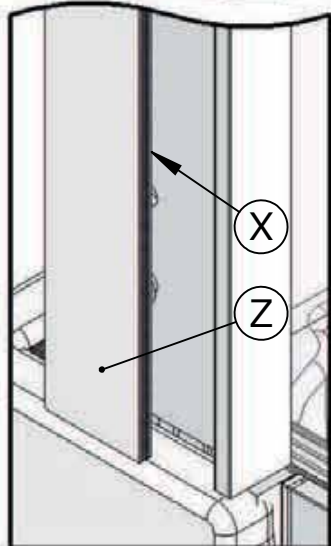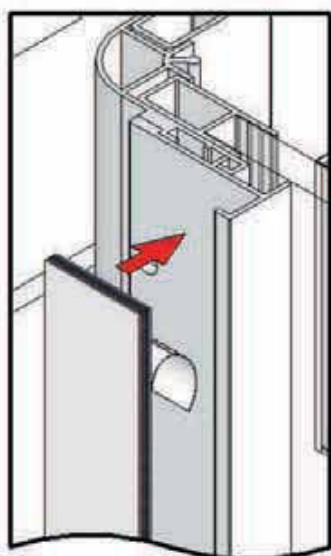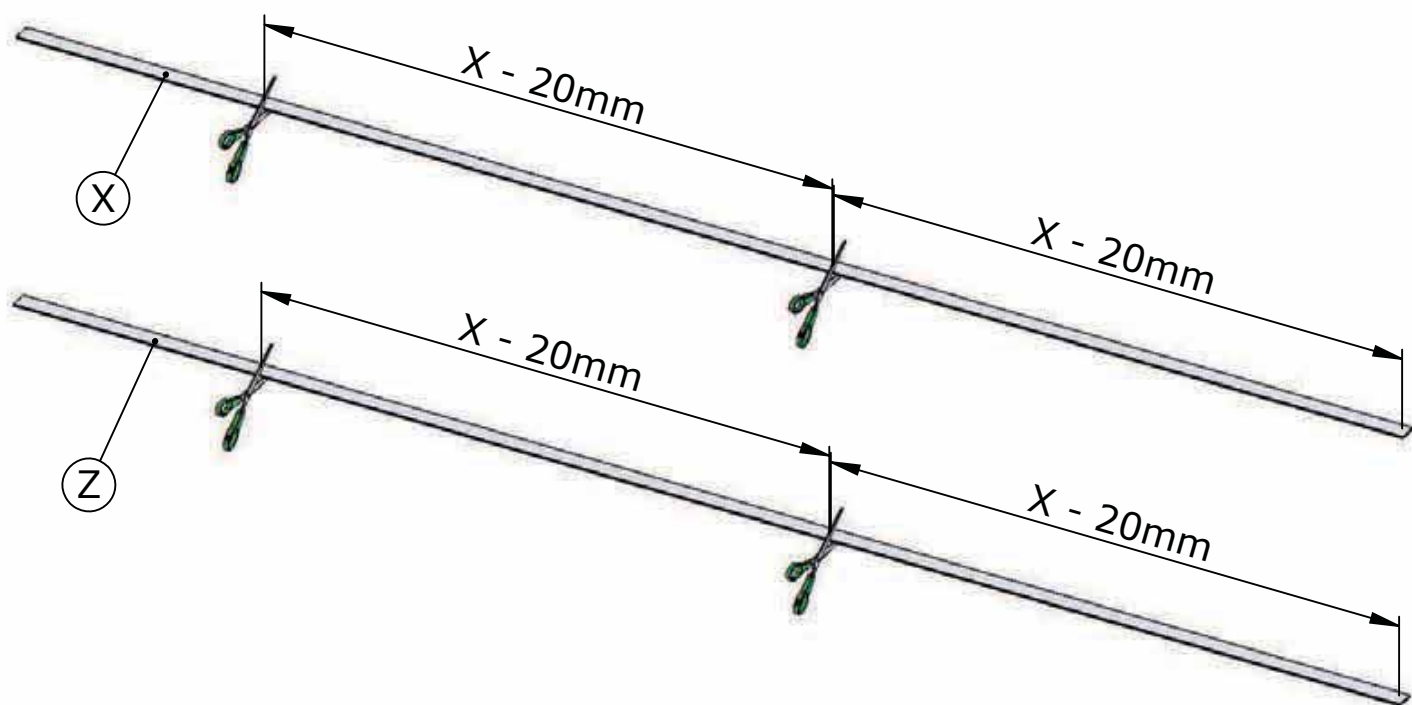


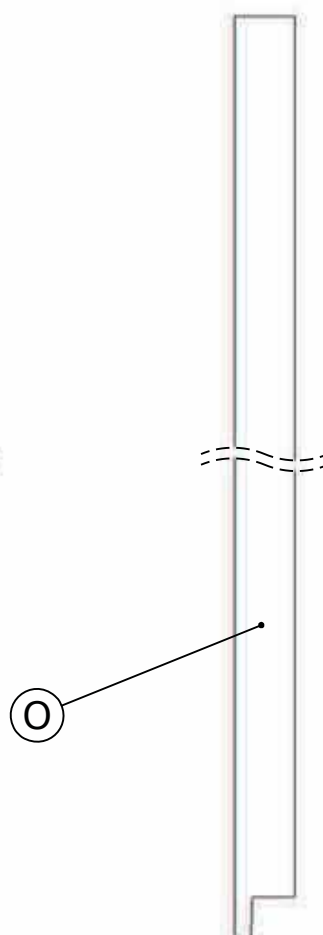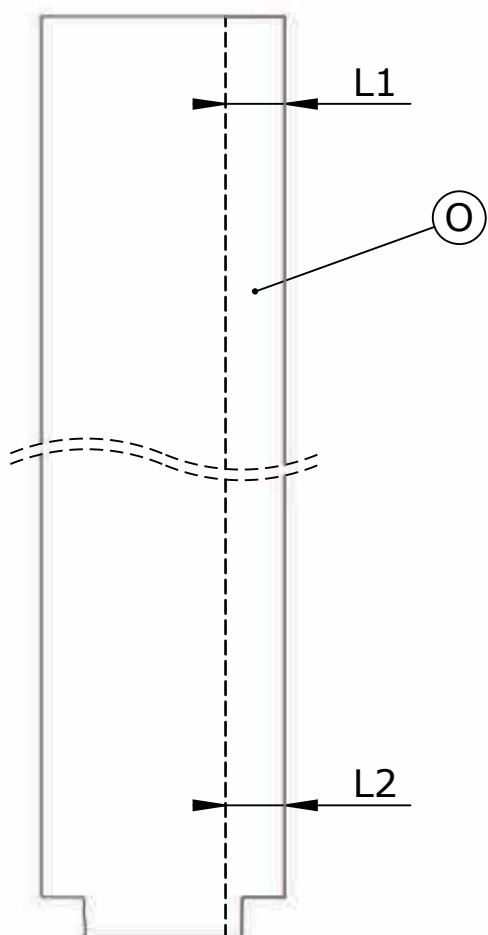
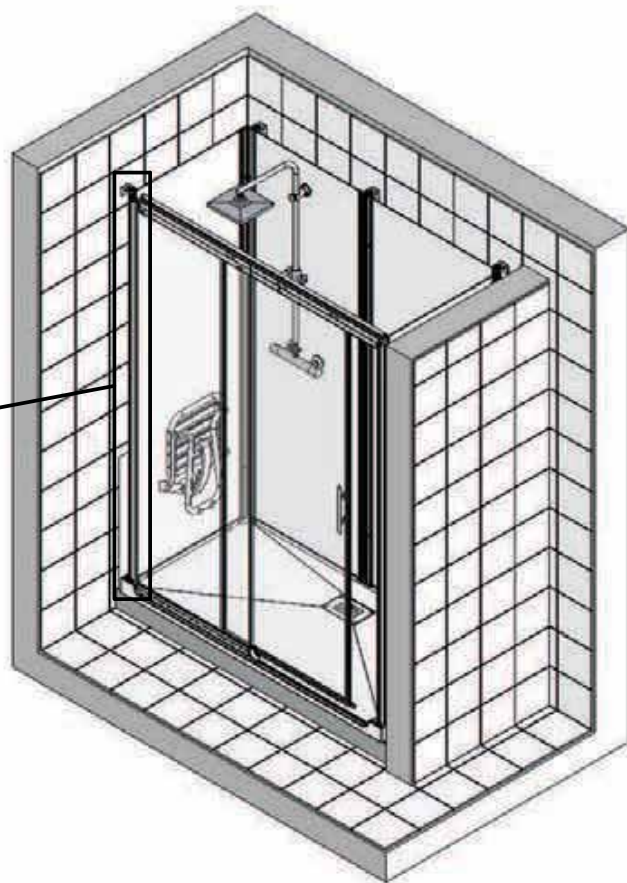
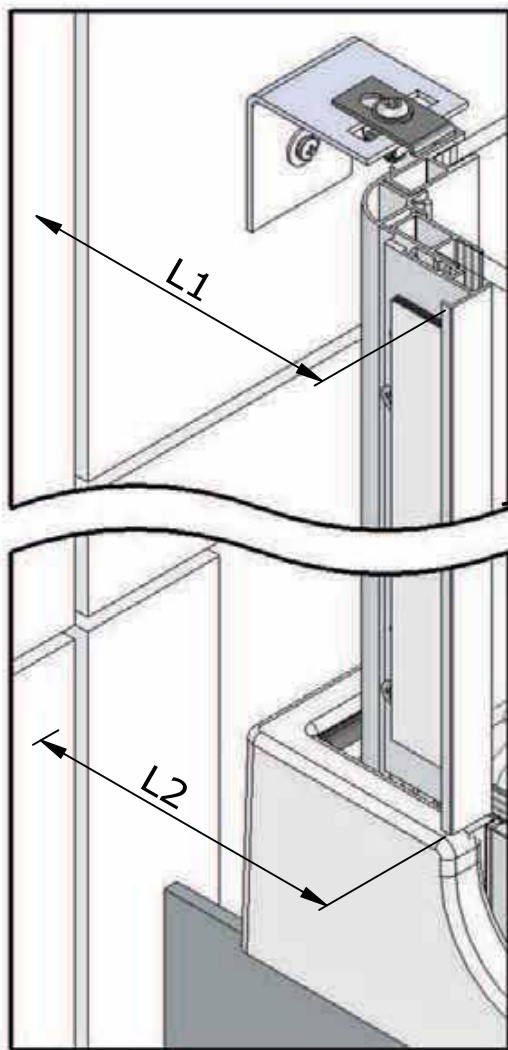



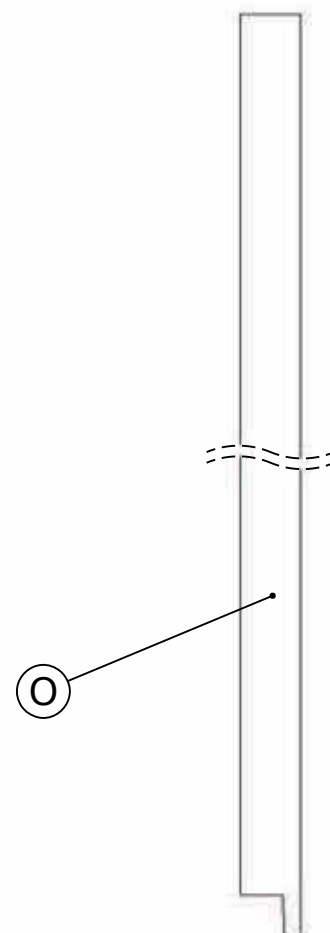
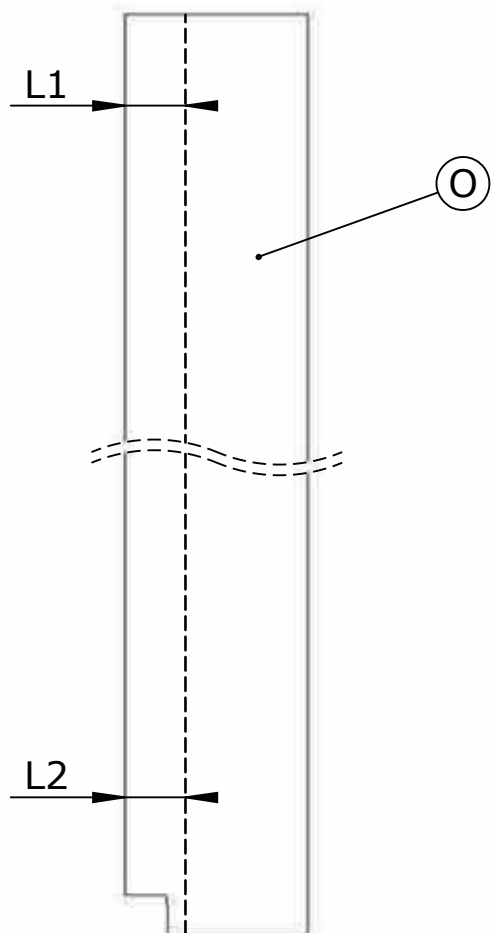
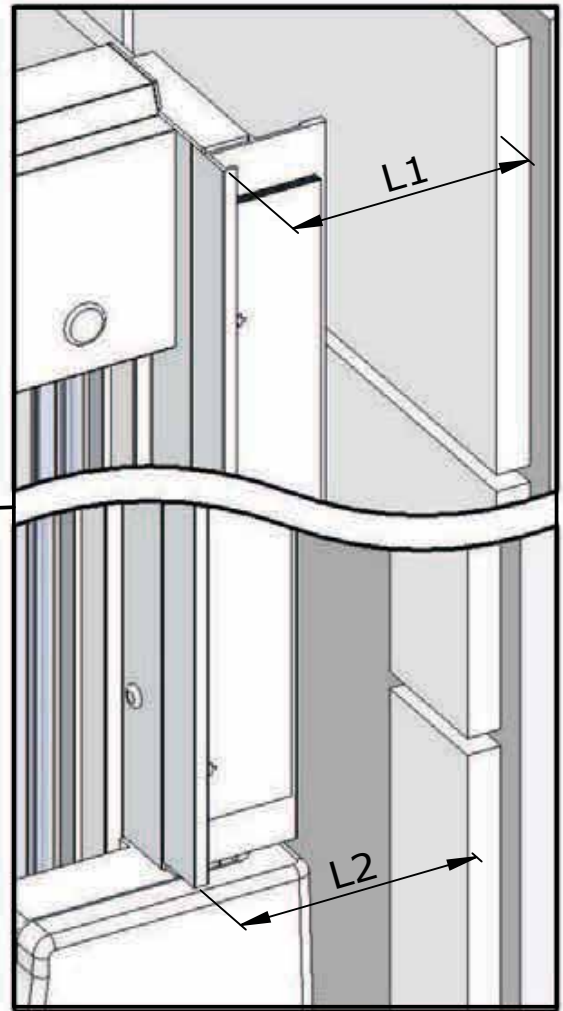
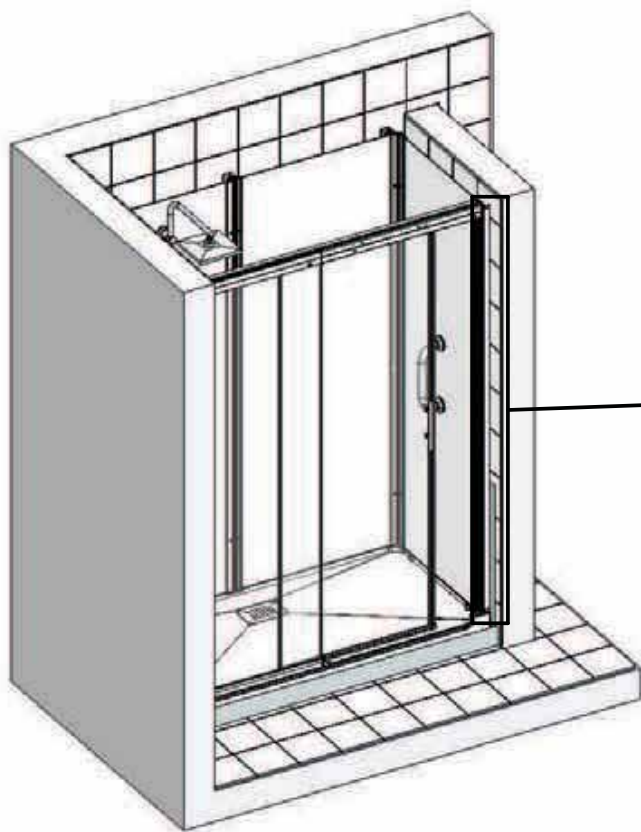






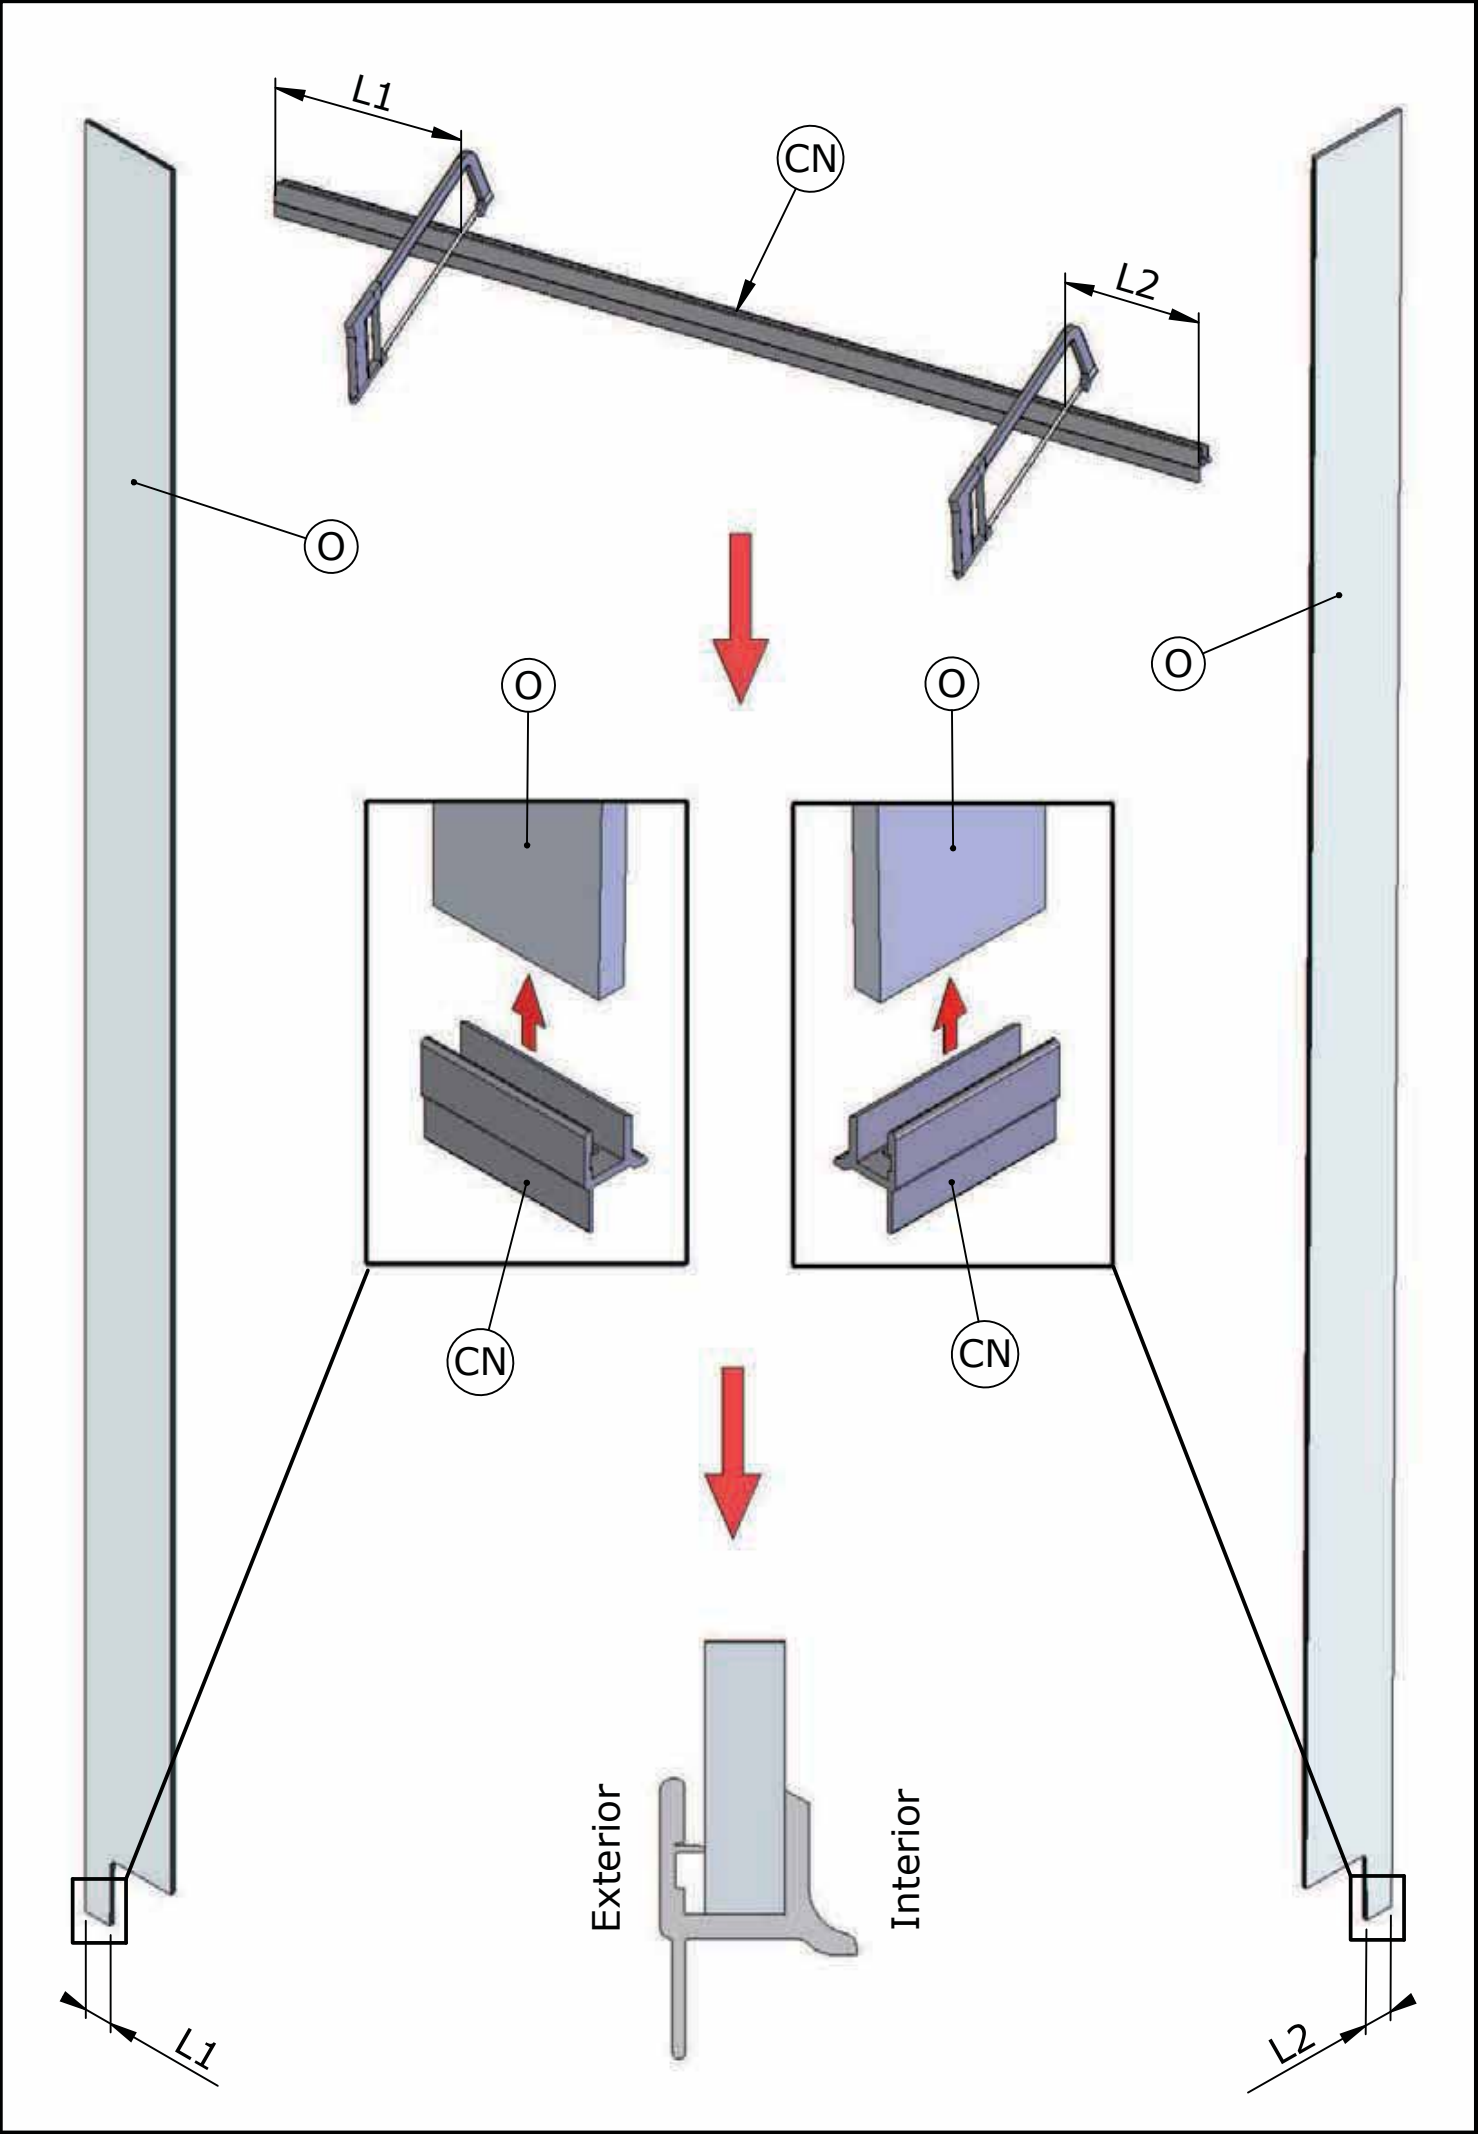




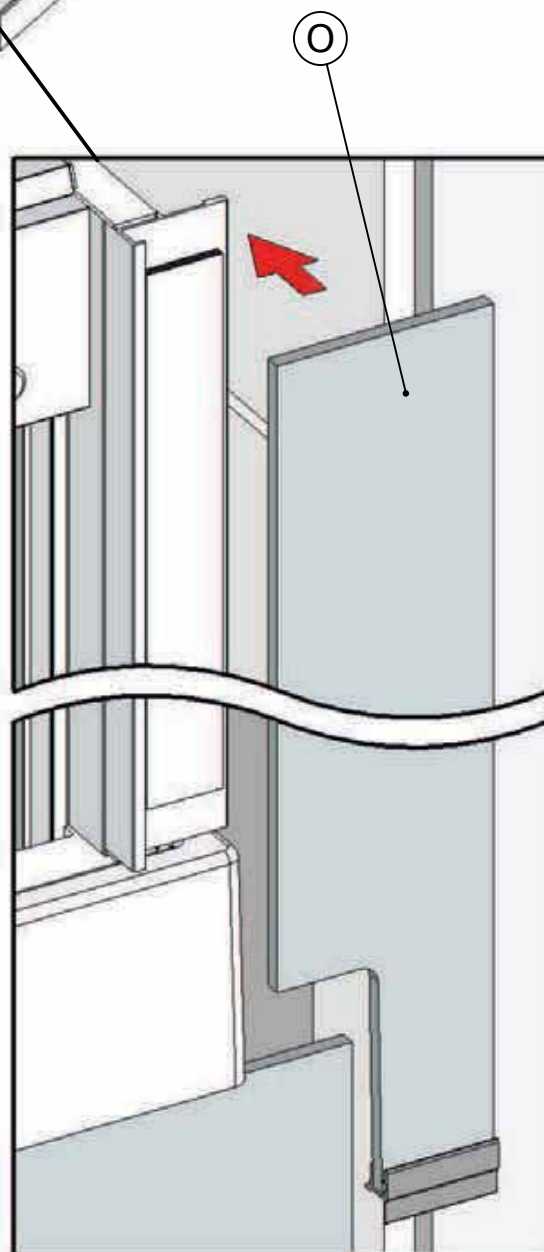
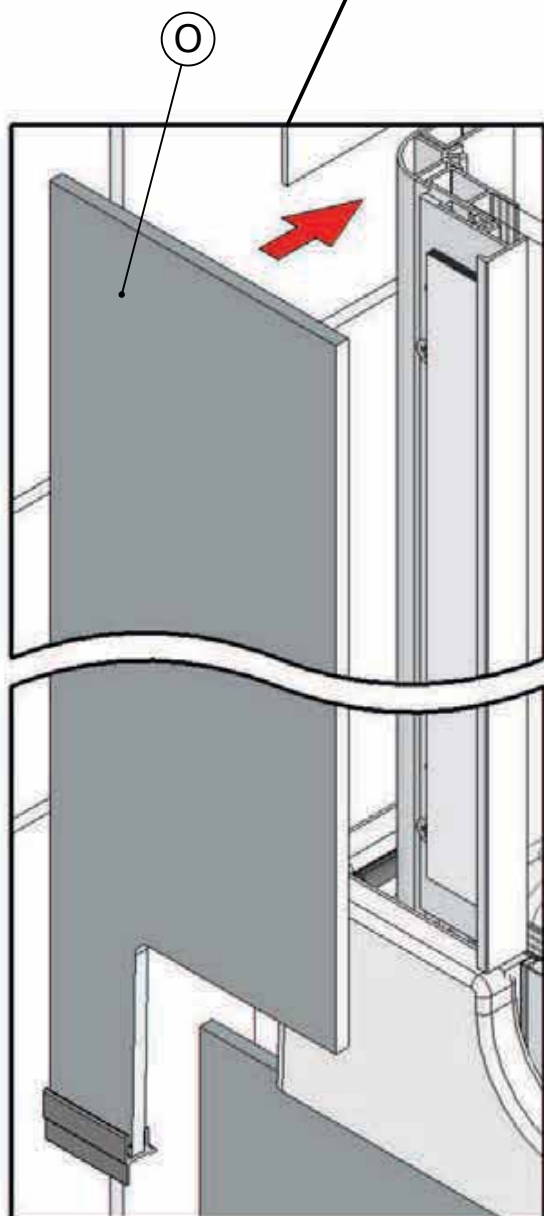
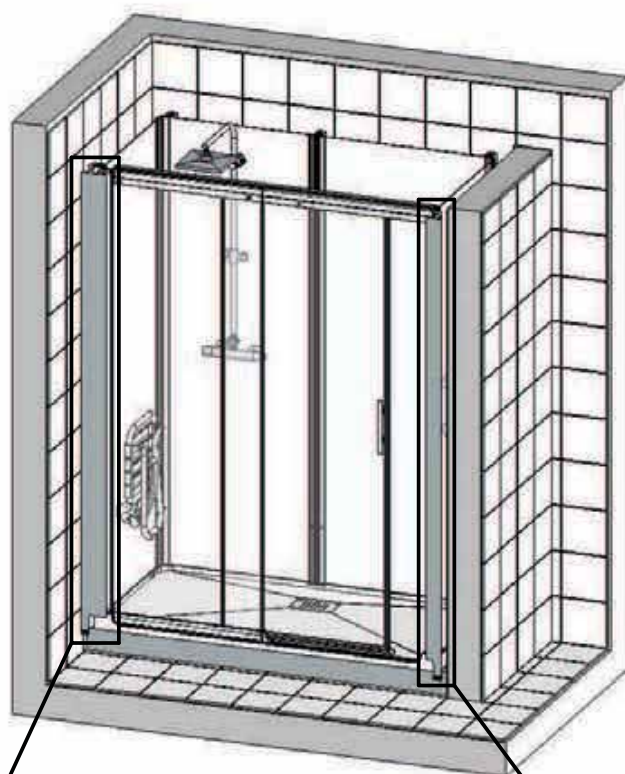




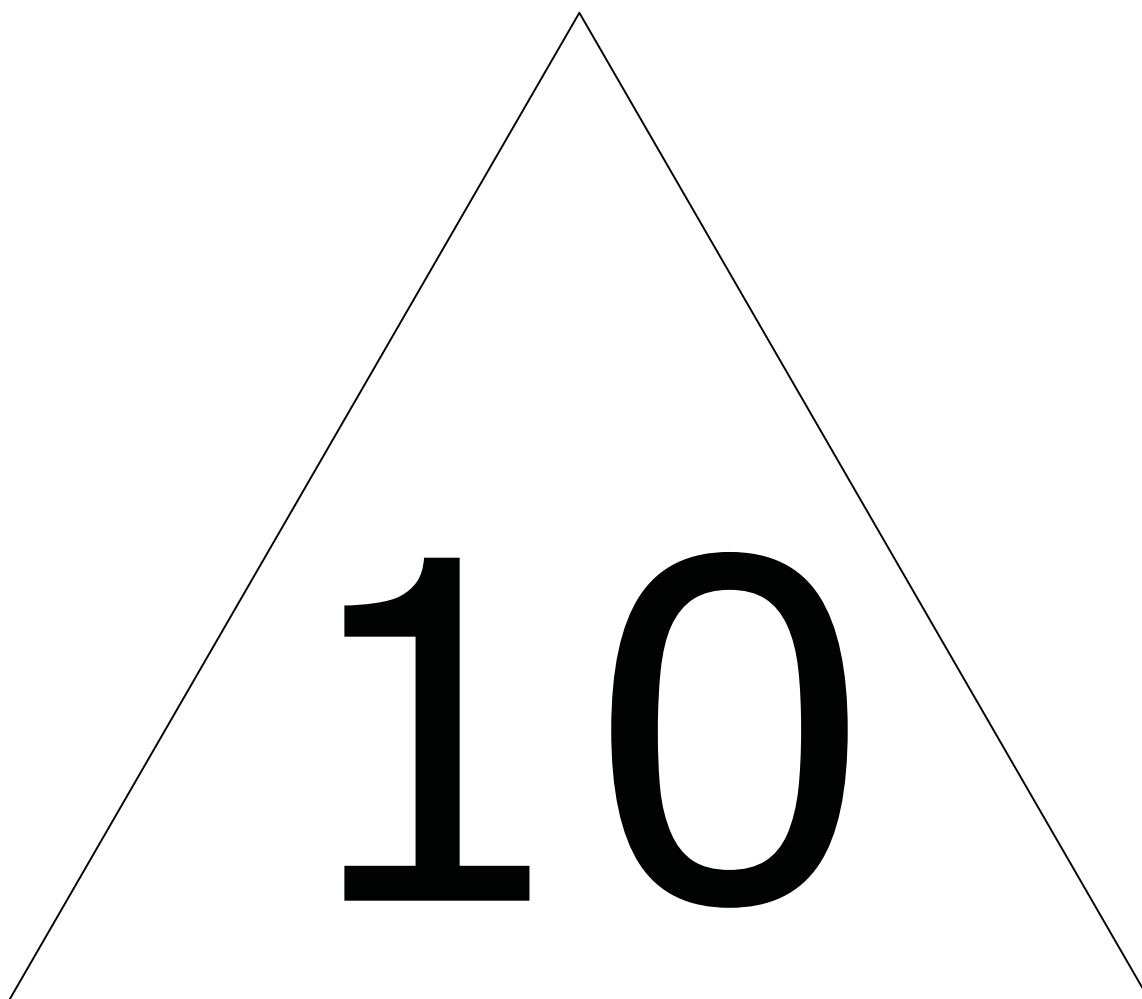


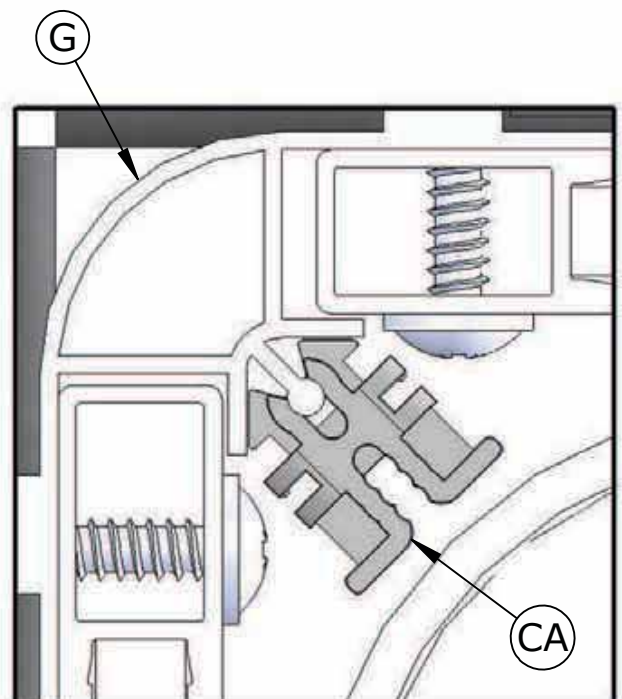
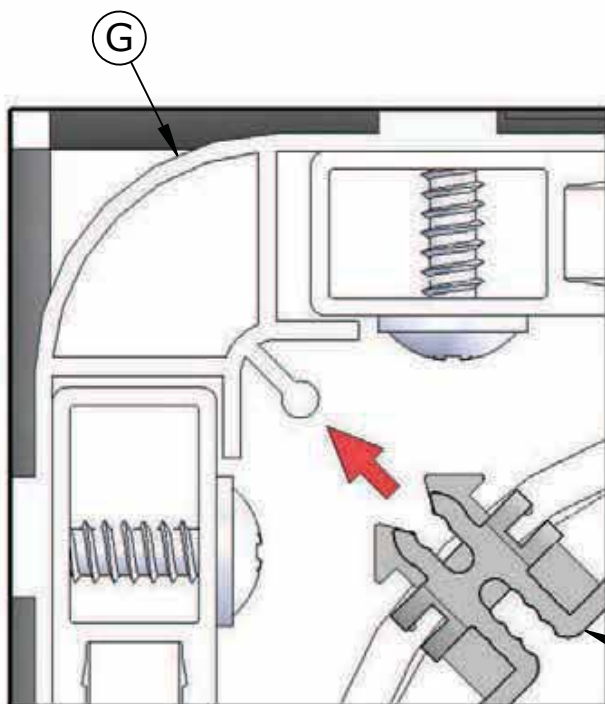
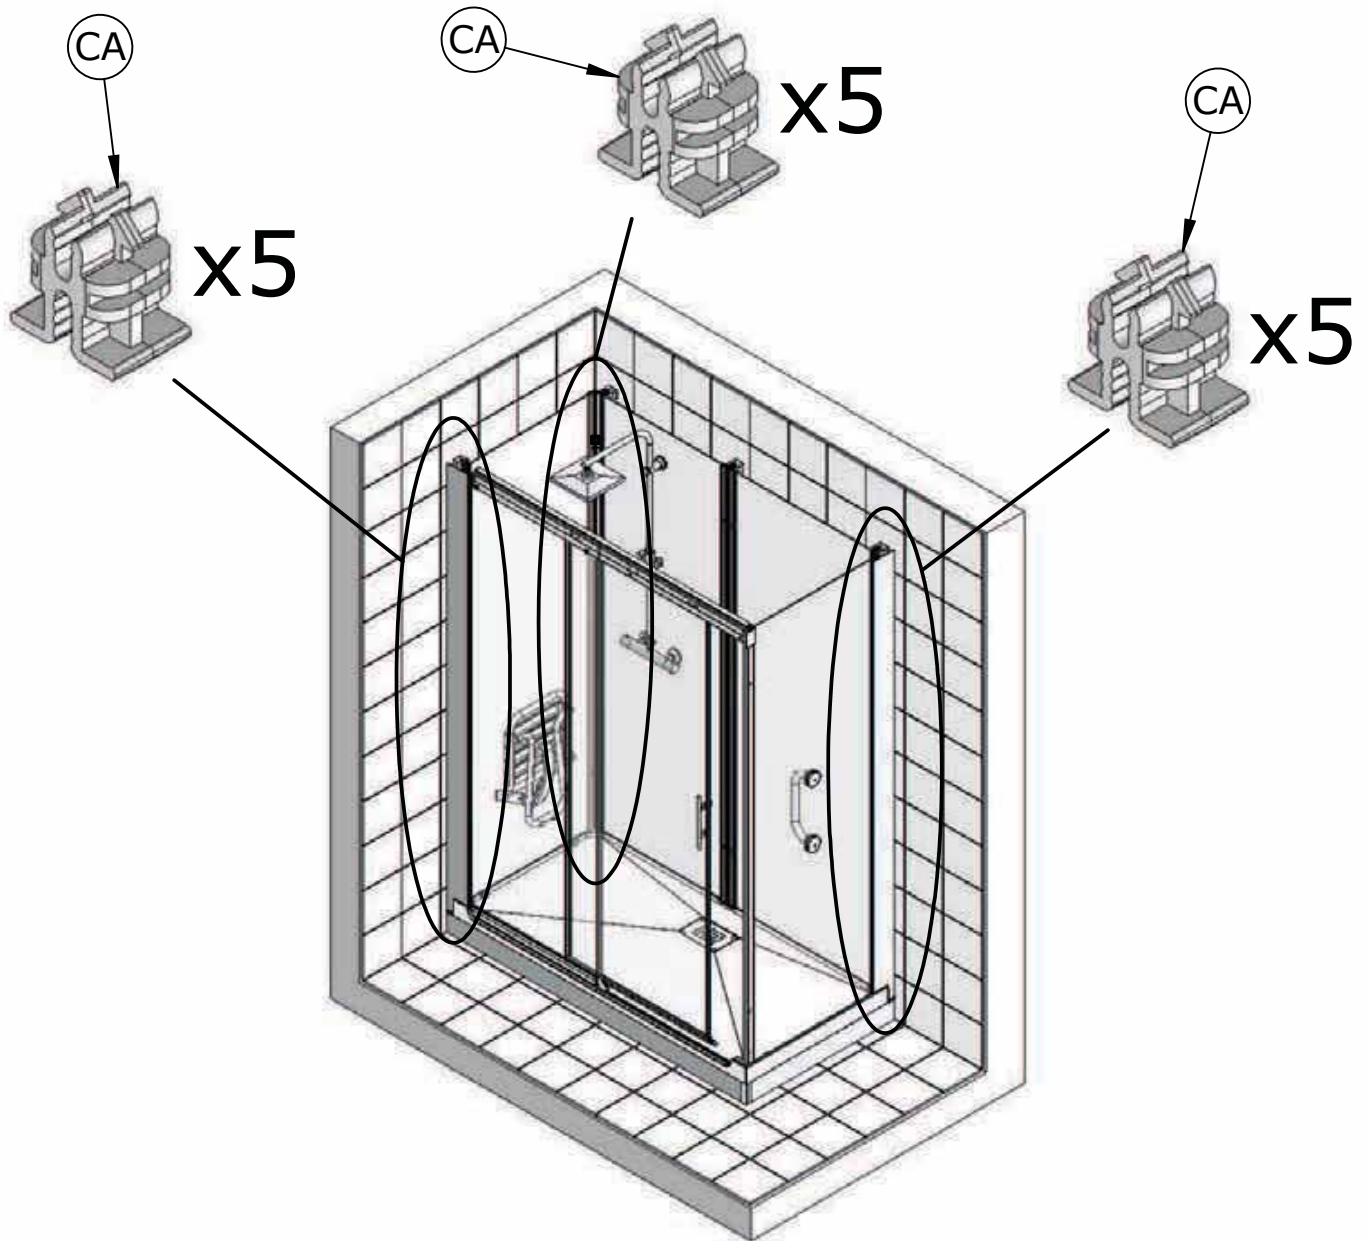


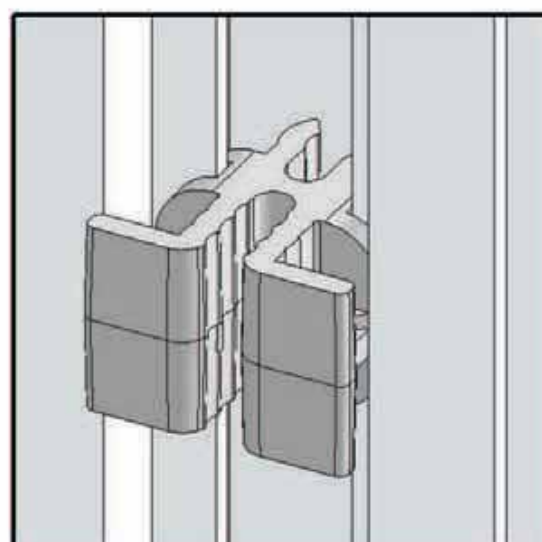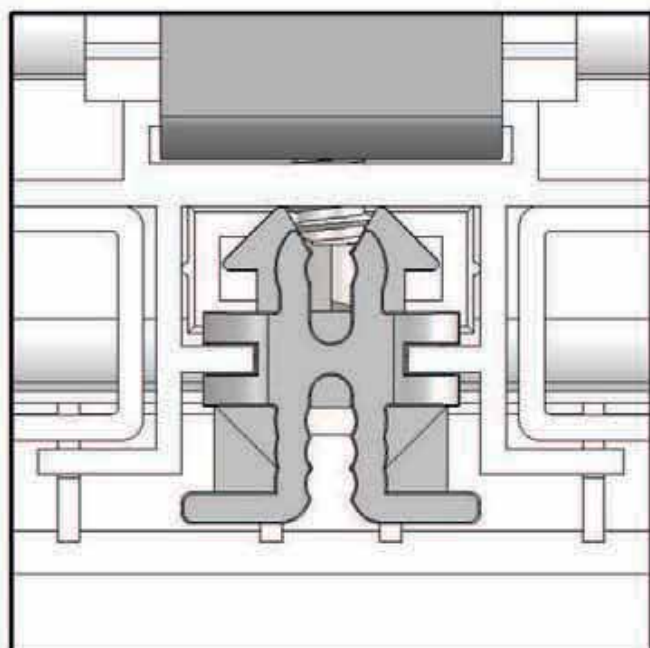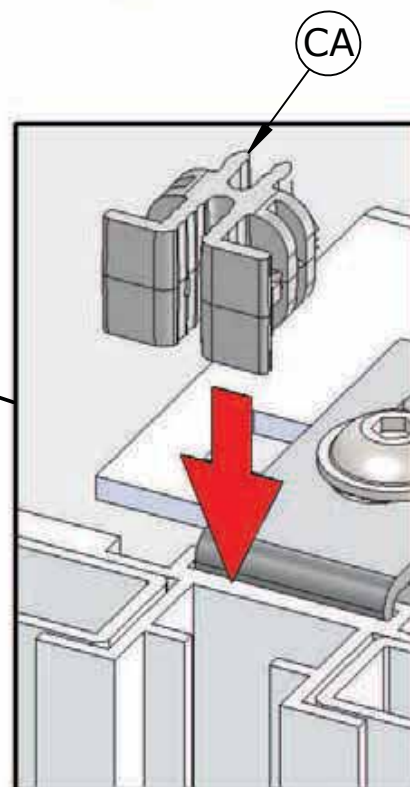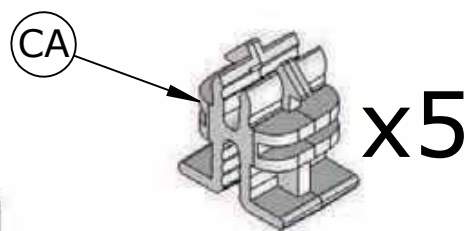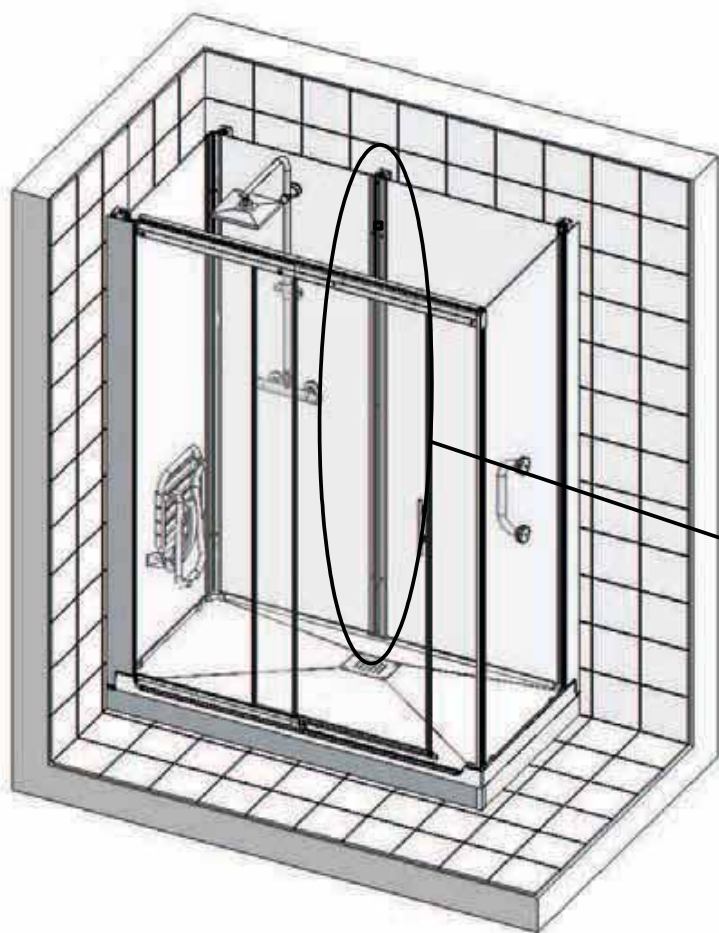


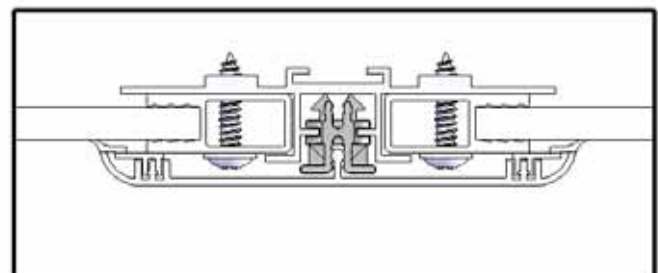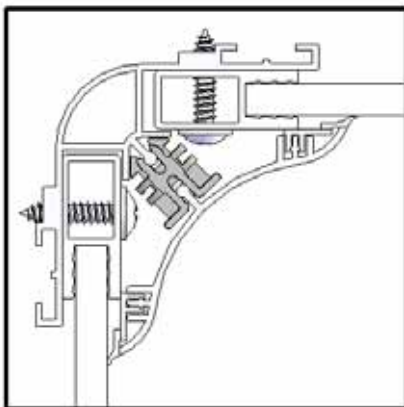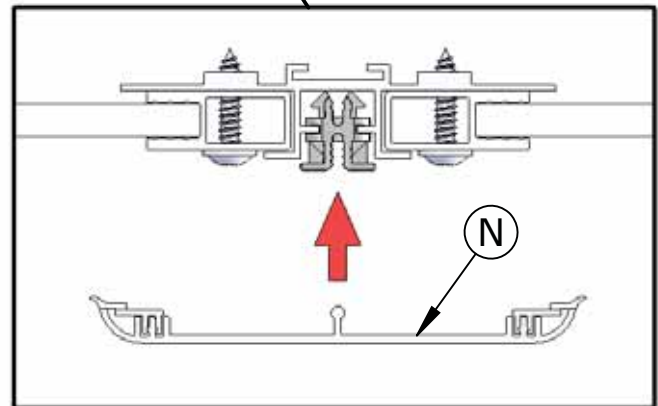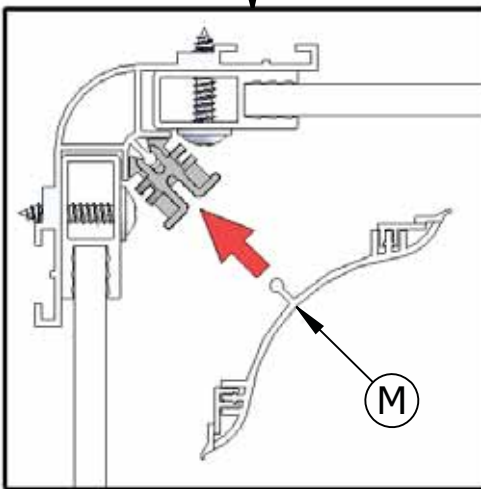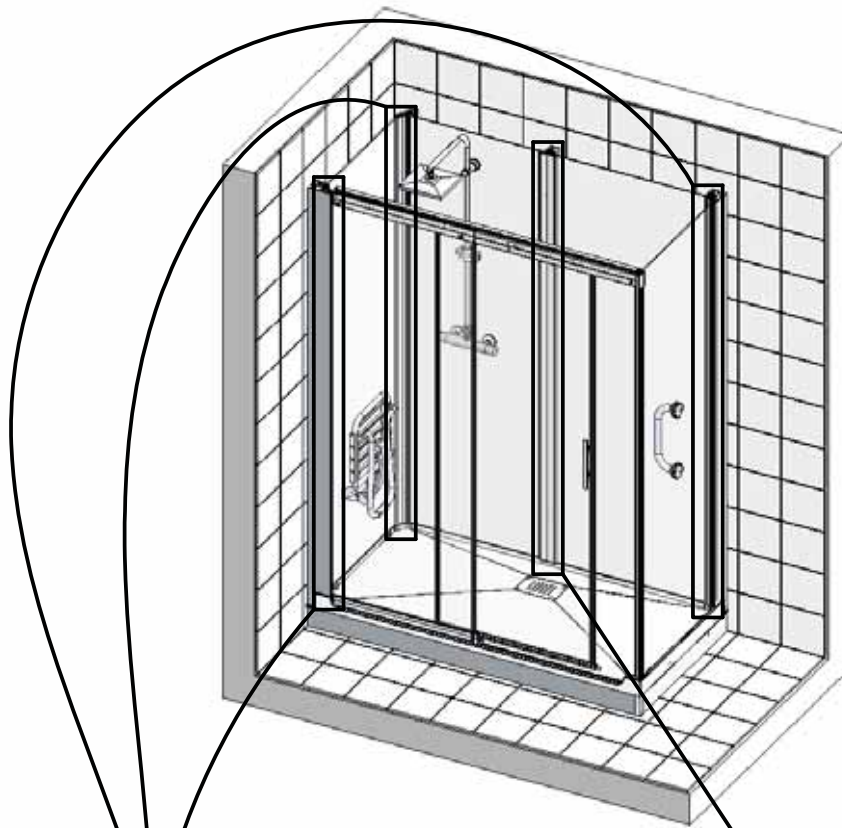

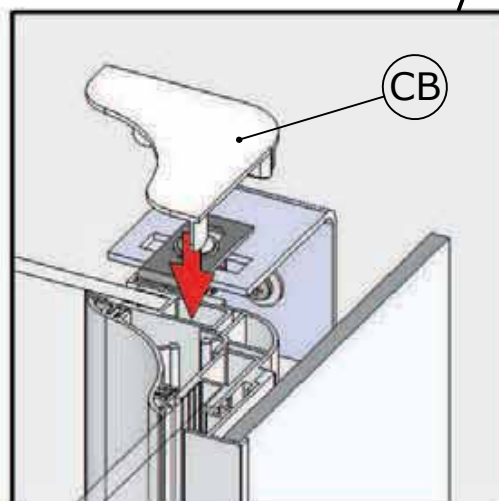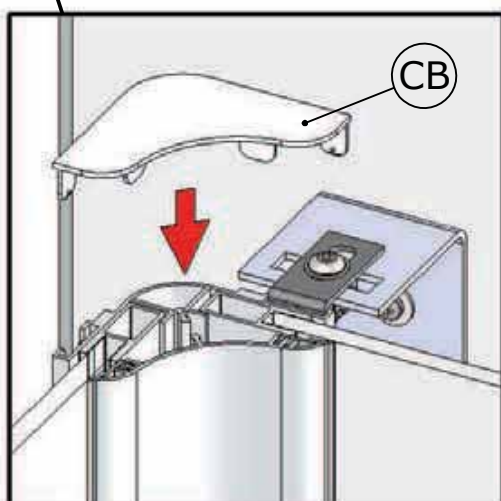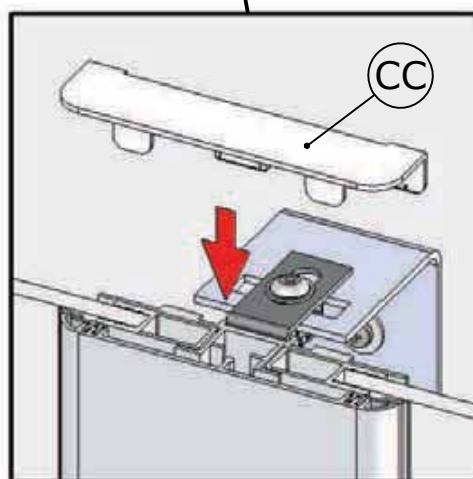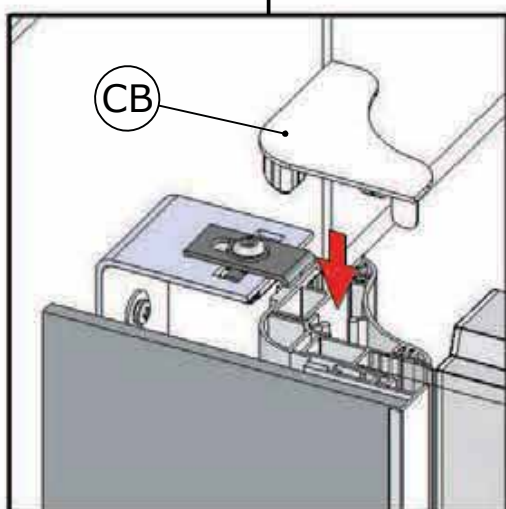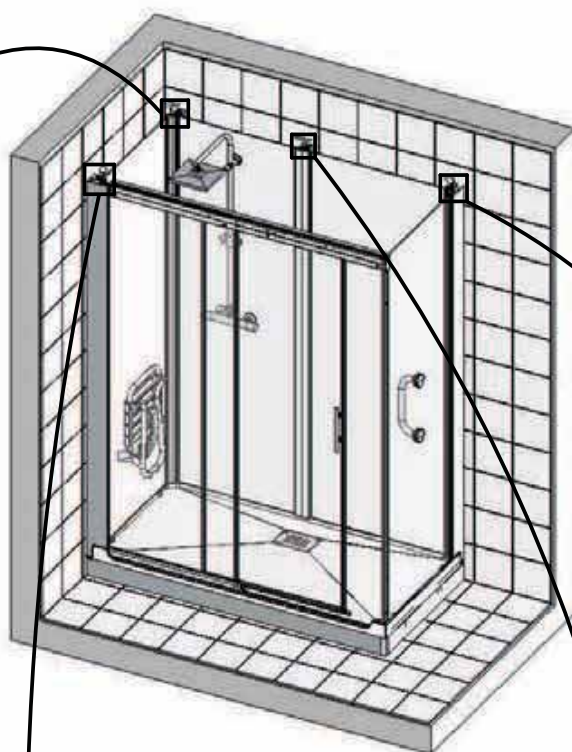


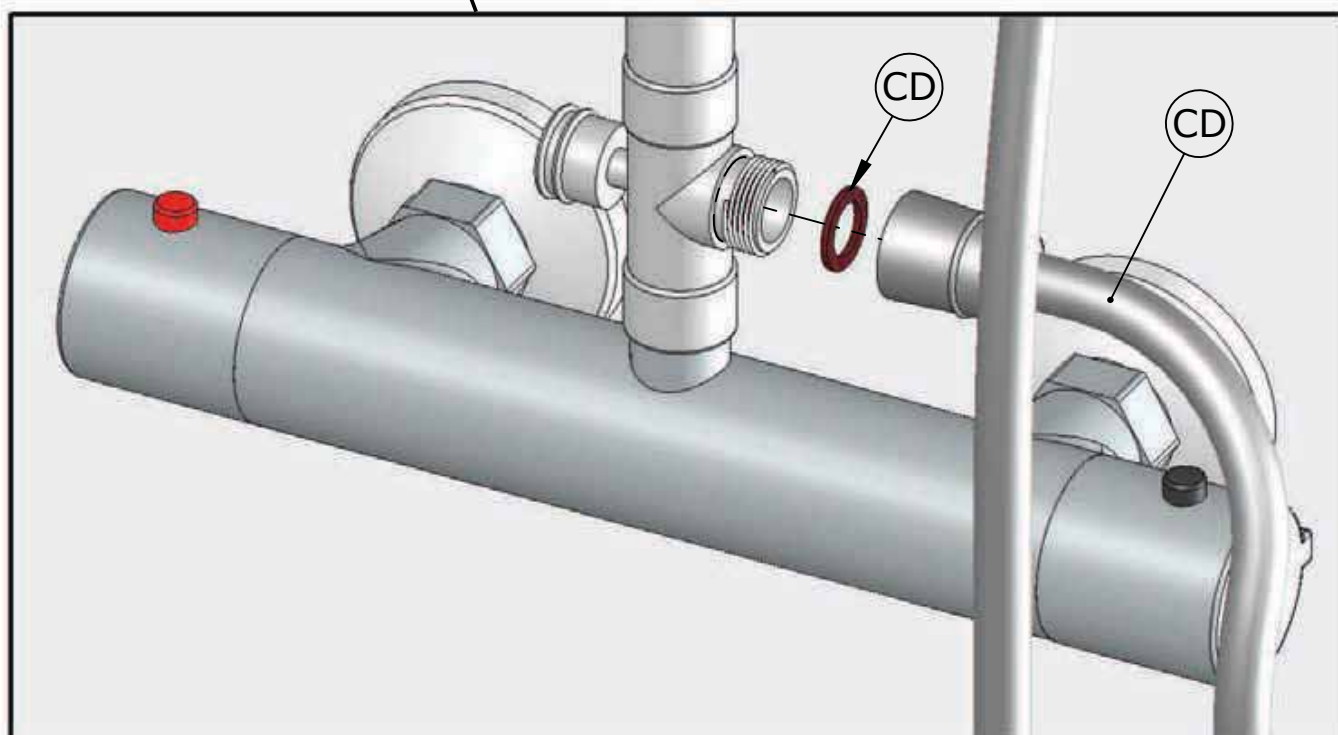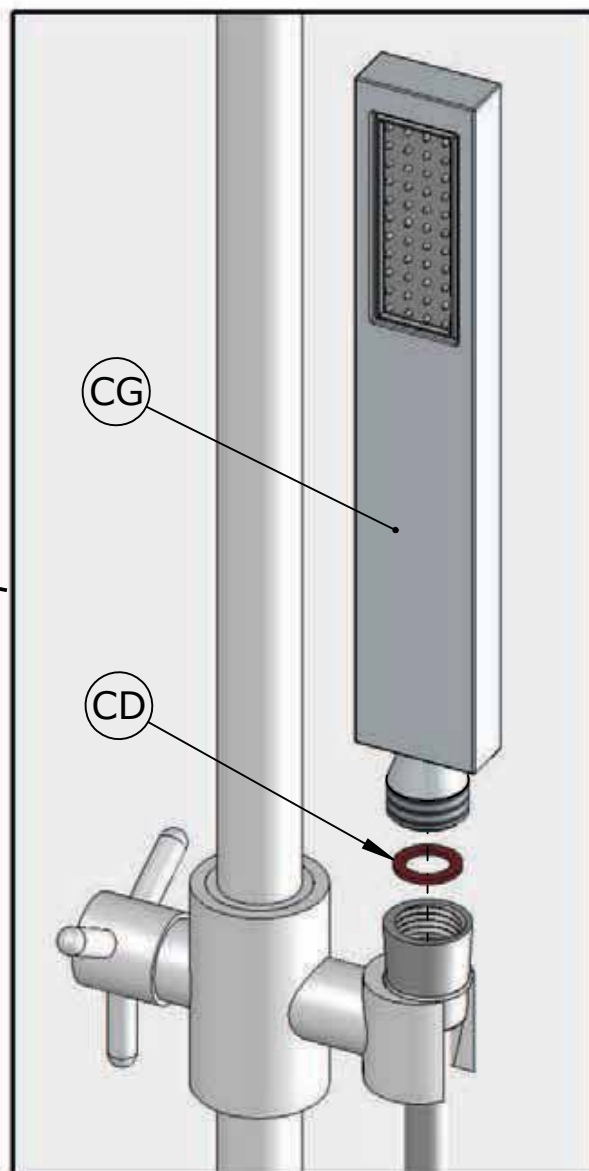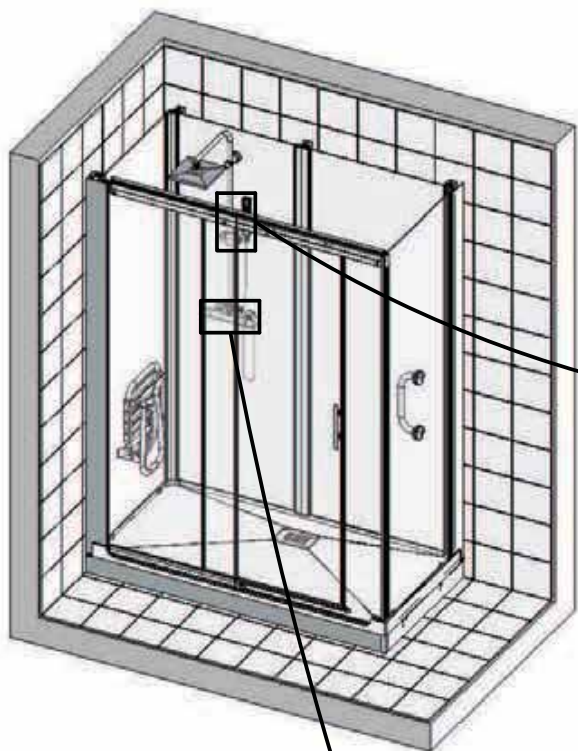

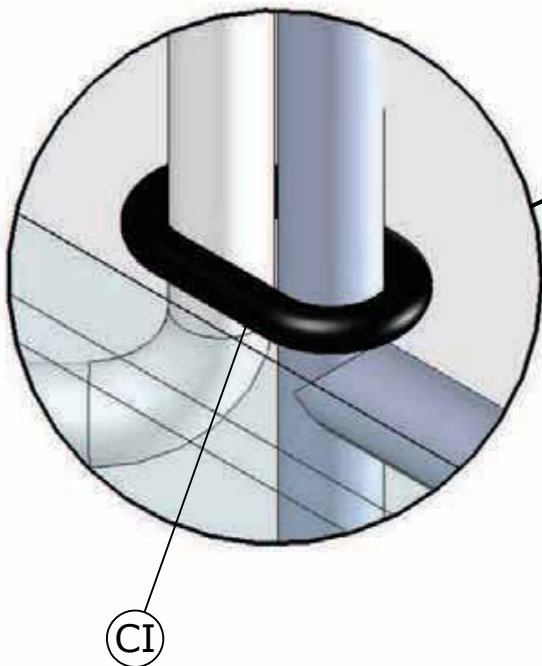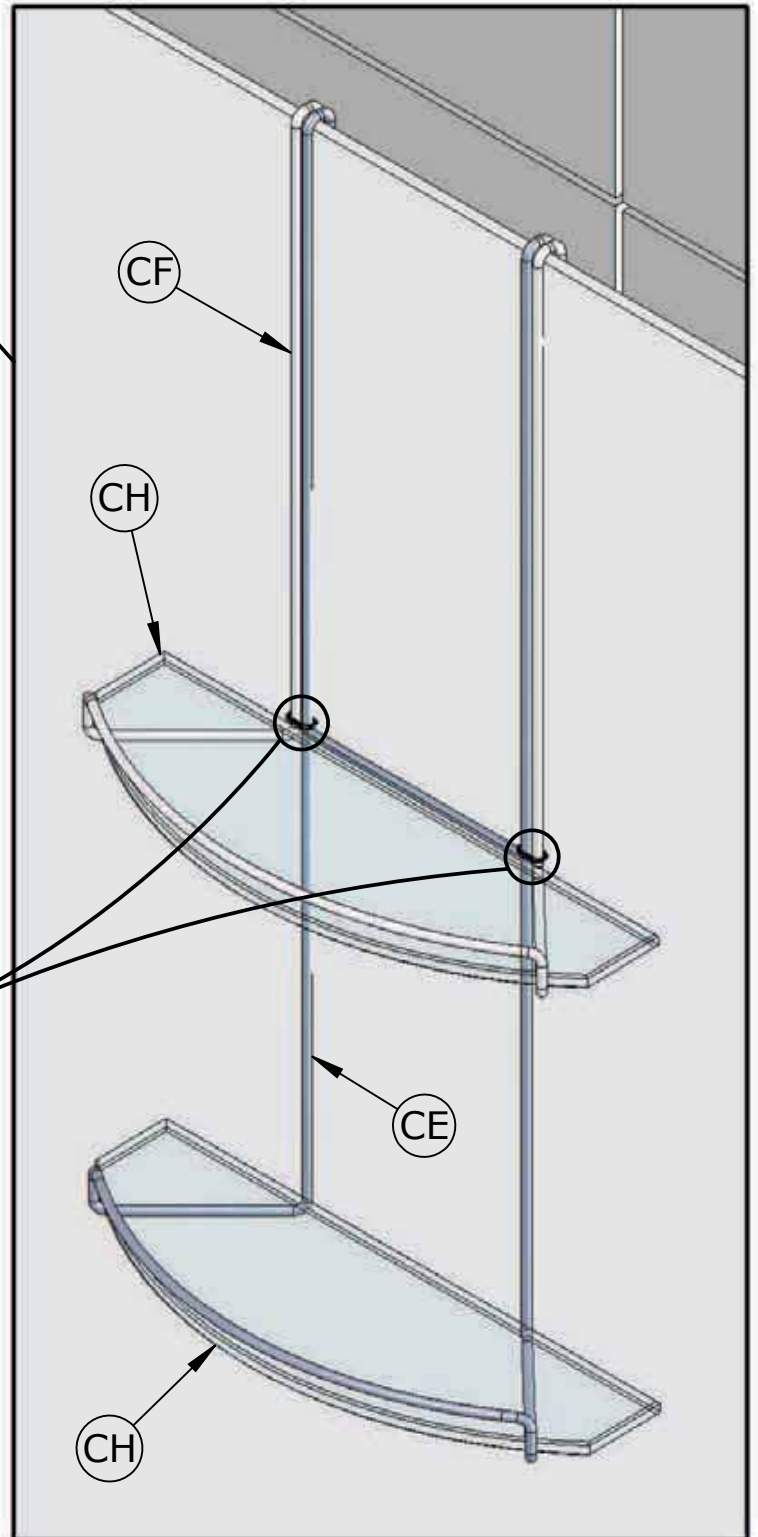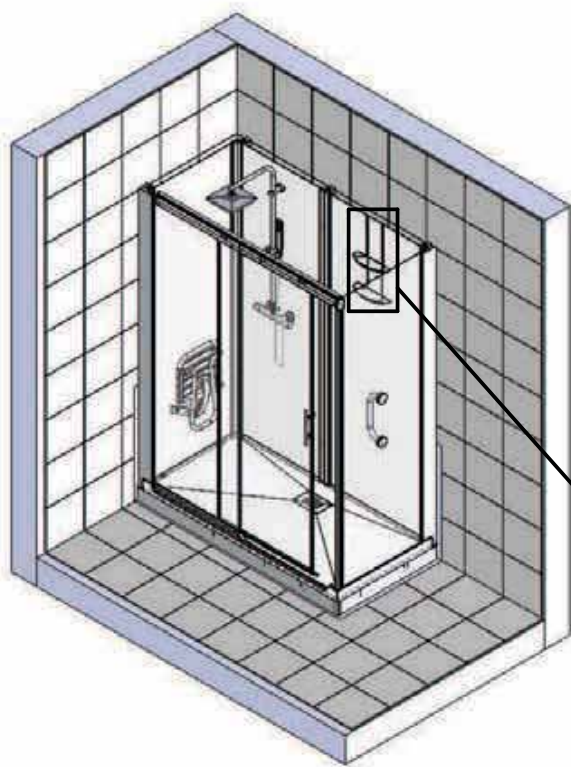

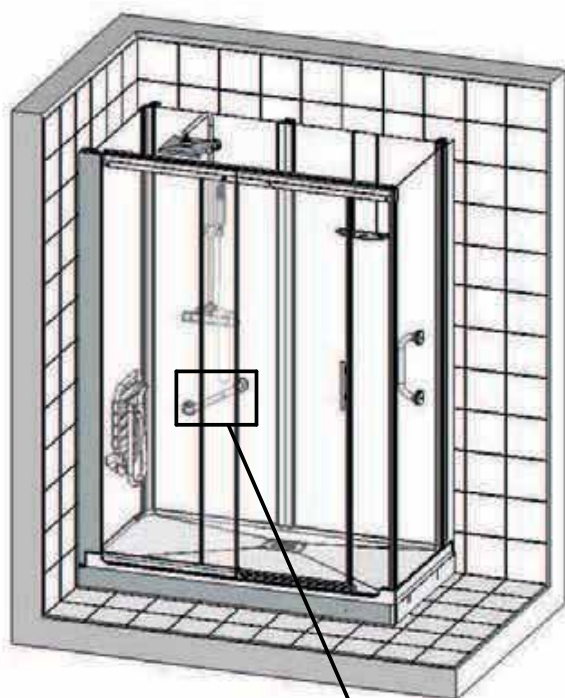


See separate grab bar installation instructions if required.


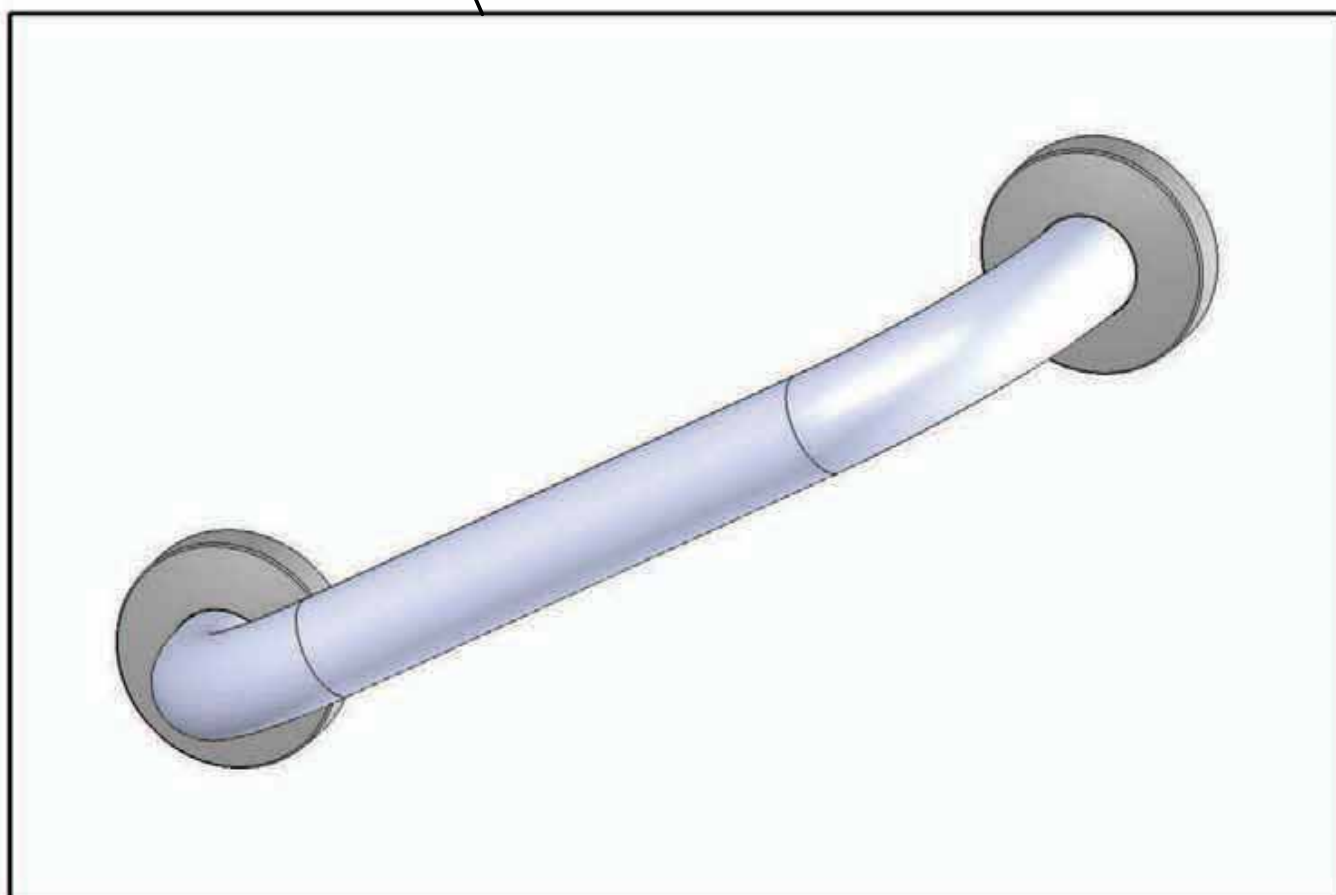


NOTE

How to attach cover strips

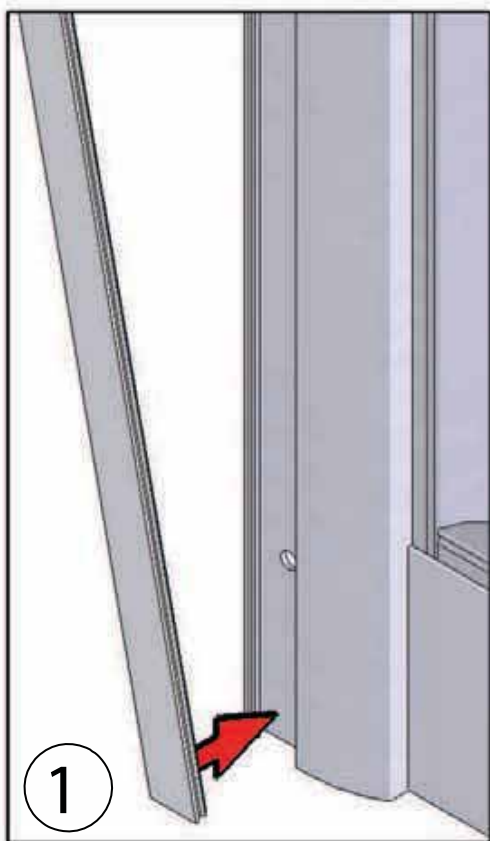

If necessary slightly pinch the ends.

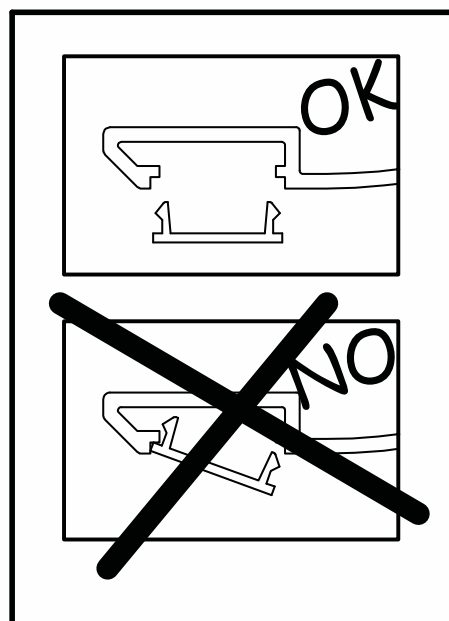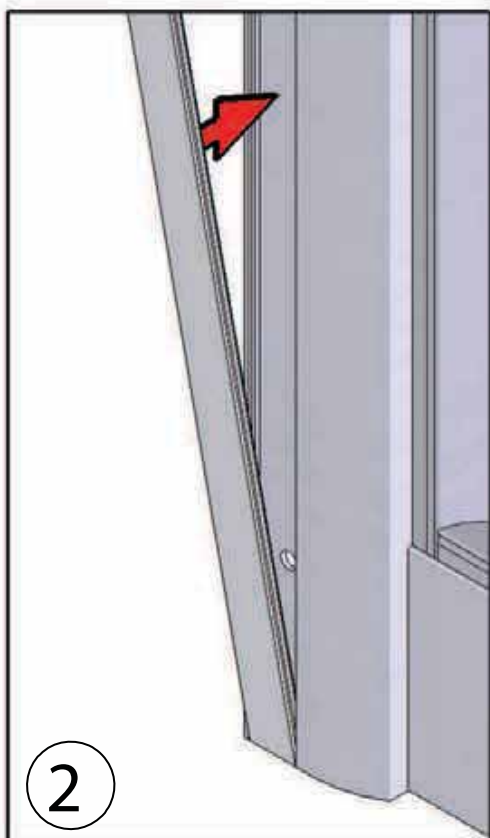



-F-

POUR LA PROTECTION ELECTRIQUE DE VOTRE DOUCHE, IL EST NECESSAIRE DE RELIER LES ORGANES METALLIQUES DE VOTRE PRODUIT AU CIRCUIT EQUIPOTENTIEL DE VOTRE INSTALLATION.

VOUS POUVEZ CONTACTER VOTRE INSTALLATEUR HABITUEL, IL SAURA VOUS CONSEILLER.

-GB-

FOR THE ELECTRONIC PROTECTION OF YOUR SHOWER, THE METAL PARTS OF YOUR PRODUCT SHOULD BE CONNECTED TO THE EQUIPOTENTIAL CIRCUIT OF YOUR INSTALLATION.

CONTACT YOUR USUAL SHOWER FITTER FOR ADVICE.

-NL-

VOOR DE ELEKTRISCHE BESCHERMING VAN UW DOUCHE MOETEN DE METALEN DELEN VAN UW PRODUCT WORDEN AANGESLOTEN OP HET EQUIPOTENTIALE CIRCUIT VAN UW INSTALLATIE.

NEEM HIERVOOR CONTACT OP MET UW NORMALE INSTALLATEUR, HIJ KAN U ADVISEREN.

-I-

PER GARANTIRE LA PROTEZIONE ELETTRICA DELLA DOCCIA OCCORRE COLLEGARE LE PARTI METALLICHE AL CIRCUITO EQUIPOTENZIALE DELL'APPARECCHIO.

CHIEDERE CONSIGLIO ALL'ELETTRICISTA DI FIDUCIA

-ES-

PARA LA PROTECCIÓN ELÉCTRICA DE SU DUCHA, SERÁ NECESARIO CONECTAR LOS ELEMENTOS METÁLICOS DE SU PRODUCTO AL CIRCUITO EQUIPOTENCIAL DE SU INSTALACIÓN.

PÓNGASE EN CONTACTO CON SU INSTALADOR HABITUAL, ÉSTE SABRÁ ACONSEJARLE.



SAV

SERVICE HELPLINES

ASSISTENZA POST- VENDITA

SERVICIO POSTVENTA

FRANCE

N°Azur 0 810 05 1998
prix d'un appel local

UK

020 8842 0033

IRELAND

04697 33102

DEUTSCHLAND

0800 82 27 82 0

ITALIA

(0382) 6181

OSTEREICH

(0222) 21 402 16 0

SCHWEIZ

(01) 748 17 44

ESPANA

93 544 60 76

NEDERLAND

0475 487 100

BELGIE

+31 475 487 100

BELGIQUE

+31 475 487 100

РОССИЯ

963 19 40, 773 67 22