

Fixing & Servicing Instructions

To be retained by the user or householder.

Carolina

Clova

Costa

Florida

Hospita New

Petita New

Supra

Trecorn



Installation

Byelaws: Installing new water fittings (excluding repair and renewal) requires 5 days prior notice of installations to the local water authority.

Fitting - General

Flush out pipes to remove plumbing materials and foreign matter.

Hot supply to be on left, cold on right, as viewed from operating position.

For deck mounted mixers the rubber gasket provided should be fitted between the mixer and the appliance.

For **Non Biflo** mixers major pressure differences between hot and cold water supply should be avoided.

Fitting Biflo sink and basin mixers

All Biflo sink and basin mixers are accepted by the Water Byelaws Scheme (or have approvals pending) for connection to domestic installations where cold water is from the mains and hot water is from a storage tank or both hot and cold supplies are from a common source.


Hot water is normally stored at 50° - 65° but the fittings may be used where the hot water occasionally rises to 80°.

Fitting one hole mixers

- Where applicable the soft copper tail pipes may be spread to facilitate connections.
- Sink and basin Biflo mixers require 12 x 15 mm compression couplings.
- 3.Non Biflo basin and sink mixers require 10 x 15 mm compression couplings.

Fitting single taps

Where anti-rotation washers are provided, fit these between tap and appliance, ensuring the washer is fitted dry.

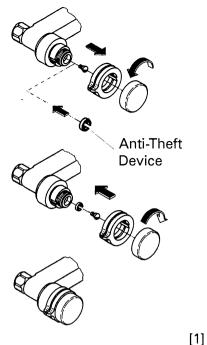

В

Removal of handles.

Carolina, Costa, Clova and Florida handles are removed with a sharp upward pull.

Trecorn handles are removed by first unscrewing the easy-clean shield and removing with the handle.

Supra and Petita handles have an additional antitheft device, which prevents the handles from being pulled off. To remove these handles: first unscrew the cap and then remove the screw behind. Please refer to diagram [1].

(The anti-theft device may be left out, for handles required to pull off.)

For installing Hospita handles see attached description sheet.

Operation of bath - shower mixer diverters

To operate shower


Turn on both mixer taps (full for low pressure systems). Press (or pull) diverter actuator to divert water from bath spout to shower. Obtain required temperature by adjusting one tap only. To divert the water back to bath turn off bath taps and the diverter automatically returns to the bath - fill position.

Spouts with External Circlip Fixing

Push the spout into the mixer body. Grease spout O-rings with a smear of silicone grease if necessary.

Push circlip (A) in from behind, in slot (B) provided in mixer body, see diagram [2].

To remove spout reverse above procedure.

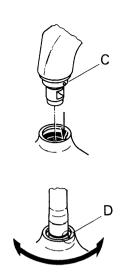

Sink Biflo Spout Fitment

Cast spouts without Circlip Fixing (Bayonet Fixing)


Position the two square sectioned washers in the seatings provided in the body of the sink mixer.

Do not put the washers on the spout itself.

Grease the washers with a smear of silicone grease, if the washers are dry.

Enter the spout into the mixer body, with the ball fixing (C) on the spout aligned with the slot (D) in the mixer body (outlet of spout positioned over the cold tap).

Push down firmly and turn spout to over sink position, see diagram [3].

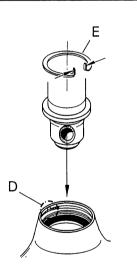

Tubular spouts with Circlip Fixing

Grease the washers with a smear of silicone grease, if the washers are dry.

Press spring (E) together and fit with spout in the body, see diagram [4].

To remove spout reverse above procedure.

Care

Please see accompanying Instructions for Care booklet.

[4]

[3]

our inst	aller:		 	

GROHE Limited

1, River Road Barking, Essex, IG11 OHD Tel.0208-594 7292 Fax.0208-594 8898