

4. Range Limiting or Fixed Set Temperature

The trerrier TRV has the facility for fixing the thermal head at a set temperature or to limit the range of operation. This is achieved by using the two pegs provided with the product.

To obtain a fixed set point, locate a peg in the slot either side of the selected setting and push home.

To set a limited range for temperature control, first locate a peg in the slot to the right of the viewing window for the lowest temperature setting required. Adjust the valve head to display the maximum temperature desired. Locate a peg in the slot to the left side of the viewing window. Push both pegs home. The head will now be adjustable between the selected range of temperature.

5. Frost Protection

If you plan to be away from home for any length of time the TRV can be turned to the frost protection setting "★". If the temperature falls below 7°C the valve will automatically open giving protection against freezing. (Provided that the boiler remains in operation via a frost stat.)

6. Removal of Radiator

The "0" Setting on the TRV is a positive "Off" position. This will enable a radiator to be removed for maintenance purposes.

To avoid accidental operating of the valve or damage whilst decorating the manual shut off cap may be used for added security instead of the TRV head. In this case, remove the TRV sensor head by unscrewing the securing ring and replacing with the manual cap BEFORE removing the radiator.

terrier

TWO WAY THERMOSTATIC RADIATOR VALVE





terrier

TWO WAY THERMOSTATIC RADIATOR VALVE

TECHNICAL DATA

Temperature range	7°C - 28°C
Maximum Test Pressure	20bar
Maximum Static Pressure	10bar at 120°C
Maximum Differential Pressure	0.6bar
Maximum Water Flow Temperature	120°C

Installation and User Guide

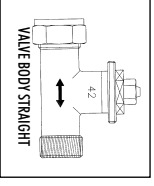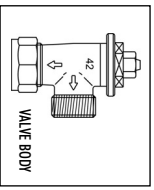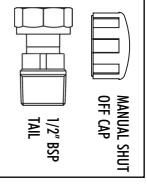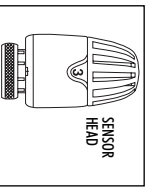

PL
Pegler Limited

Pegler Limited, St. Catherine's Avenue, Doncaster DN4 8DF
Telephone: 01302 560560 Fax: 01302 367661

INSTALLATION

Directions for use:

Angle TRV

The universal terrier TRV is designed to operate with water flow in either direction. The 15mm size may be fitted in either the horizontal OR vertical position. The most effective position is to have the head in a horizontal position where the greatest efficiency will be obtained.

Straight TRV


Straight bodied valves should not be used in the top connection of a radiator as heat from the radiator will affect the sensor.

Correct installations

Correct installation and maximum performance will be achieved if:

The thermostat head is not concealed behind furniture, curtains or drops, hidden under shelves, paneling or in a recess where air pockets can occur.

The thermostat head is not exposed to direct sunlight or draughts.

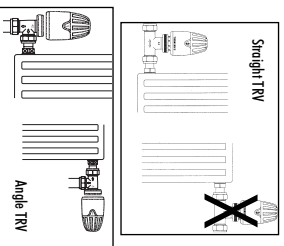

Fitting

1. Thoroughly clean any pipe work to be connected to the valve.
2. Drain down existing system, connecting a hosepipe to the lowest drain off point available.
3. Screw 1/2" BSP nail into radiator tapping, using suitable jointing material e.g. PTFE tape.
4. Connect valve body to nail and tighten nut.
5. Cut and fit copper tube to valve body - tightening nut and cone.
6. Remove manual shut off cap and store safely.
7. Turn Sensor head to indicate "5" in setting window.
8. Position sensor head so that setting window can be viewed and hand tighten securing ring to valve body.
9. Set sensor head to required temperature setting.
10. When fitting a lock shield valve, this must be set to control the water flow through the radiator to the correct level.

PLEASE NOTE:

To avoid the problem of hydronic (water flow) noise it is recommended that the differential pressure does not exceed 0.2 bar. It is strongly recommended that a differential pressure valve should be fitted to any system with TRV's (Fegler order code for differential pressure valve 6/8021/22mm) will be suitable for most domestic installations. Larger sizes are available if required.

USER INSTRUCTIONS

1. Operating Description

The influence of uncontrolled heat gains from cooking, lighting and sunshine etc, can lead to wasteful overheating. The terrier TRV is designed to react to temperature fluctuations and allow you to control individual room temperature.

The sensor head contains a powerful wax-filled sensor which senses temperature changes. These variations cause expansion and contraction of the thermal element which is transmitted to a valve seat which regulates the water flow to the radiator

2. Setting the TRV

Initially set the TRV to the required room temperature from the table below e.g. Position 3/ 20°C. The TRV should be left for at least 1 hour to allow the temperature to stabilise. If a higher or lower room temperature is required simply adjust the setting accordingly and repeat the process.

3. Temperature Settings

The TRV settings are factory calibrated as indicated in the table below.

0	★	1	2	3	4	5
Shut Off	7°C	11-13°C	15-17°C	19-21°C	23-25°C	27-29°C

Note: These temperatures may vary slightly, depending upon the nature of the installation